 
 
 
 
 


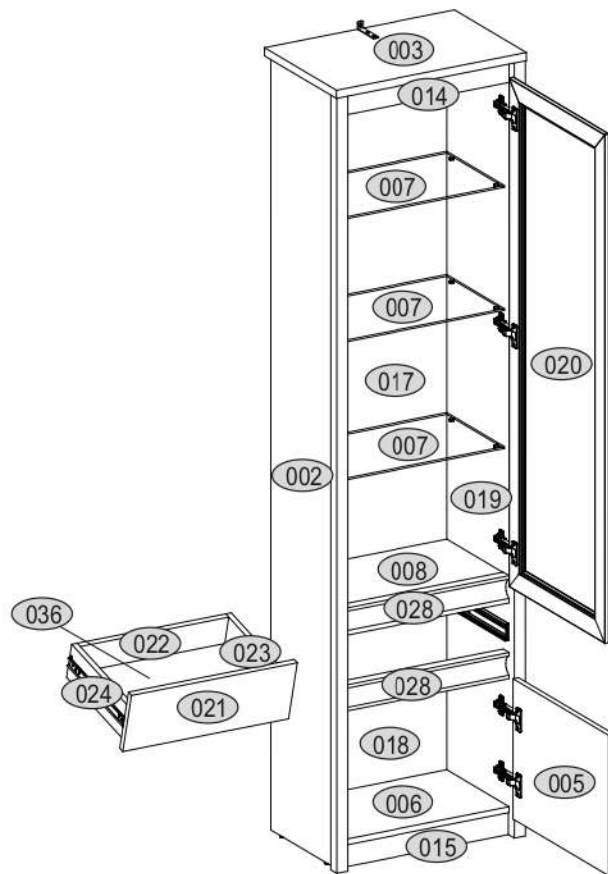

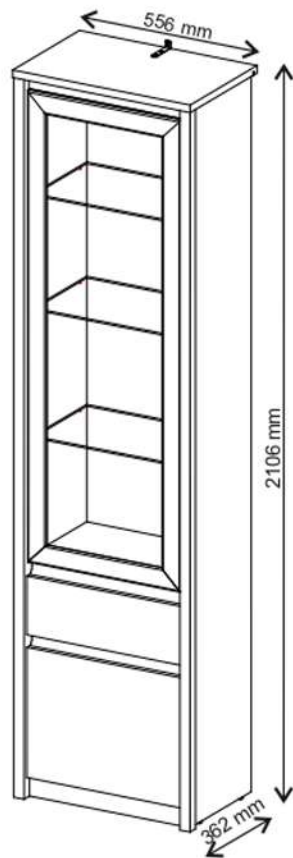

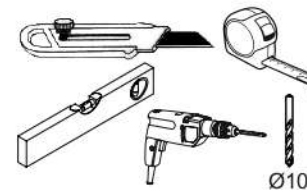

 


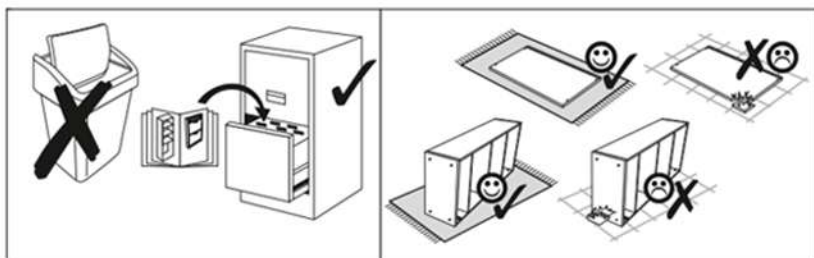








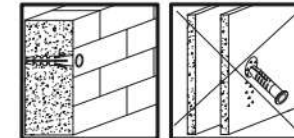 
ERODIN 1D1W1S






| KÓD | ROZMER | | | BALÍK | | |
|----------------------|--------|--------|--------|-------|----------|-----|
| | ROZMER | ROZMER | ROZMER | POČET | FRAGMENT | |
| 002 | 2078 | 360 | 16/32 | 1 | 1/3 | |
| 003 | 556 | 362 | 22 | 1 | 1/3 | |
| 005 | 376 | 482 | 16 | 1 | 1/3 | |
| 006 | 488 | 334 | 16 | 1 | 1/3 | |
| 007 | 488 | 290 | 5 | 3 | 3/3 | |
| 008 | 488 | 284 | 16 | 1 | 1/3 | |
| 014 | 488 | 60 | 16 | 1 | 1/3 | |
| 015 | 488 | 60 | 16 | 1 | 1/3 | |
| 017 | 1401 | 507 | 3 | 1 | 1/3 | |
| 018 | 619 | 507 | 3 | 1 | 1/3 | |
| 019 | 2078 | 360 | 16/32 | 1 | 1/3 | |
| 020 | 1364 | 482 | 16 | 1 | 2/3 | |
| 021 | 482 | 170 | 16 | 1 | 1/3 | |
| 022 | 432 | 100 | 16 | 1 | 1/3 | |
| 023 | 300 | 100 | 16 | 1 | 1/3 | |
| 024 | 300 | 100 | 16 | 1 | 1/3 | |
| 028 | 488 | 70 | 30 | 2 | 1/3 | |
| 036 | 450 | 302 | 3 | 1 | 1/3 | |
| PRÍSLUŠENSTVO | | | | | 1 | 1/3 |







| | | | |
|----------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| x2 e1 Ø 7x50mm  | x14 r1 Ø 15x12mm  | x14 r16  | x6 s2  |
| x32 f1 Ø 8x30mm  | x5 a143  | x5 b119  | x10 s4  |
| x6 l2  | x1 n260  | x31 p25 Ø 3,5x16mm  | x12 d3 Ø 5x17 mm  |
| x1 f3 Ø 10x50 mm  | x1 n14  | x1 p17 Ø 6x60 mm  | x4 k1  |
| x1 L300  | x1 z1  | | |






 
 
 
POZOR! Nábytok musí byť trvalo pripevnený k stene tak, aby sa zamedzilo riziku prevrátania. Balík neobsahuje upevňovacie skrutky, pretože typ upevnenia je treba vybrať podľa typu steny. Vyberte typ vhodný pre Vašu stenu.

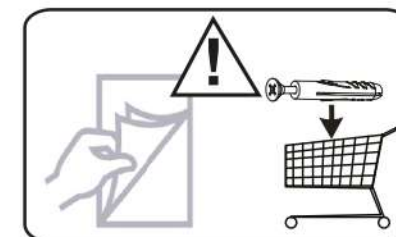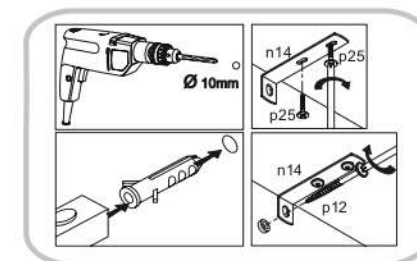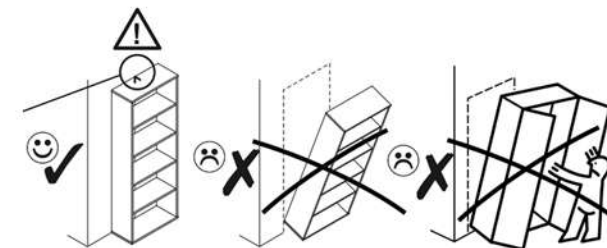



1

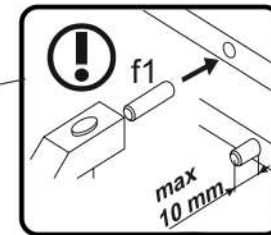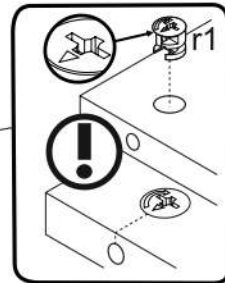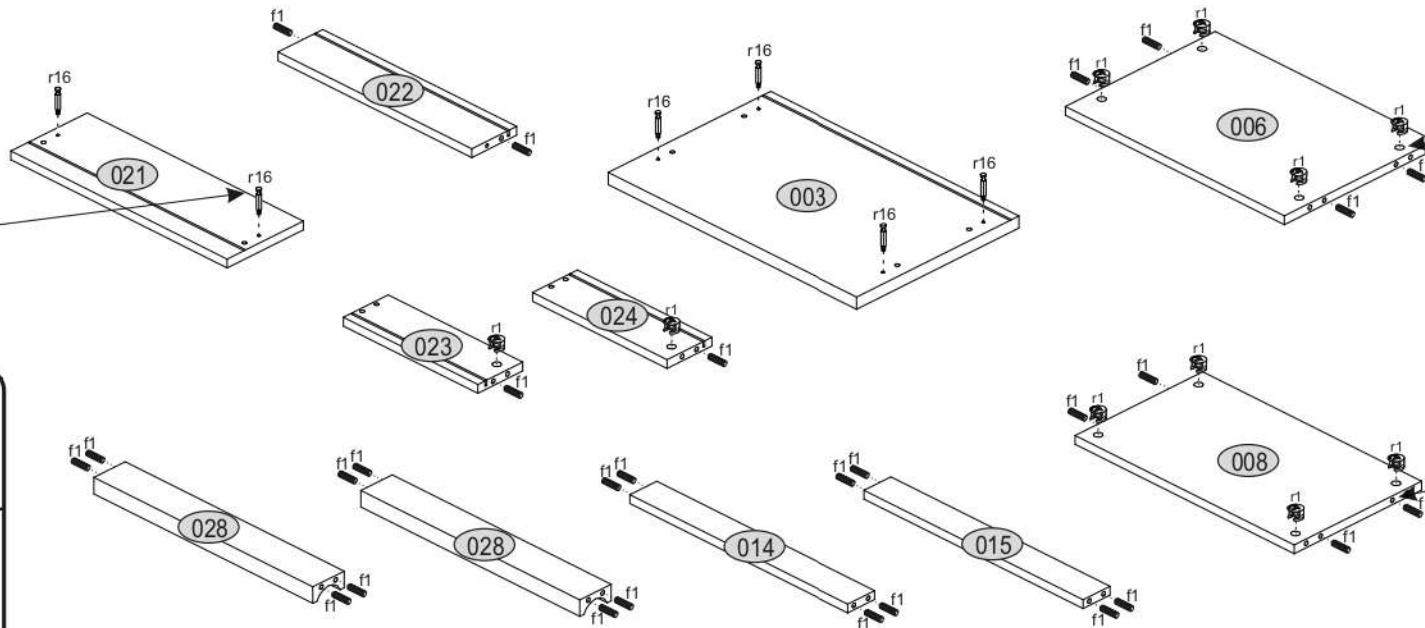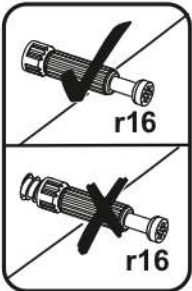    


2

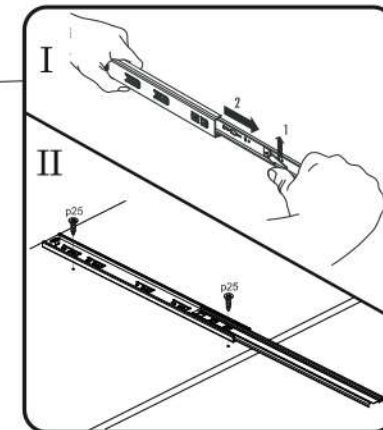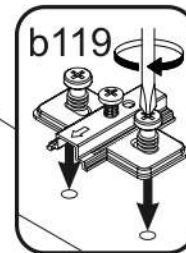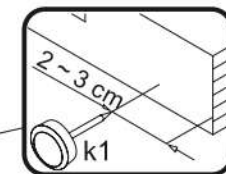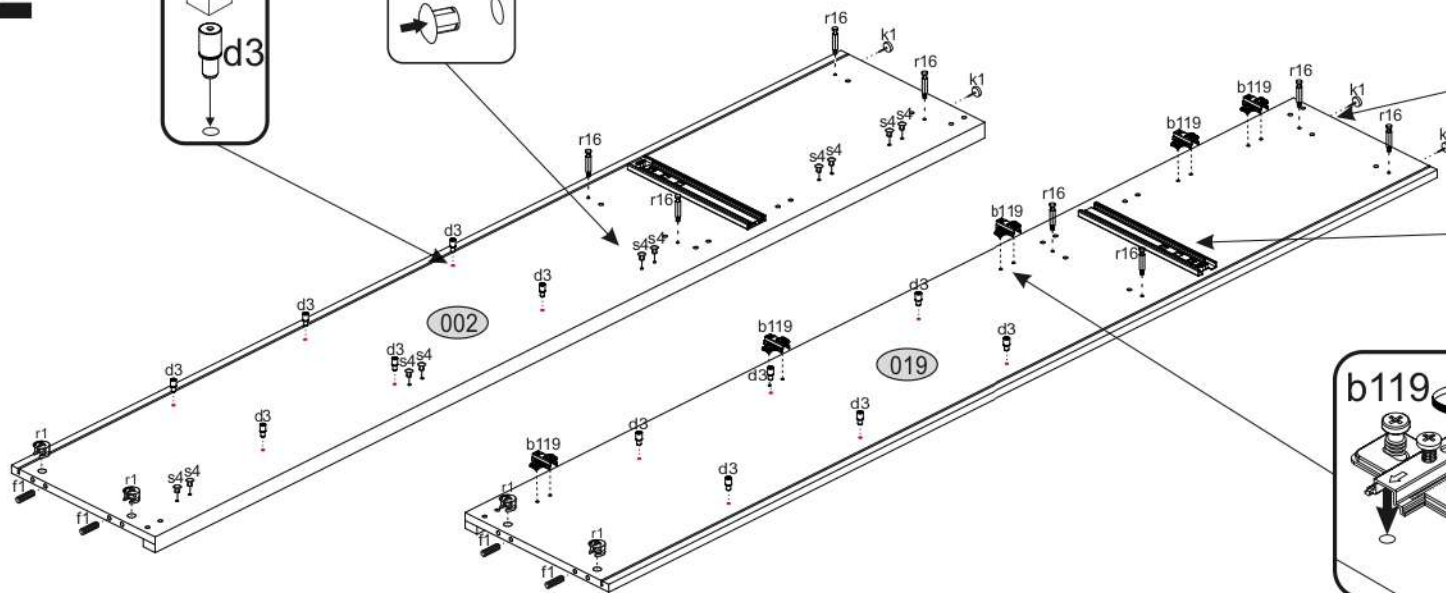      


3

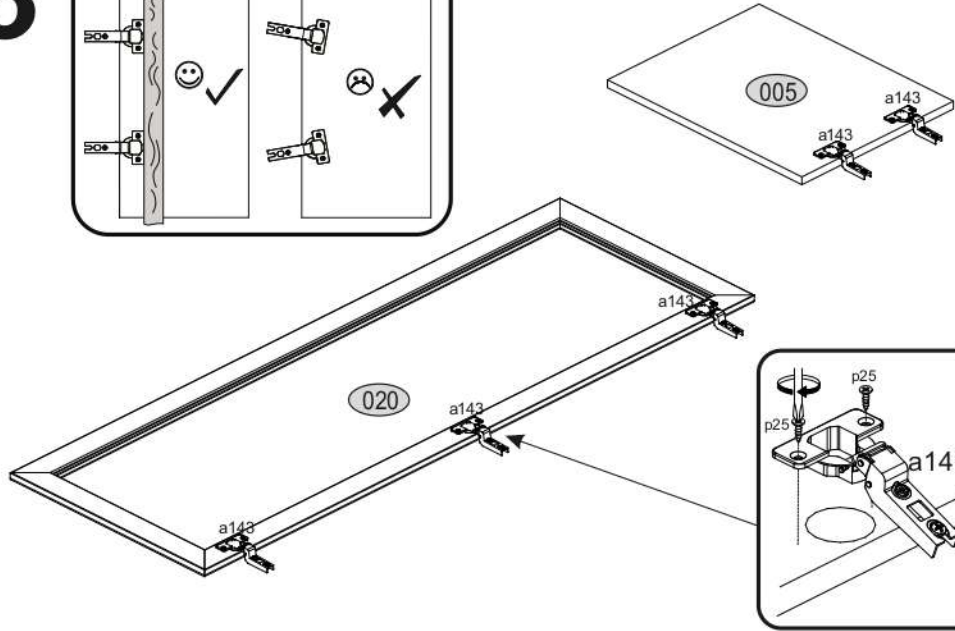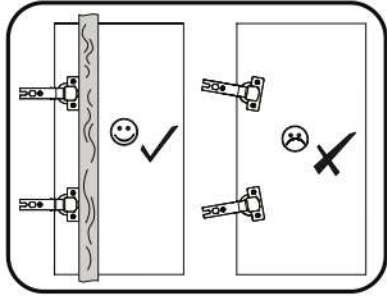  


4

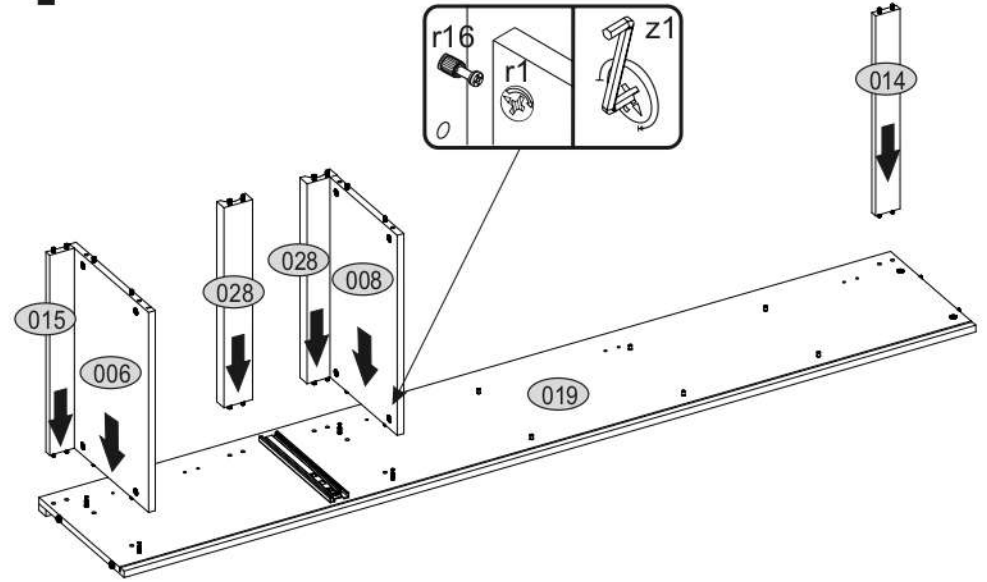 


5

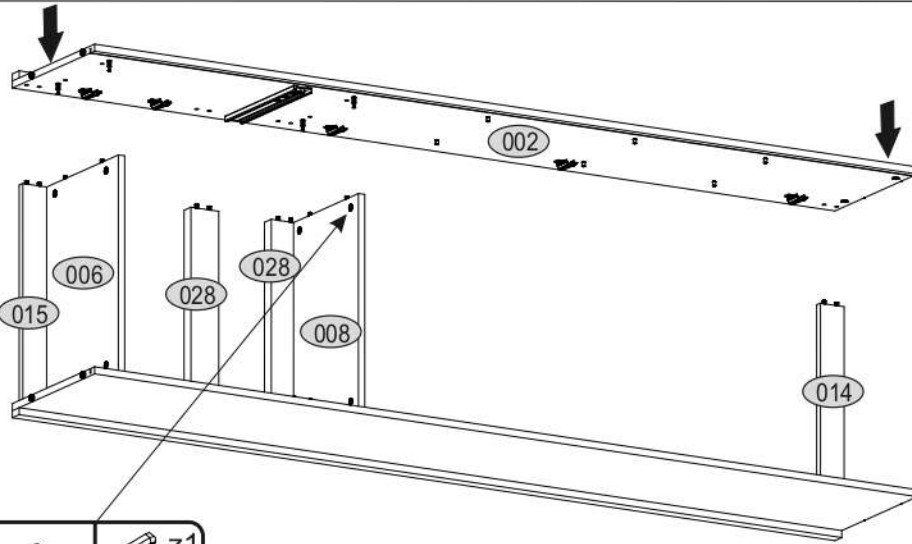 


6

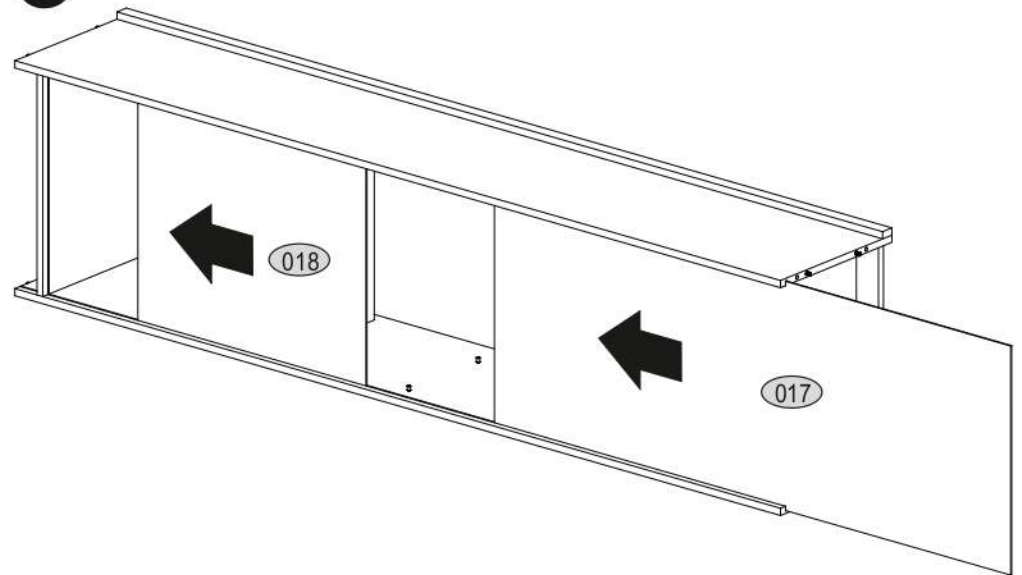 


7

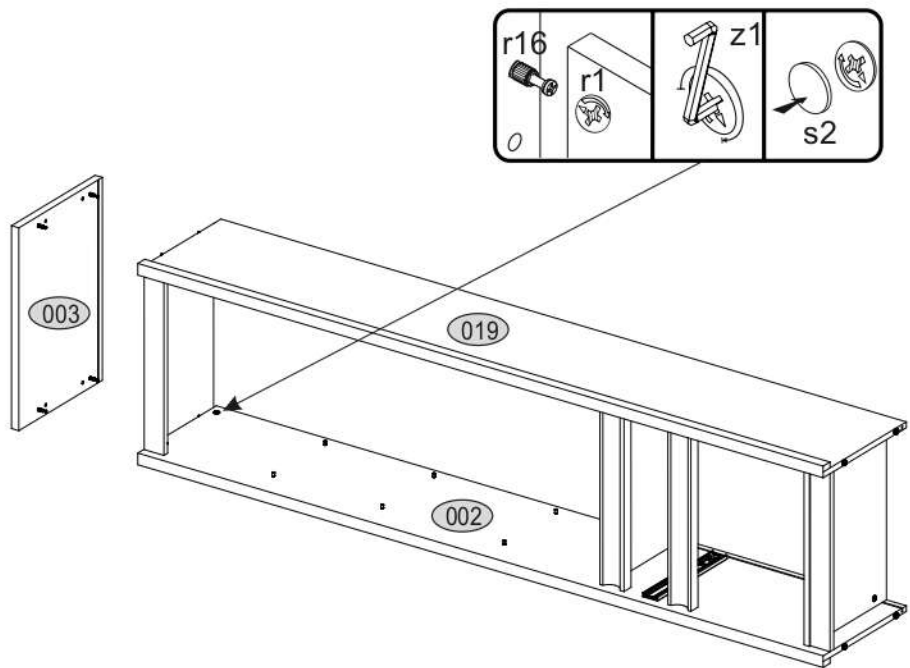 


8

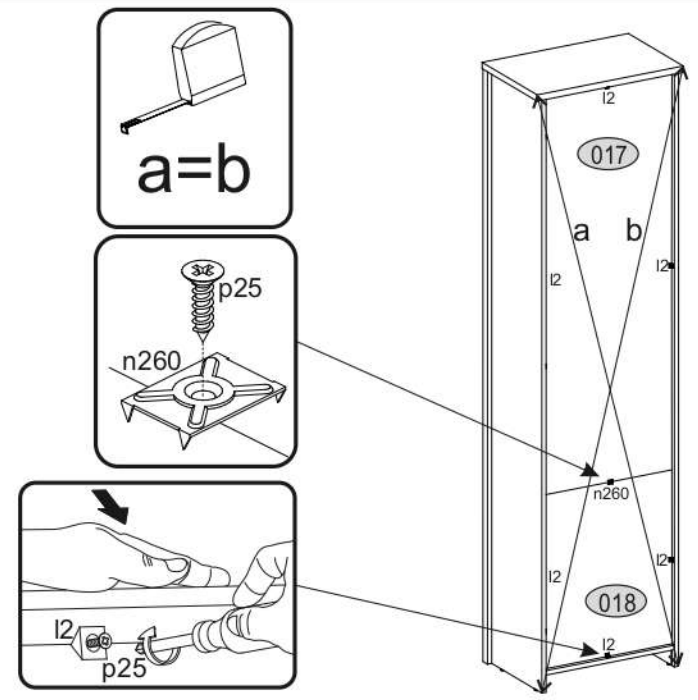 


9

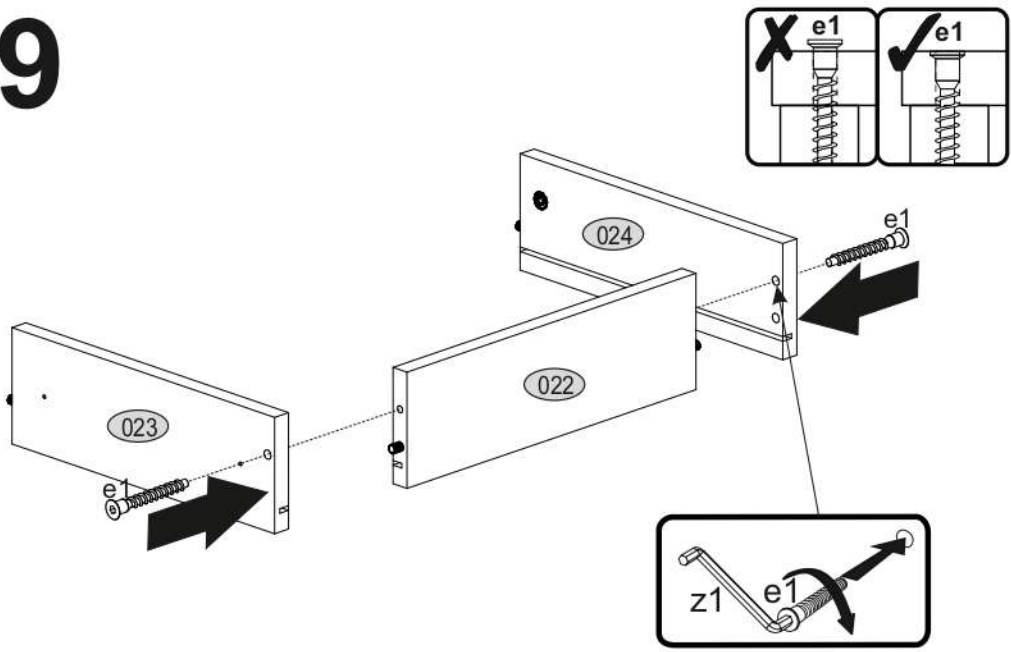 

10

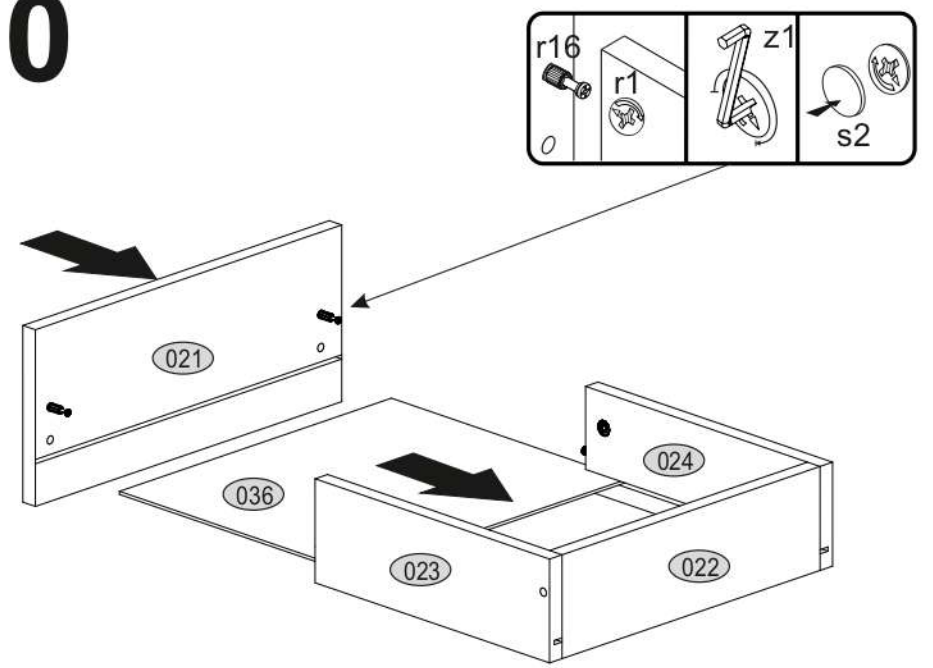 

10

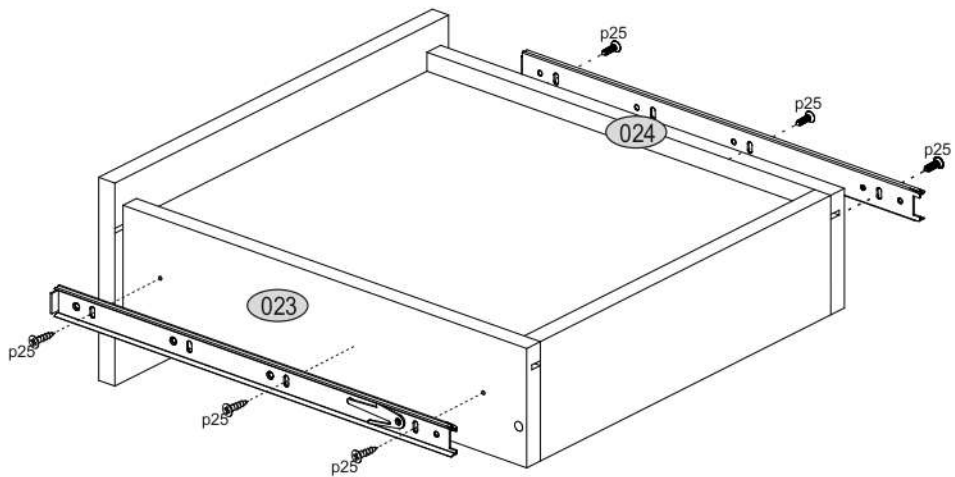 

11

