 
 
 
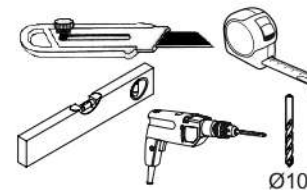 
 



ERODIN 4D1S

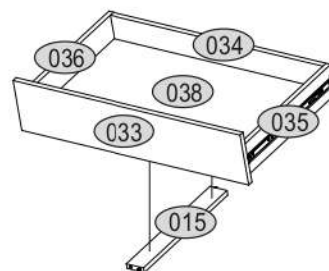

 
 


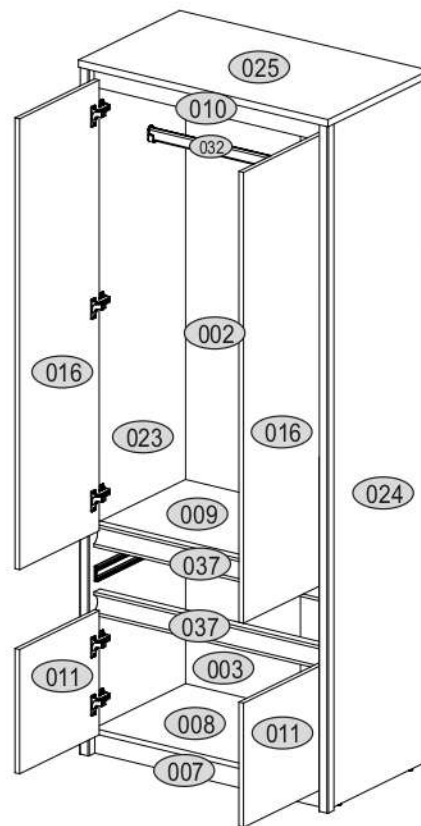

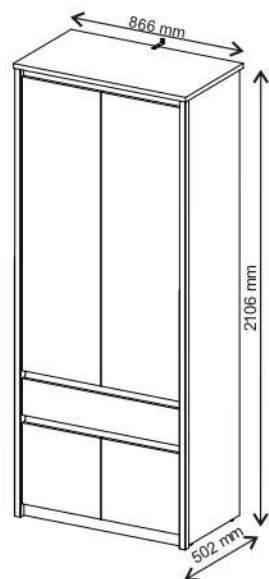

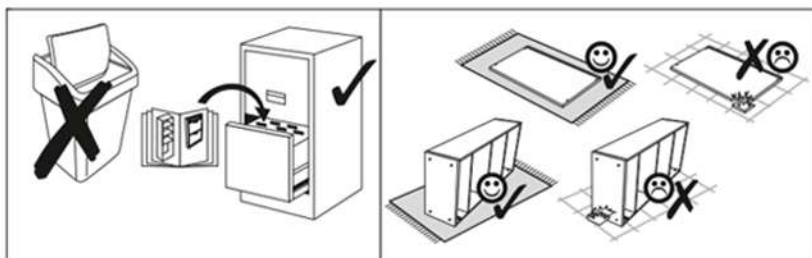
Ø10






COD	DIMENSIUNE				PACHET
	1	2	3	4	
002	1401	408	3	2	3/3
003	619	408	3	2	3/3
007	798	60	16	1	1/3
008	798	474	16	1	1/3
009	798	474	16	1	1/3
010	798	60	16	1	1/3
011	376	395	16	2	2/3
015	60	434	16	1	1/3
016	1364	395	16	1	2/3
016	1364	395	16	1	2/3
023	2078	500	16/32	1	3/3
024	2078	500	16/32	1	3/3
025	866	502	22	1	1/3
033	792	170	16	1	1/3
034	742	100	16	1	1/3
035	450	100	16	1	1/3
036	450	100	16	1	1/3
037	798	70	30	2	1/3
038	760	452	3	1	1/3
032	793			1	1/3
ACCESORII				1	1/3













x3 e1 Ø 7x50mm 	x19 r1 Ø 15x12mm 	x19 r16 	x10 s2 
x30 f1 Ø 8x30mm 	x10 a143 	x10 b119 	x50 p25 Ø 3,5x16mm 
x2 n301 	x10 l2 	x2 n260 	x5 k1 
x1 f3 Ø 10x50 mm 	x1 n14 	x1 p17 Ø 6x60 mm 	x1 z1 
x1 L450 			

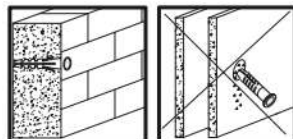 






 
 
 
AVERTIZARE! Mobilierul trebuie fixat permanent de perete pentru a evita riscul de răsturnare. Pachetul nu include suruburi de fixare, deoarece tipul de fixare trebuie ales in functie de tipul de perete. Alege tipul potrivit pentru peretele tău.

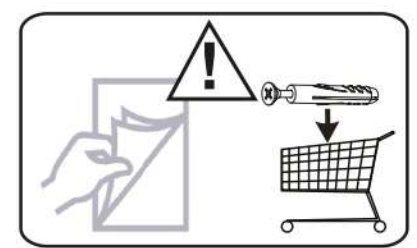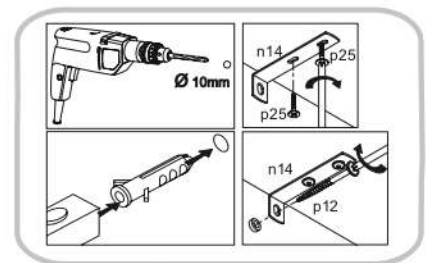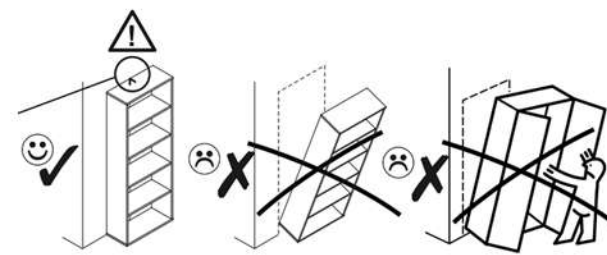





1

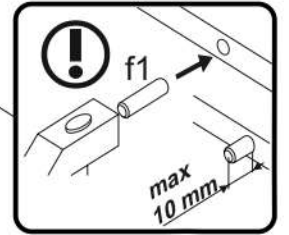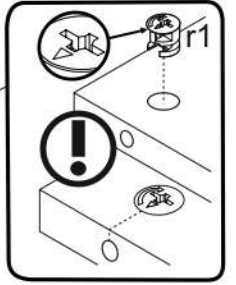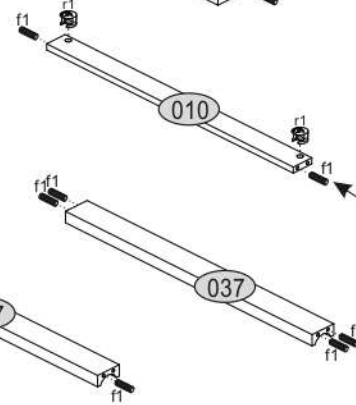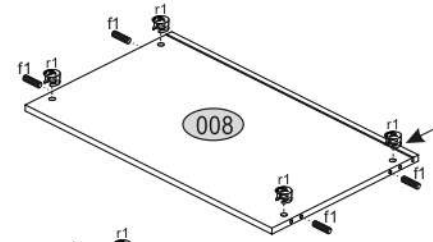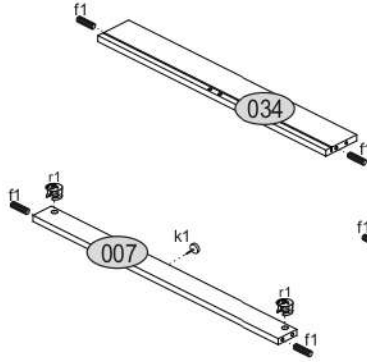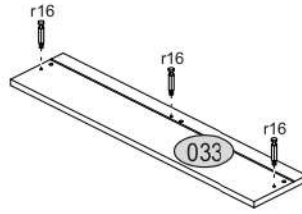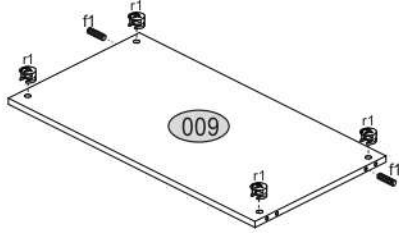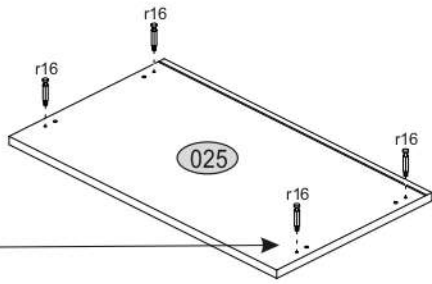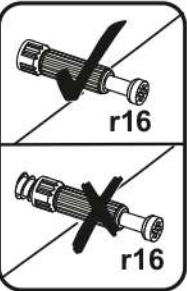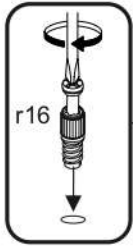          



2

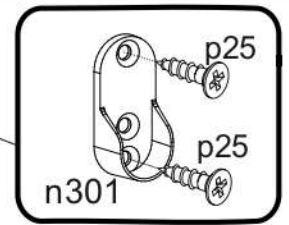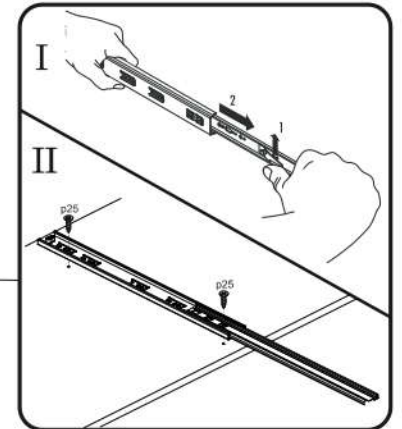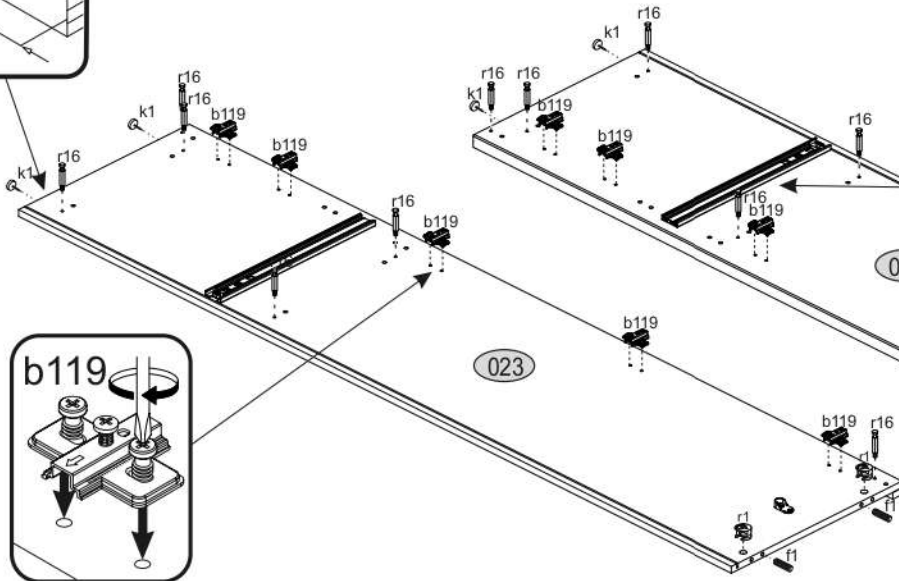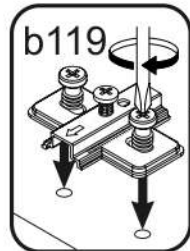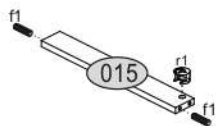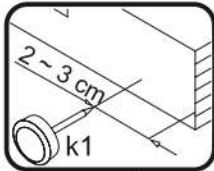        




3

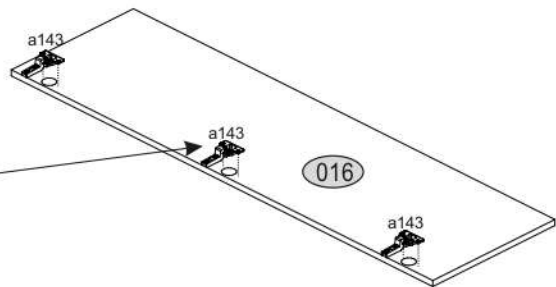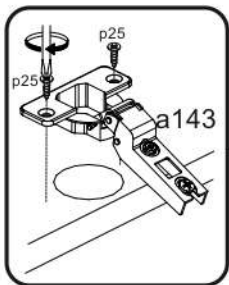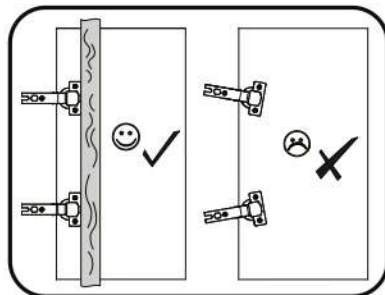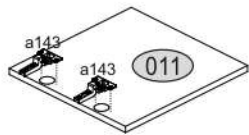    


4

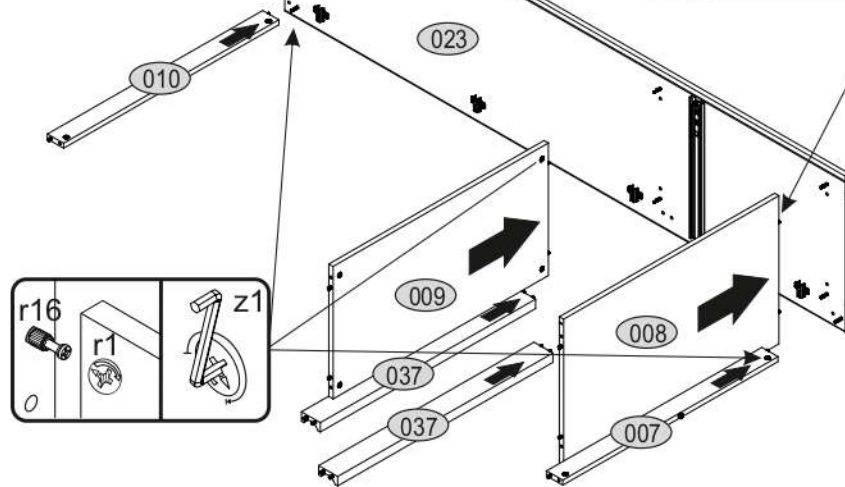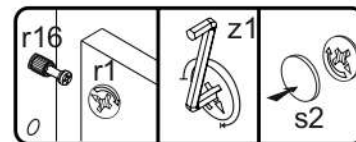  



5

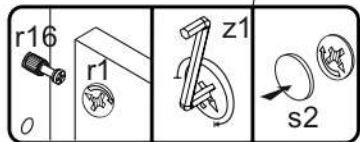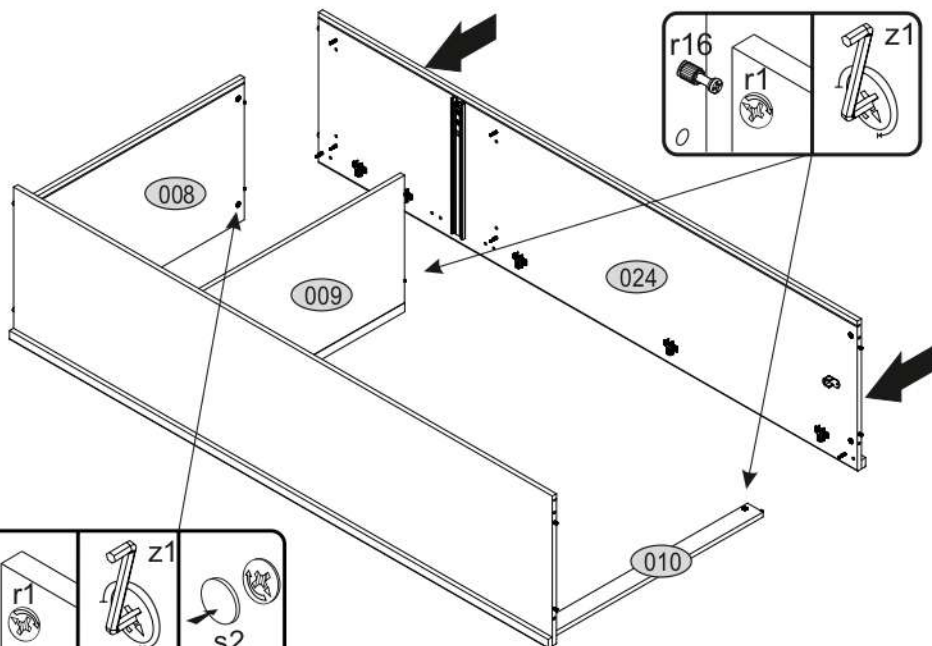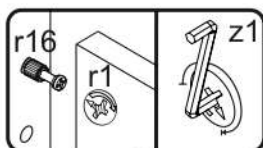   

6

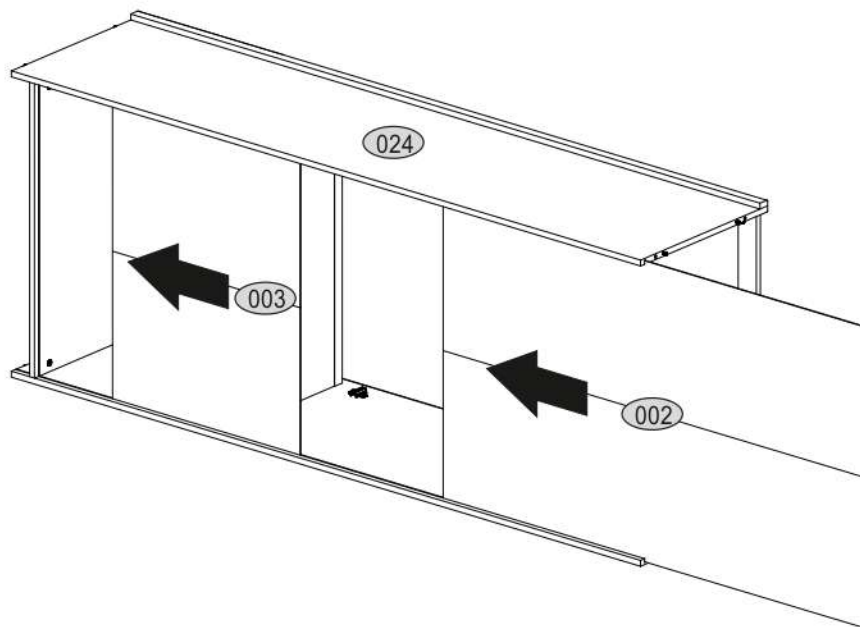 

11

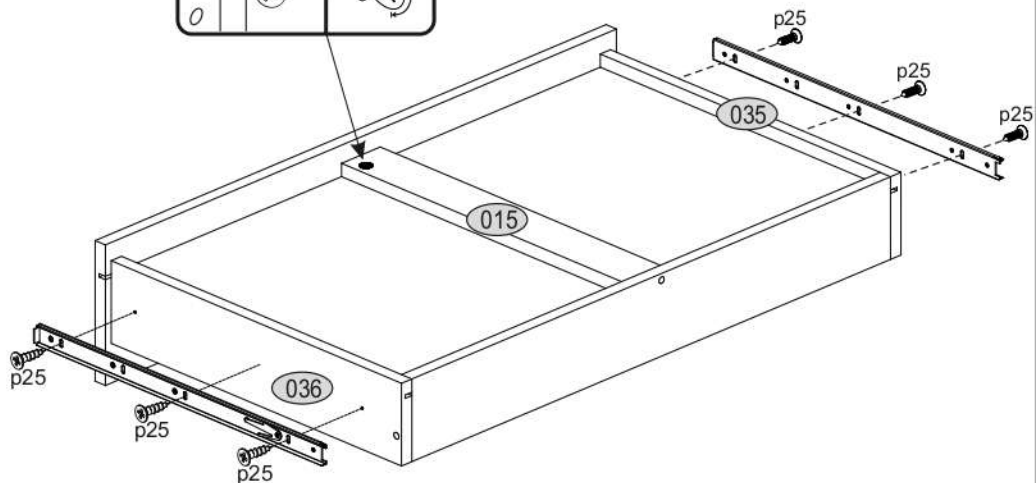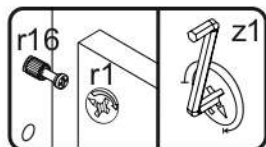  

12

