 


CIPŐSSZEKRÉN

 
FP-03

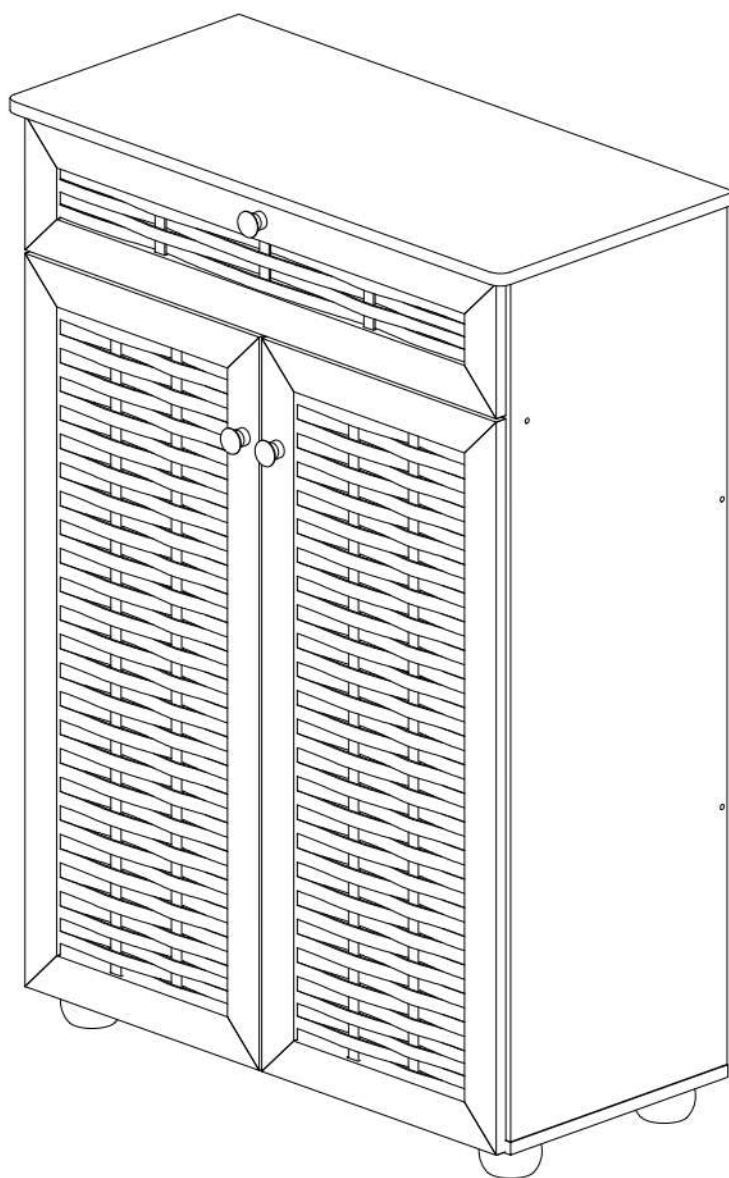


FP-03




A

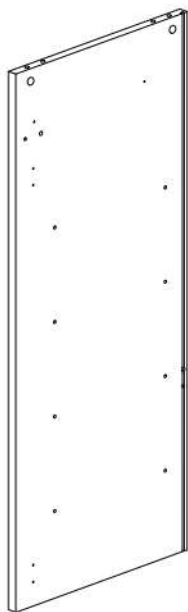


B

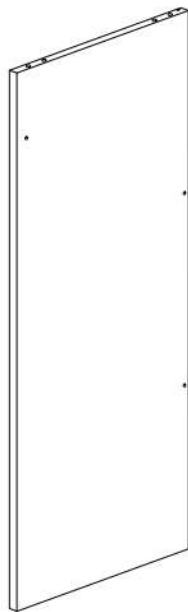 

C

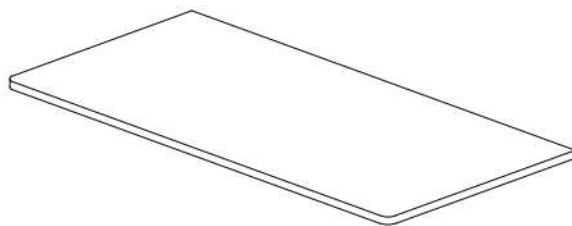 

D

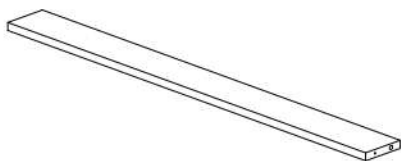 


E



x2

 F

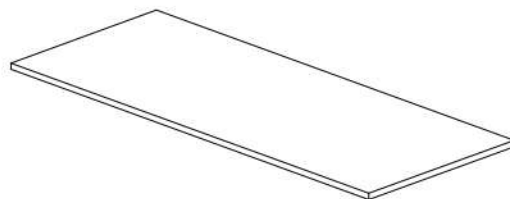


x3


G



 
H

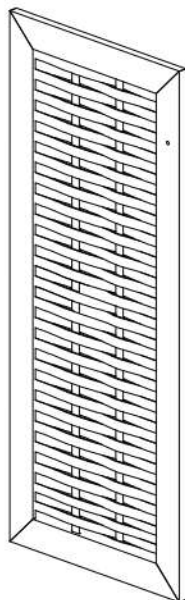


I

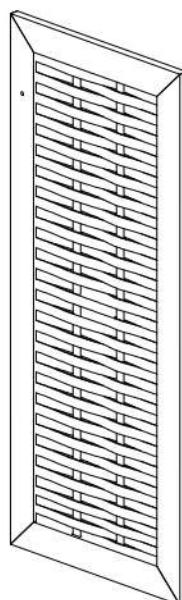 


J

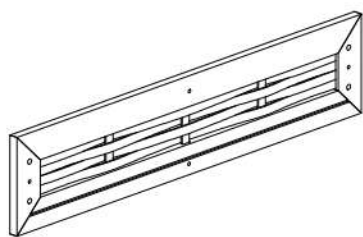 


K

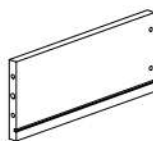 


L

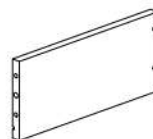 


M

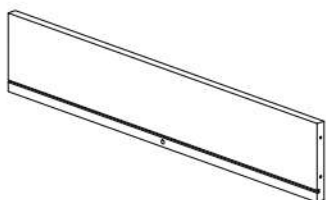 


N

 

O

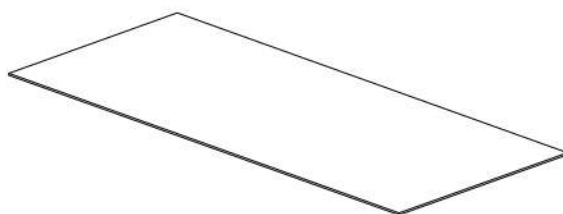 

P

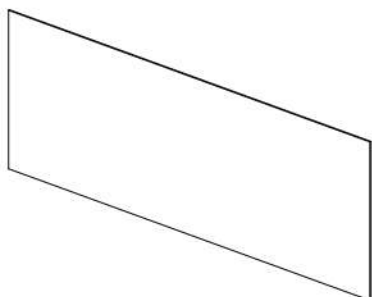 

x3

1



x18

2



 
x7

3




x4

4



x16

 5



x4

6



 
x15

7




x4

8




x16

 9

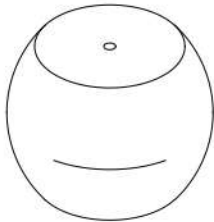

x4

 10

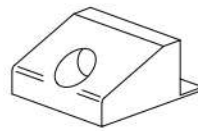


x10

11




x10

 12

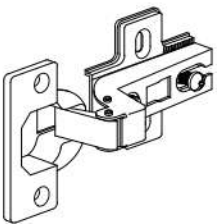


x4

 13

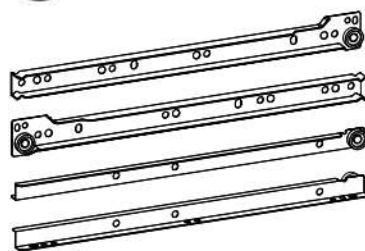


x1

 14

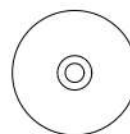

x6

 15

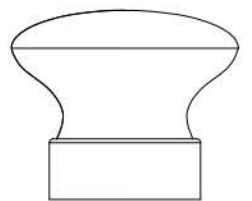

x3

3

