 


CIPŐSSZEKRÉN

 
FP-02

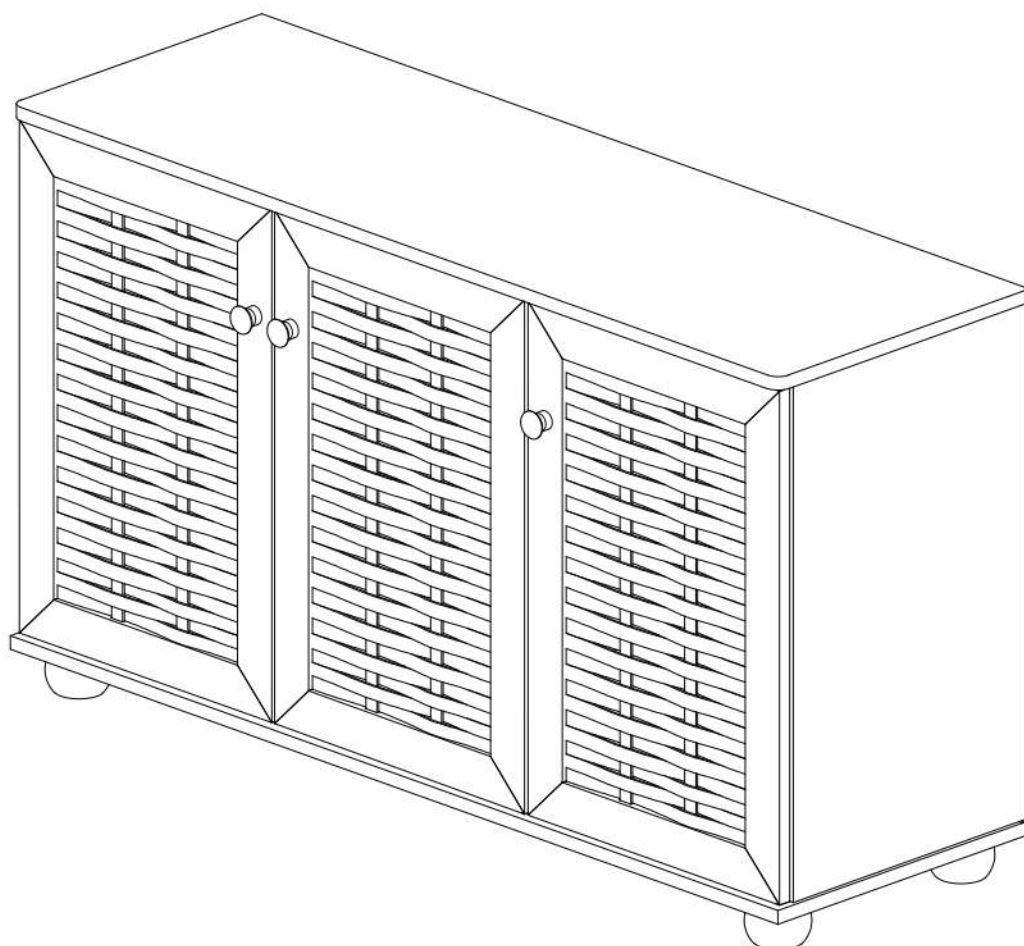


FP-02




A

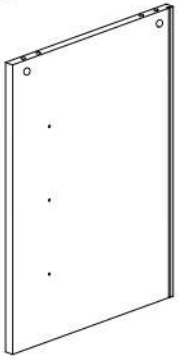

B

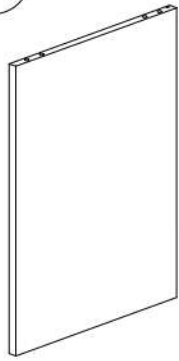 

C

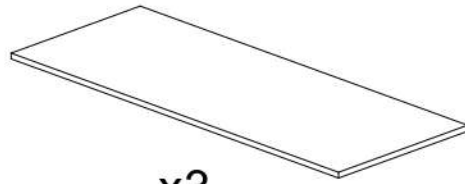 


x3


D



 E

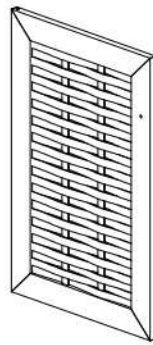


F

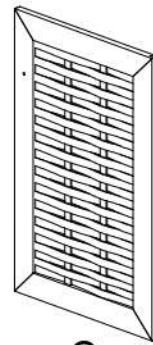 


x2

 
G

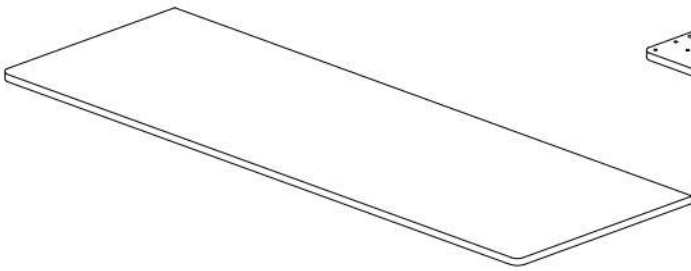


H

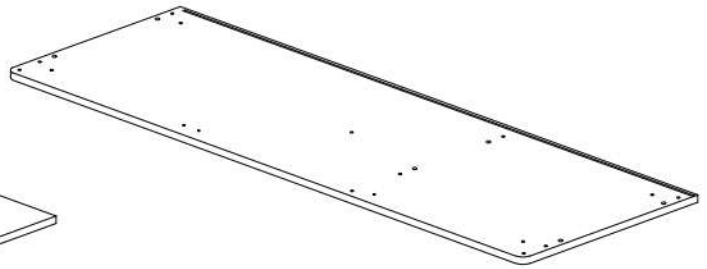 

I

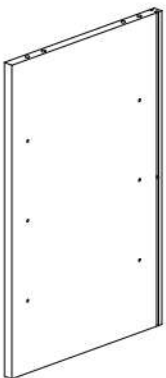 


J

 


x3

 K

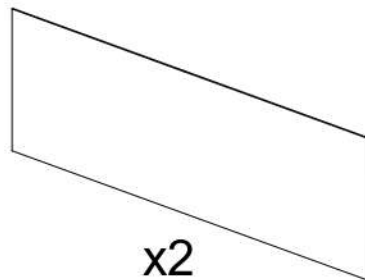


x2

 L

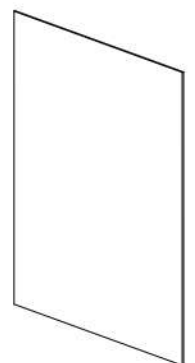

1

 

x14

2



x6



3



x8

4



 
x5

5




x1

6



x27

 7

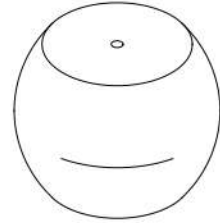

x5

8



 
x6

9




x6

10

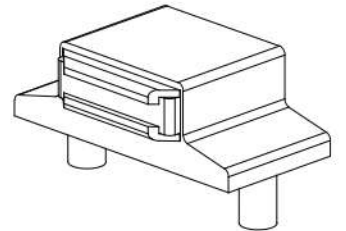


x3

 11



x6

 12

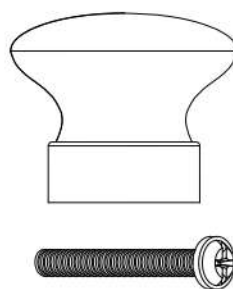

x3

