 


CIPŐSSZEKRÉN

 
FP-04

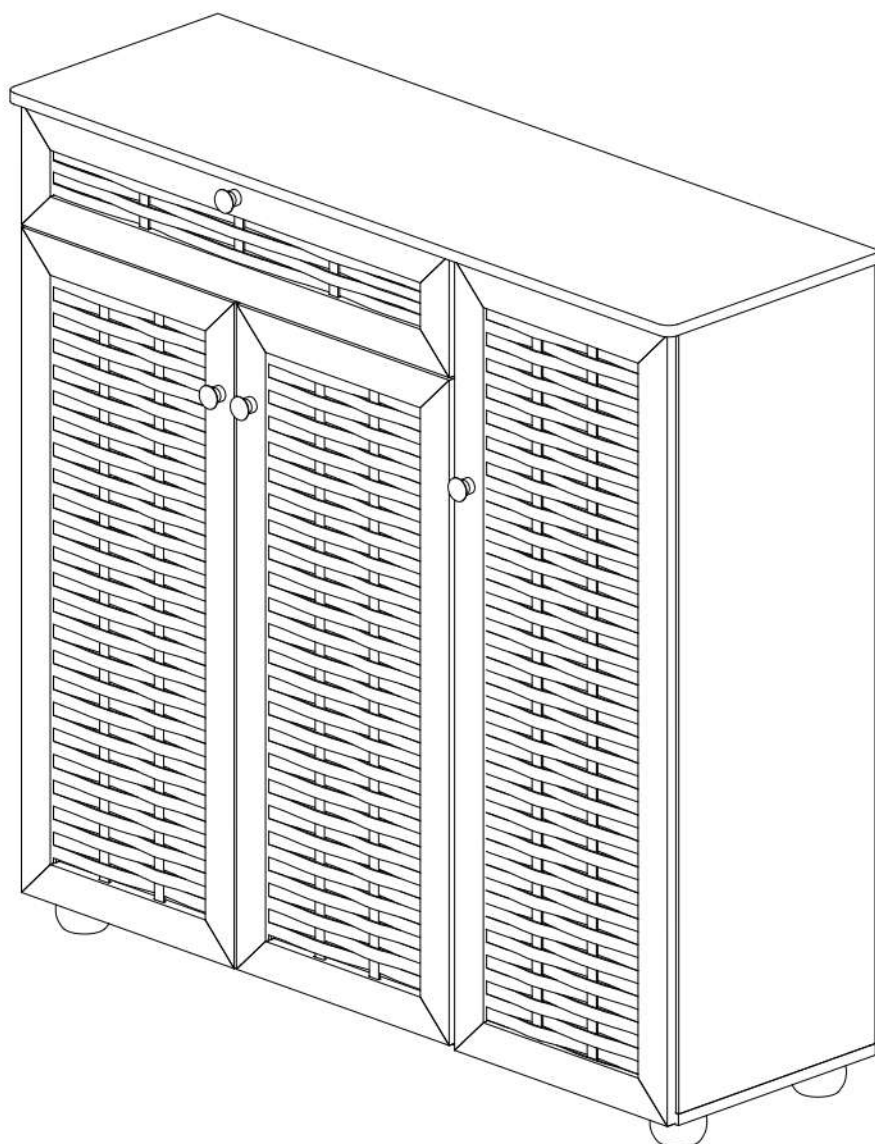


FP-04




A

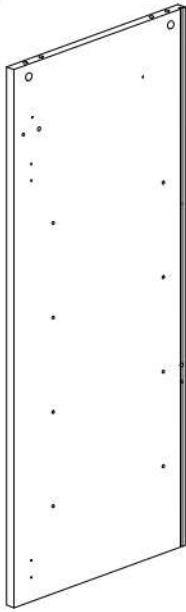


B

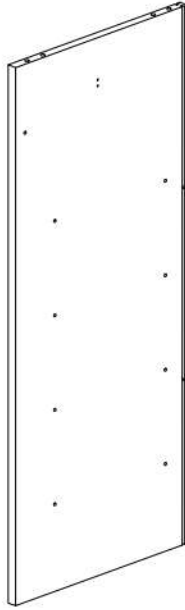 

C

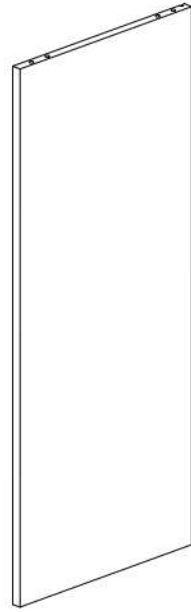 


D

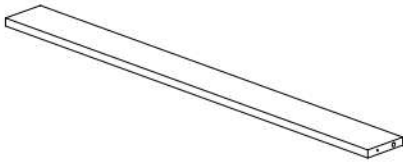 

E



 
F

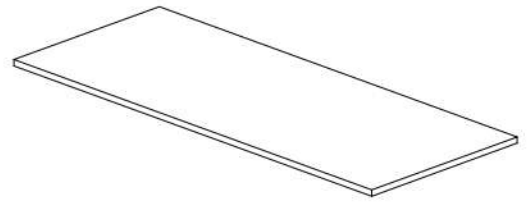


x3

x2

 
G

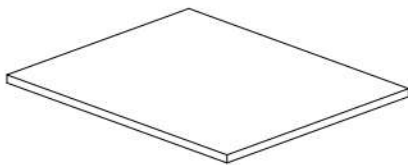


H

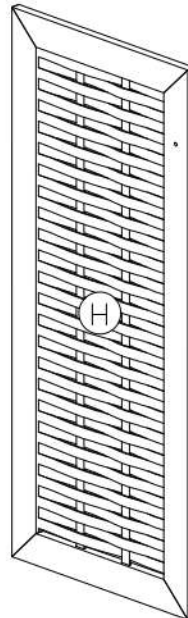 


I

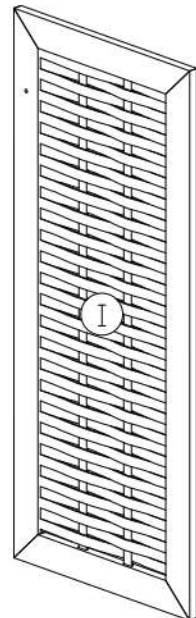 


J

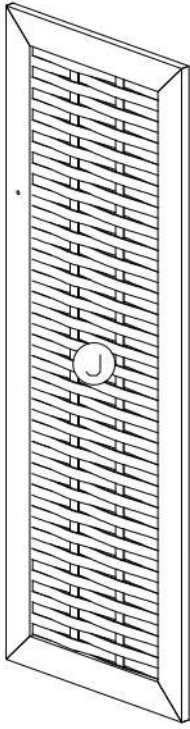 


K

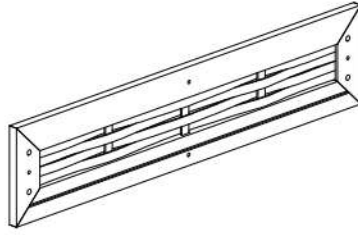 


L

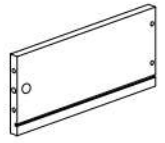 


M

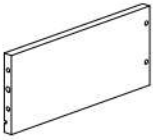 


N

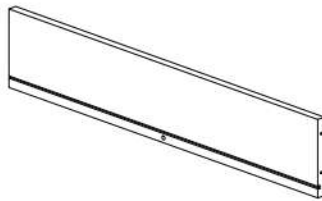 

O


 


P

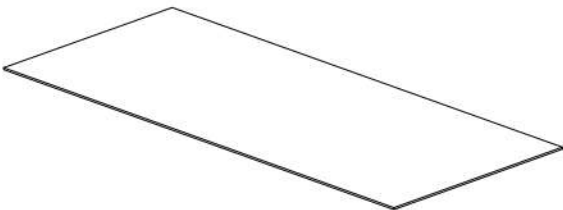 


Q

  R

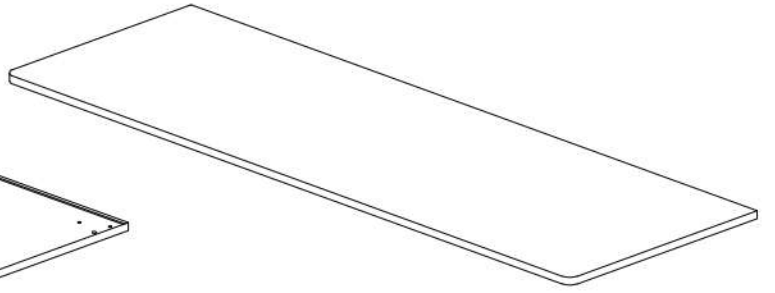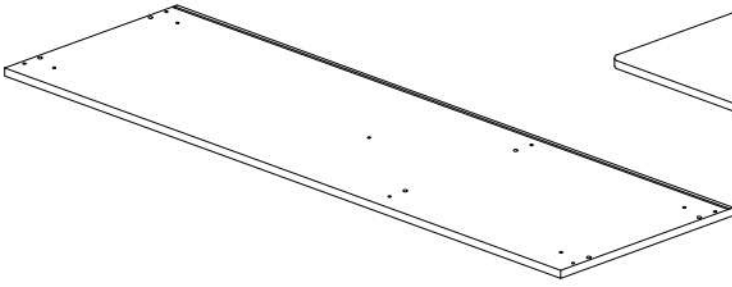


S

 T

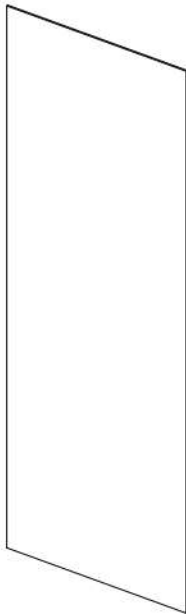

x3

 1



x22

2



 
x9

3




x4

4



x24

 5



x8

6



 
x17

7




x5

8




x32

 9

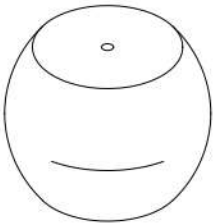


x5

 10

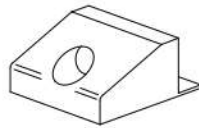


x4

 11




x4

 12

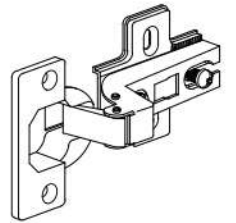


x4

 13

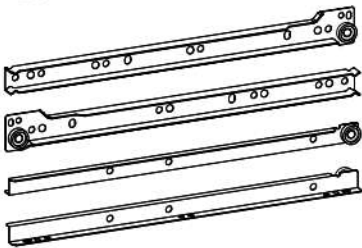


x1

 14

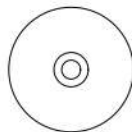


x4

 15

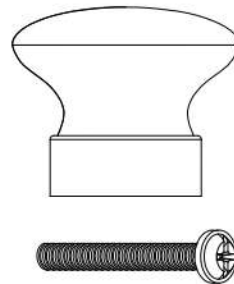

x4

 16

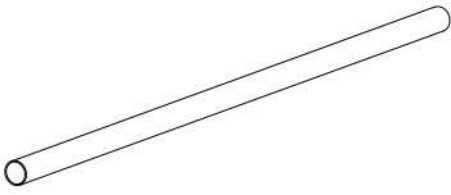

17



x2

