


DAMIAN

110

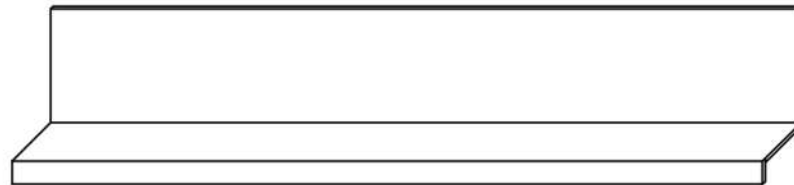

SK: POZOR!!

Vložte opatrne pomocou dosky.

CZ: POZOR!!

Vložte opatrně pomocí desky.

RO: ATENȚIE!!

Introduceți cu grijă folosind placă.

HR: POZOR!!




Umetnite pažljivo s pomoću daske.








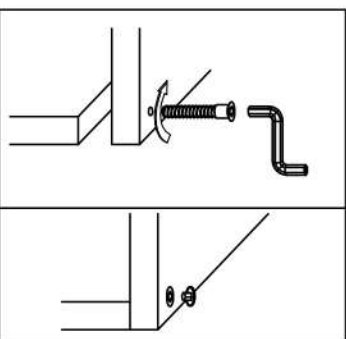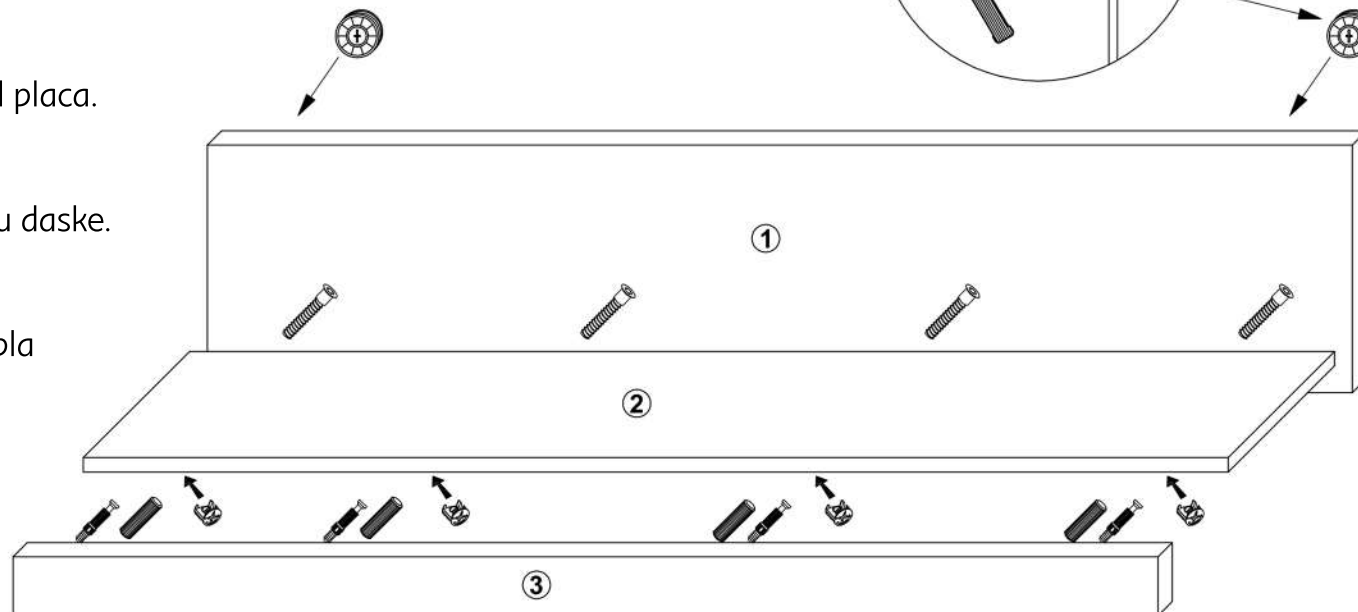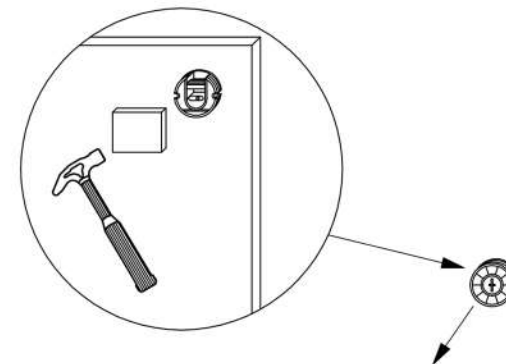

HU: FIGYELEM!!

Óvatosan helyezze be a tábla segítésével.

SI: POZOR!!

Previdno vstavite ploščo.



								
KF50	ZK		K8x40	ZMS	T1	M1	Z1	K30
4	4	1	2	2	4	4	4	8