

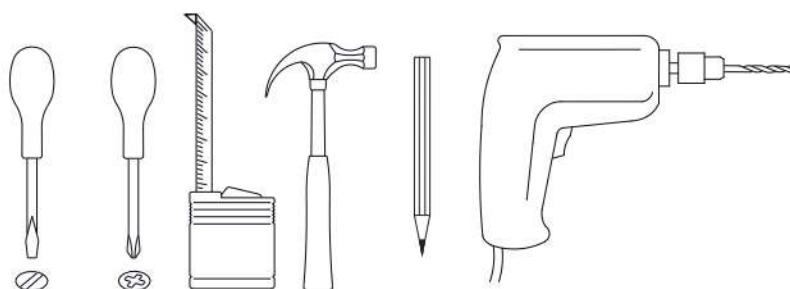
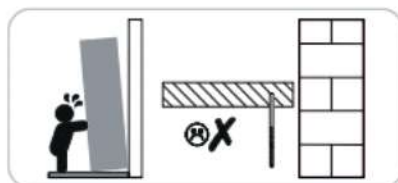
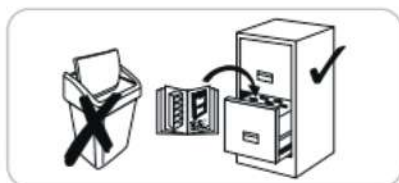
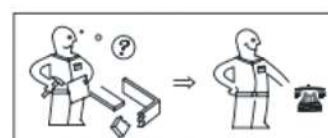
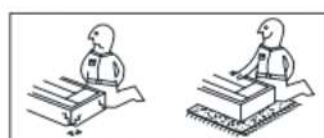
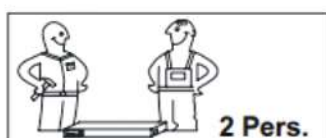
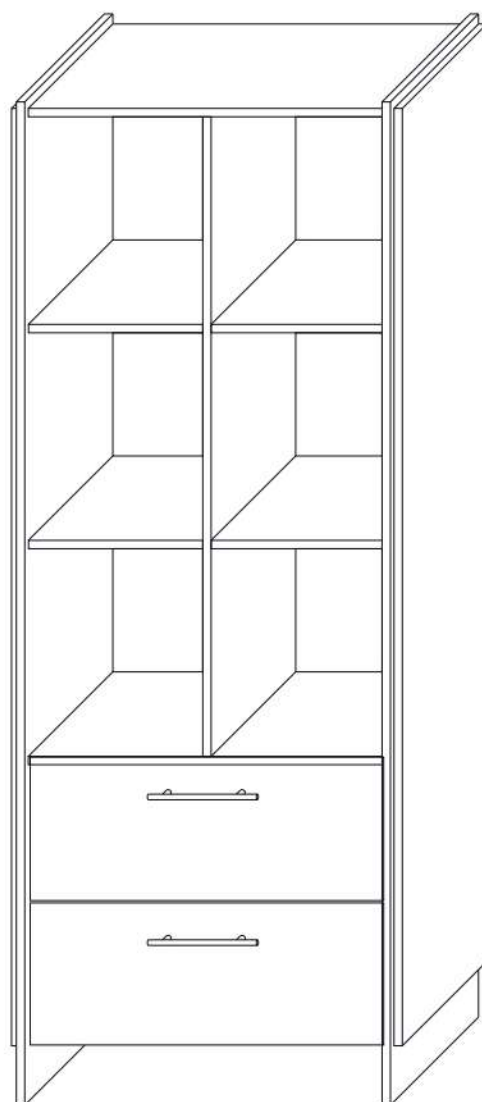



AMONI 2S





balíček	kód	délka	šířka	
1.	5	1682**	428**	2
	8	312*	398	4
	12	584*	113	2
	13	633**	257**	2
	6	640	100	1
2.	14	1662	325/3	2
	15	594	395/3	2
	lišta	488mm		1
		příslušenství		1
	3	1800**	446*	1
	4	1800**	446*	1
	7	1146*	408	1
	9	640*	408	1
	1	640**	428	1
	2	640**	428	1
	10	400*	113	2
	11	400*	113	2


1.47 4x25mm  x16	1.7  x12	1.6  x1	1.16  x19	1.17  x19	2.02  x16	1.85 černá barva  x16
1.14  x25	1.32  x17	2.77 400mm  x2		1.5 3,5x16mm  x45	1.30 barva dřevo  x17	2.68 černá barva  x2
2.69 5x12mm  x16	2.61  x10	1.59  x2	1.2  x4	1.9  x4		
1.33 4x50mm  x2	1.58 60mm  x2	1.49 3,5x30mm  x2	1.36 8x40mm  x2			

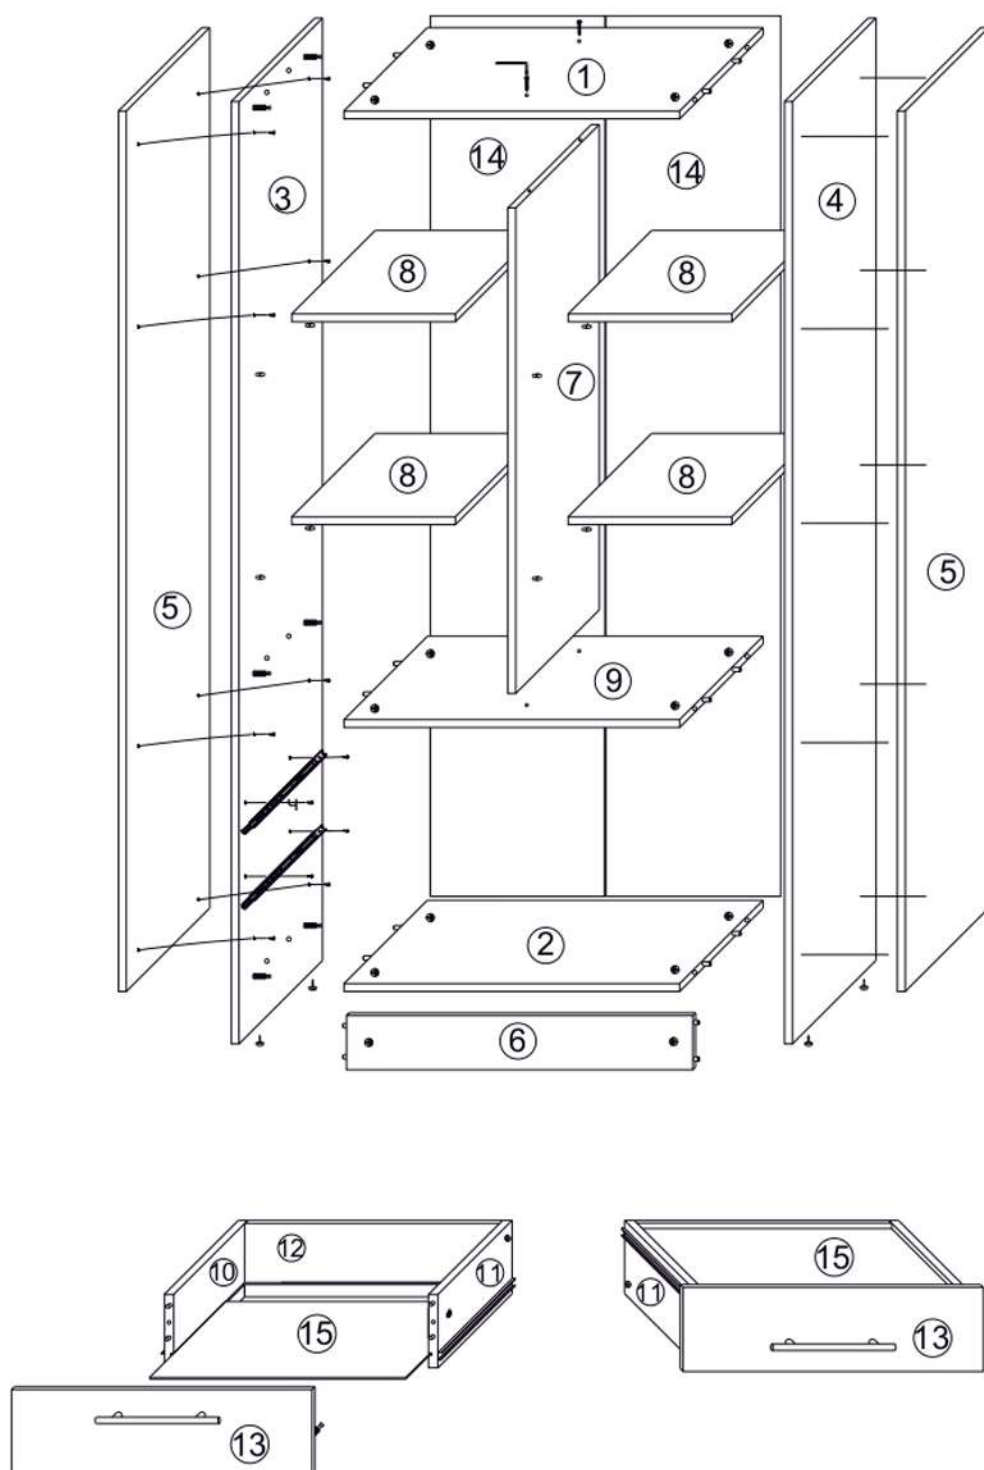

1

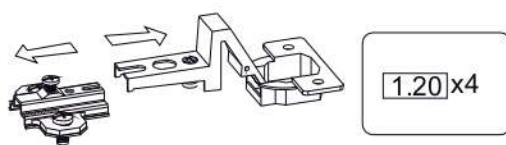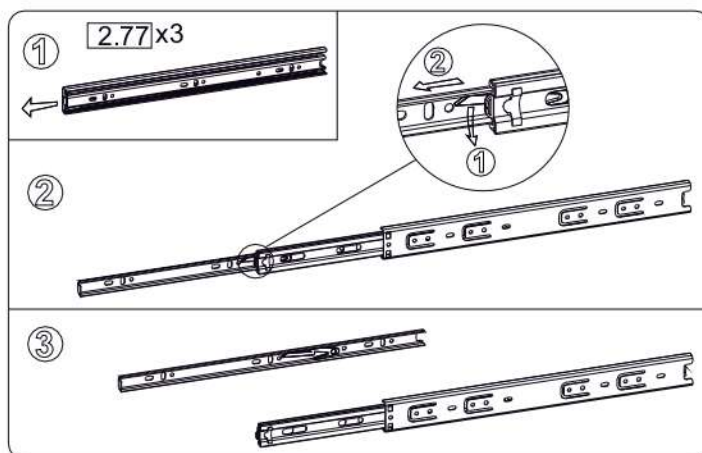



2

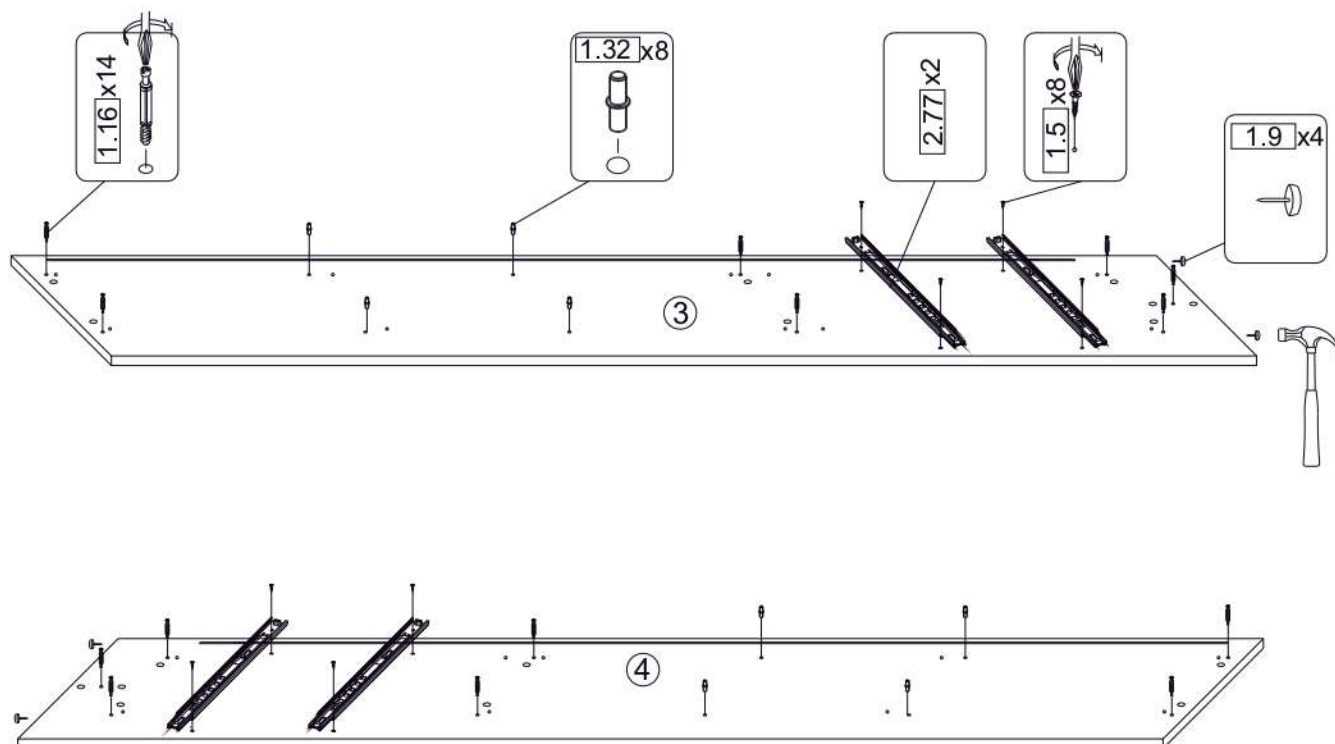



3 x2




4

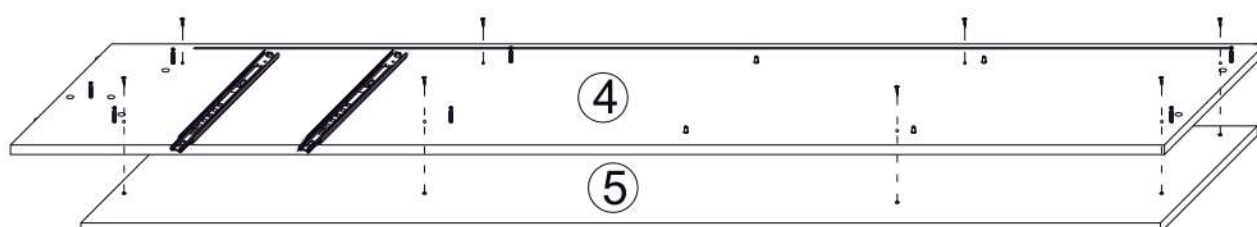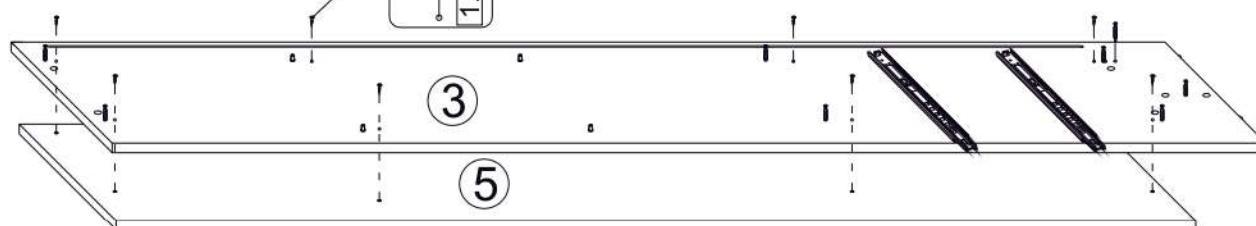


5

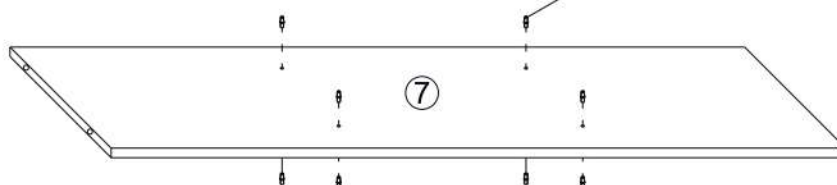

6

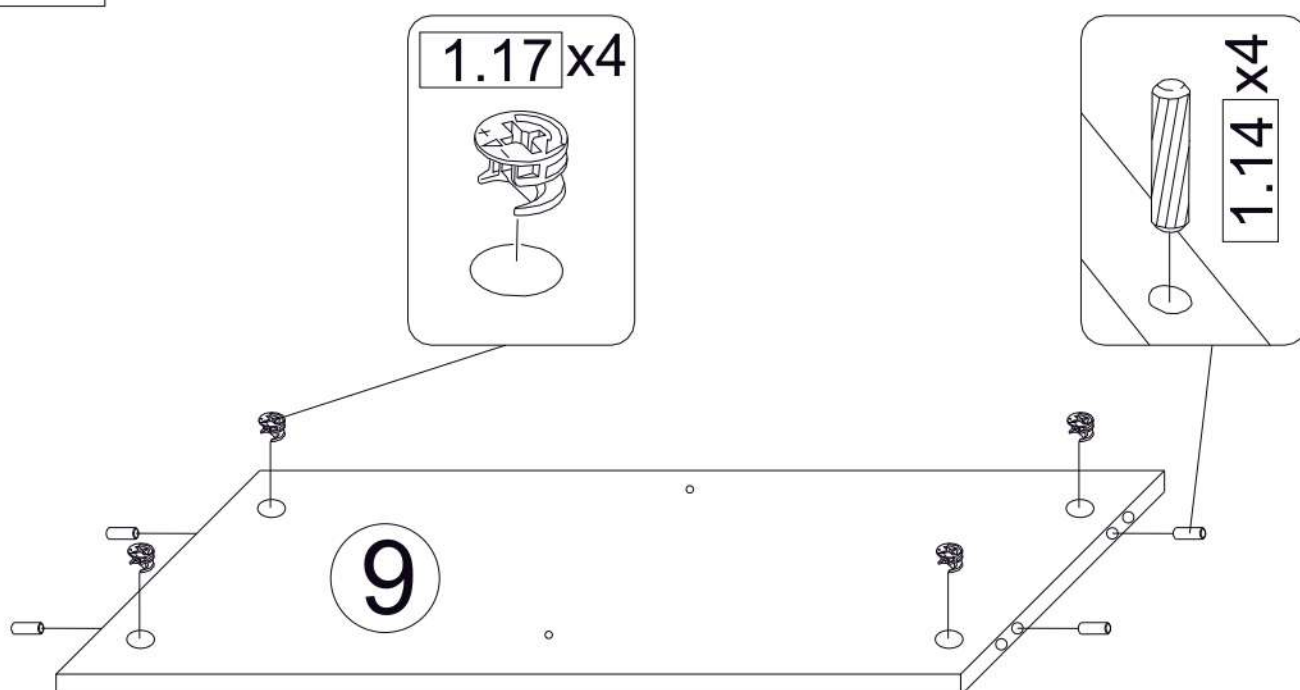

7

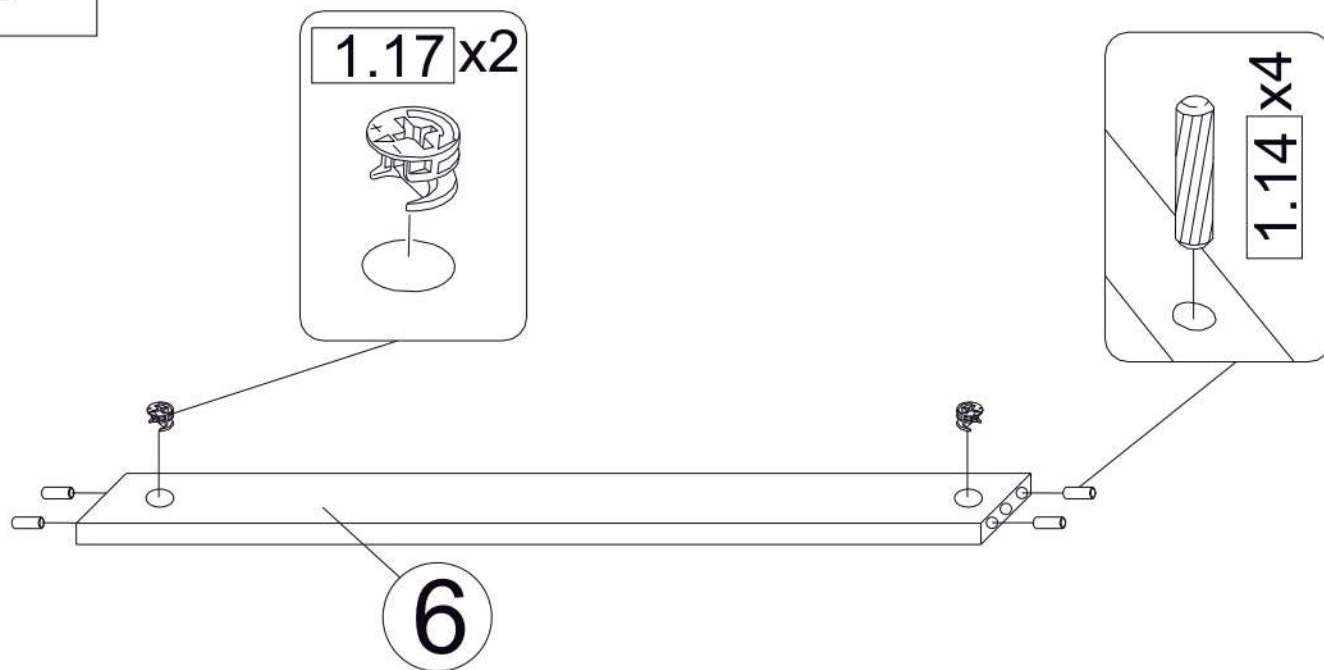


8

Diagram 8 illustrates the step of attaching the side panels (1 and 2) to the base (3). The diagram shows the base (3) with two side panels (1 and 2) being attached. Panel 1 is on the left, and panel 2 is on the right. The base (3) has two long slots. Two screws are shown being inserted into the base (3) to secure the side panels (1 and 2). The screws are shown being inserted from the inside of the side panels (1 and 2) into the base (3). The diagram also shows the side panels (1 and 2) being attached to the base (3) using the screws.


9

Diagram 9 illustrates the assembly of the right side panel (2) and the right side shelf (14). The diagram shows the right side panel (2) being attached to the right side of the unit. The right side shelf (14) is shown being inserted into the shelf support (9). The diagram also shows the right side panel (2) being attached to the right side of the unit. The diagram includes a callout for the right side panel (2) and the right side shelf (14).


10

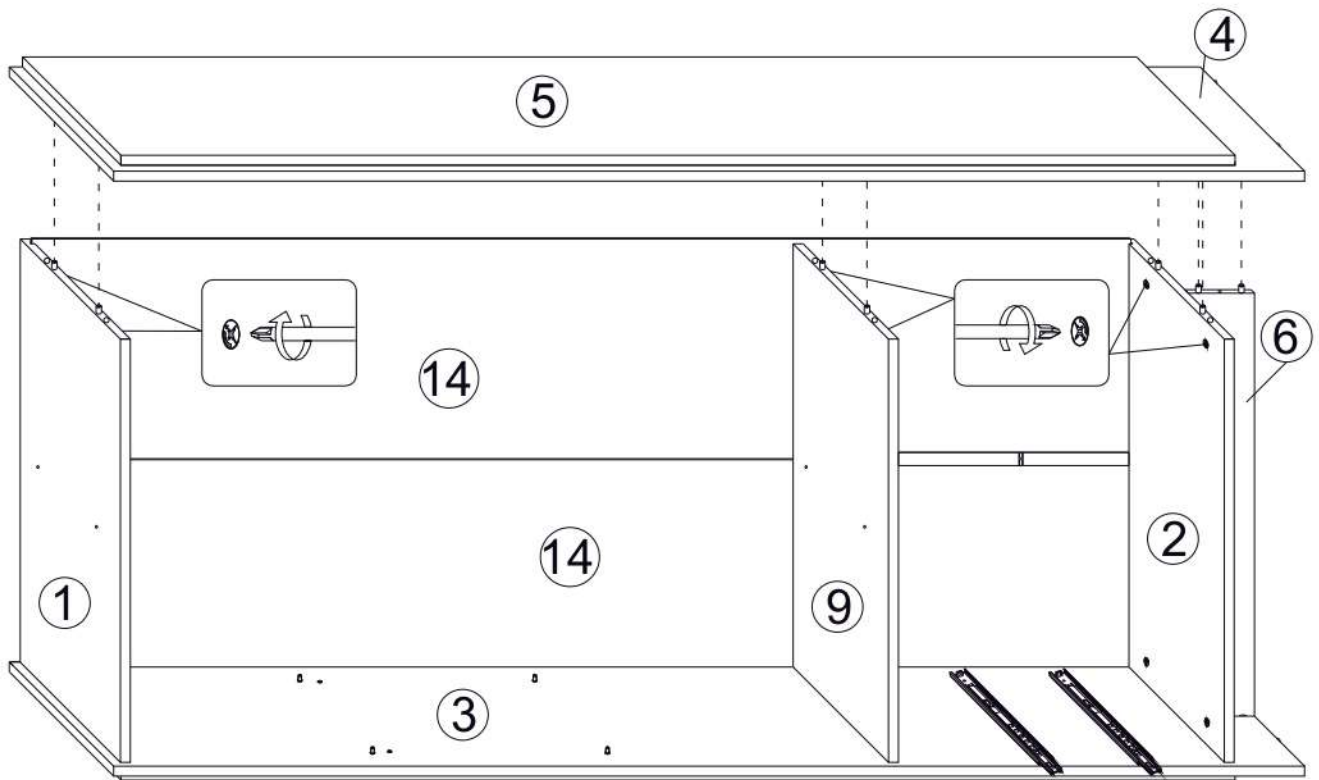


11

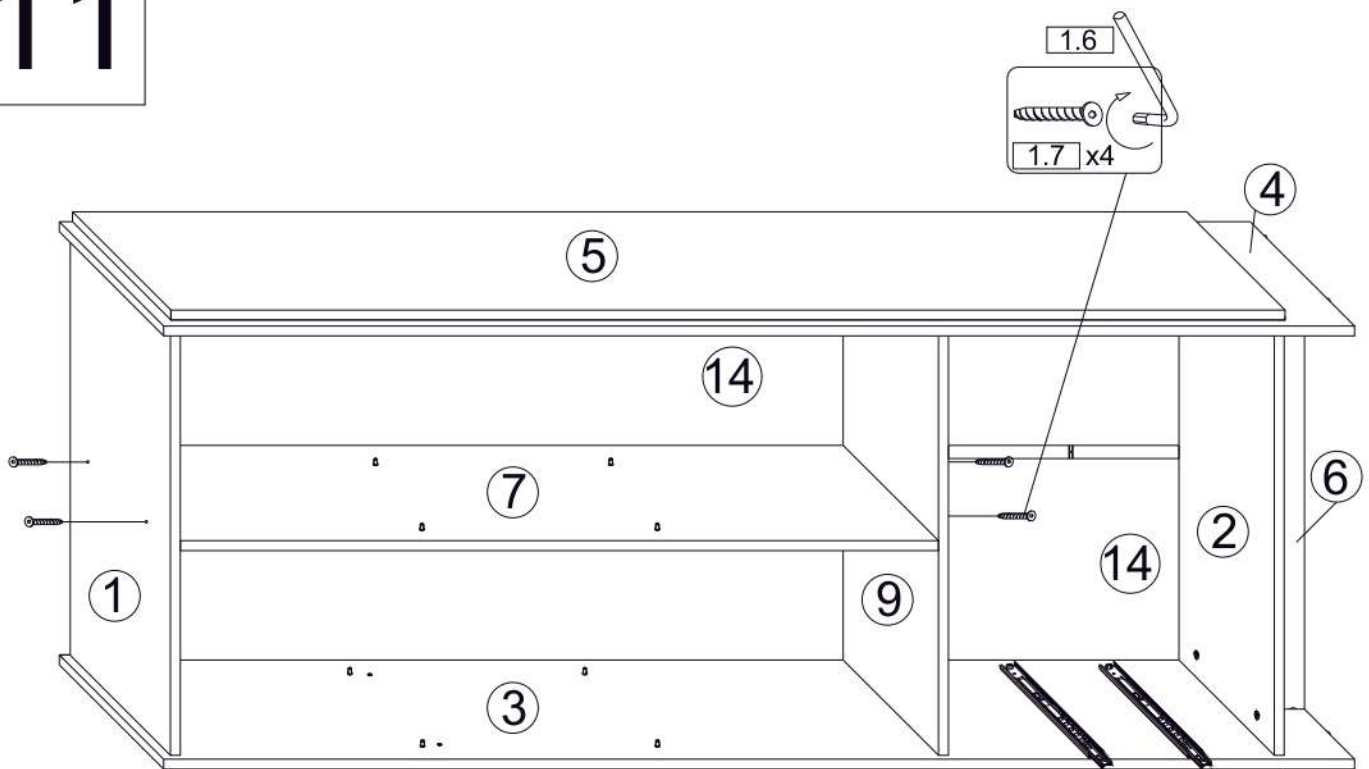


12

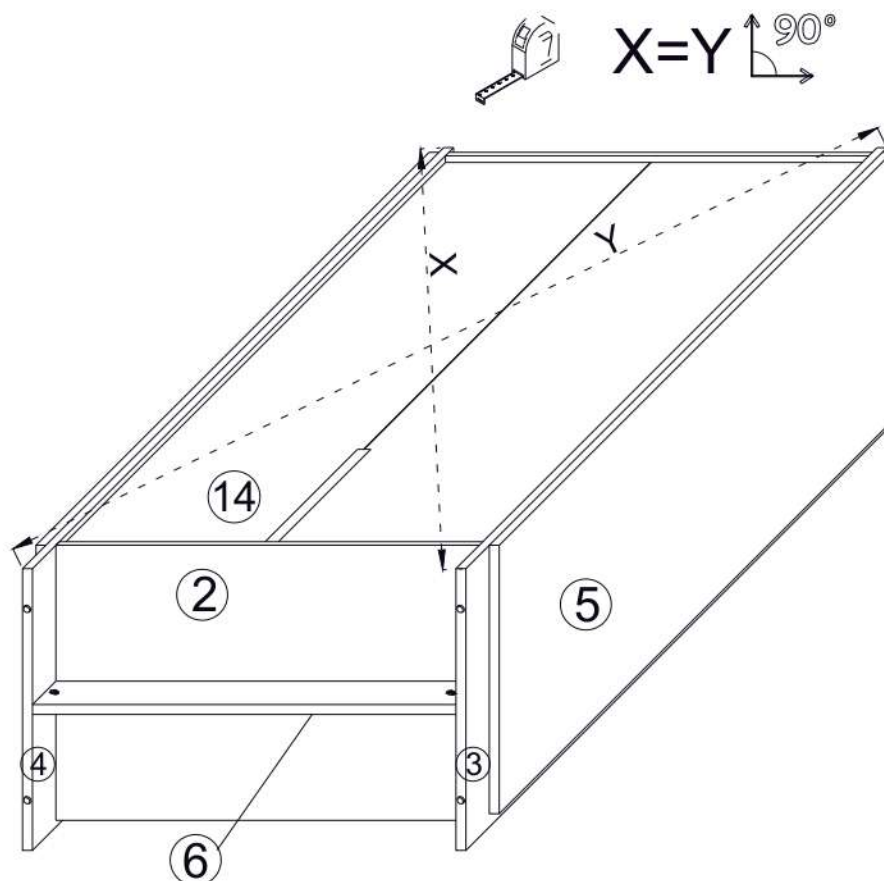


13

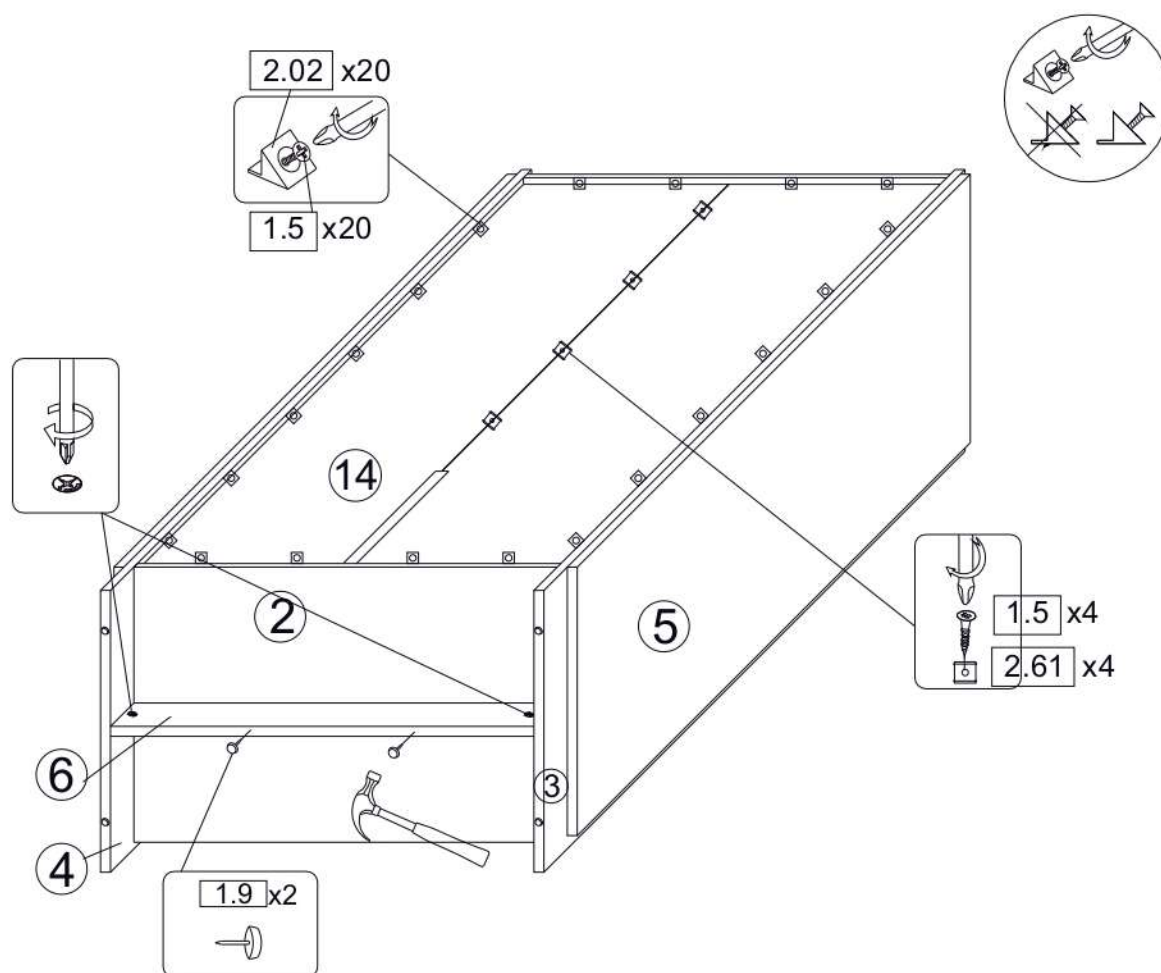


14 x2

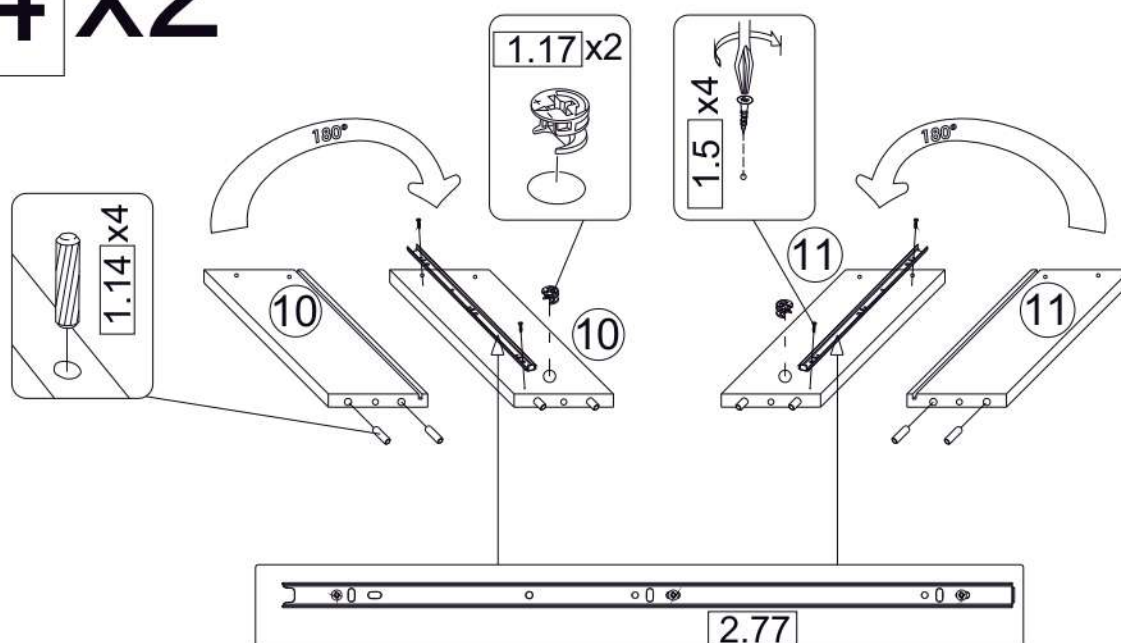


15 x2

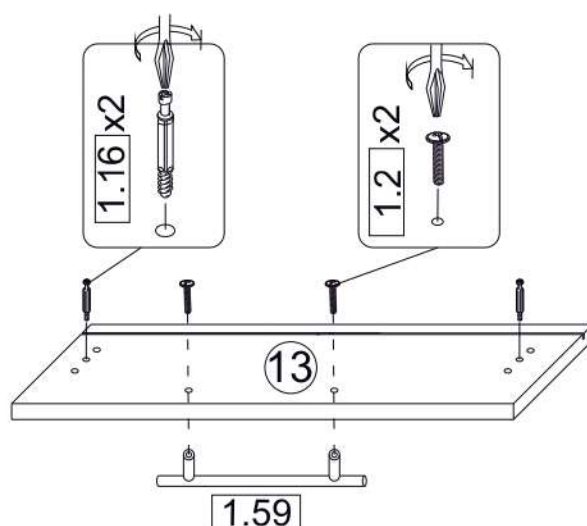


16 x2

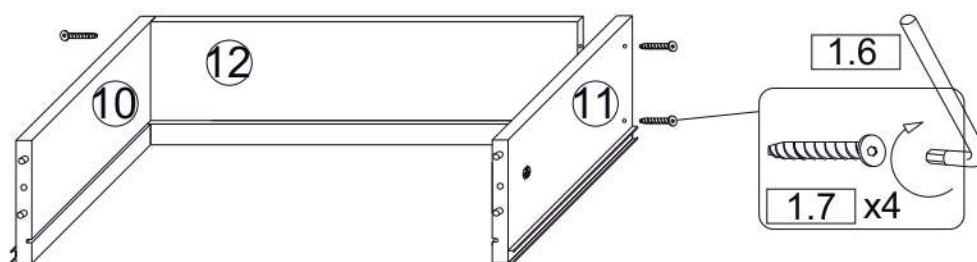


17x2

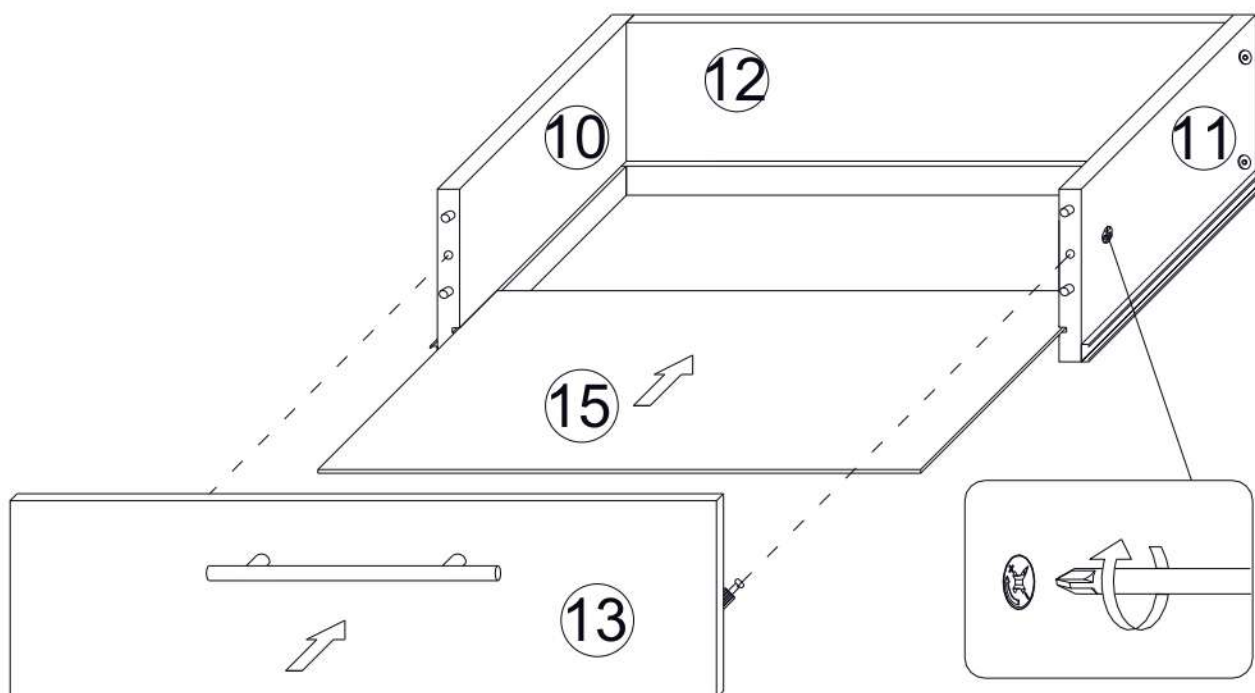


18x2

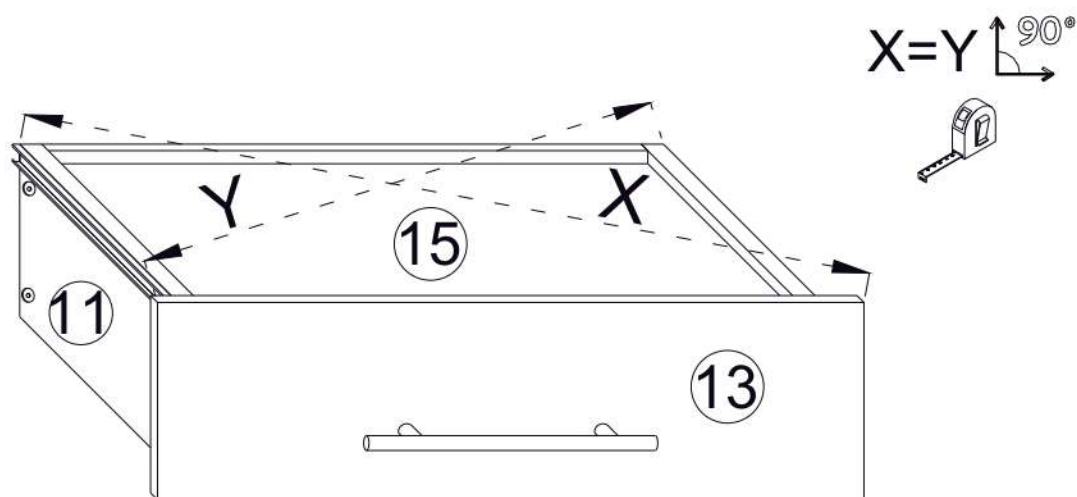



19

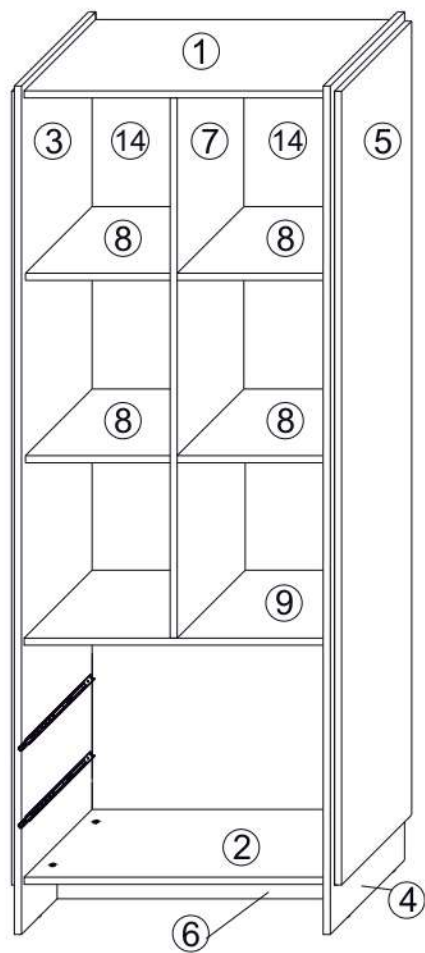







20

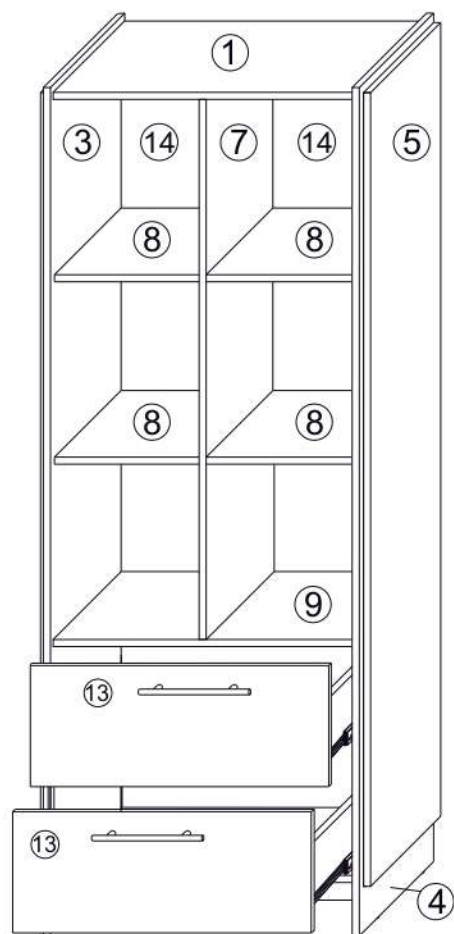

21

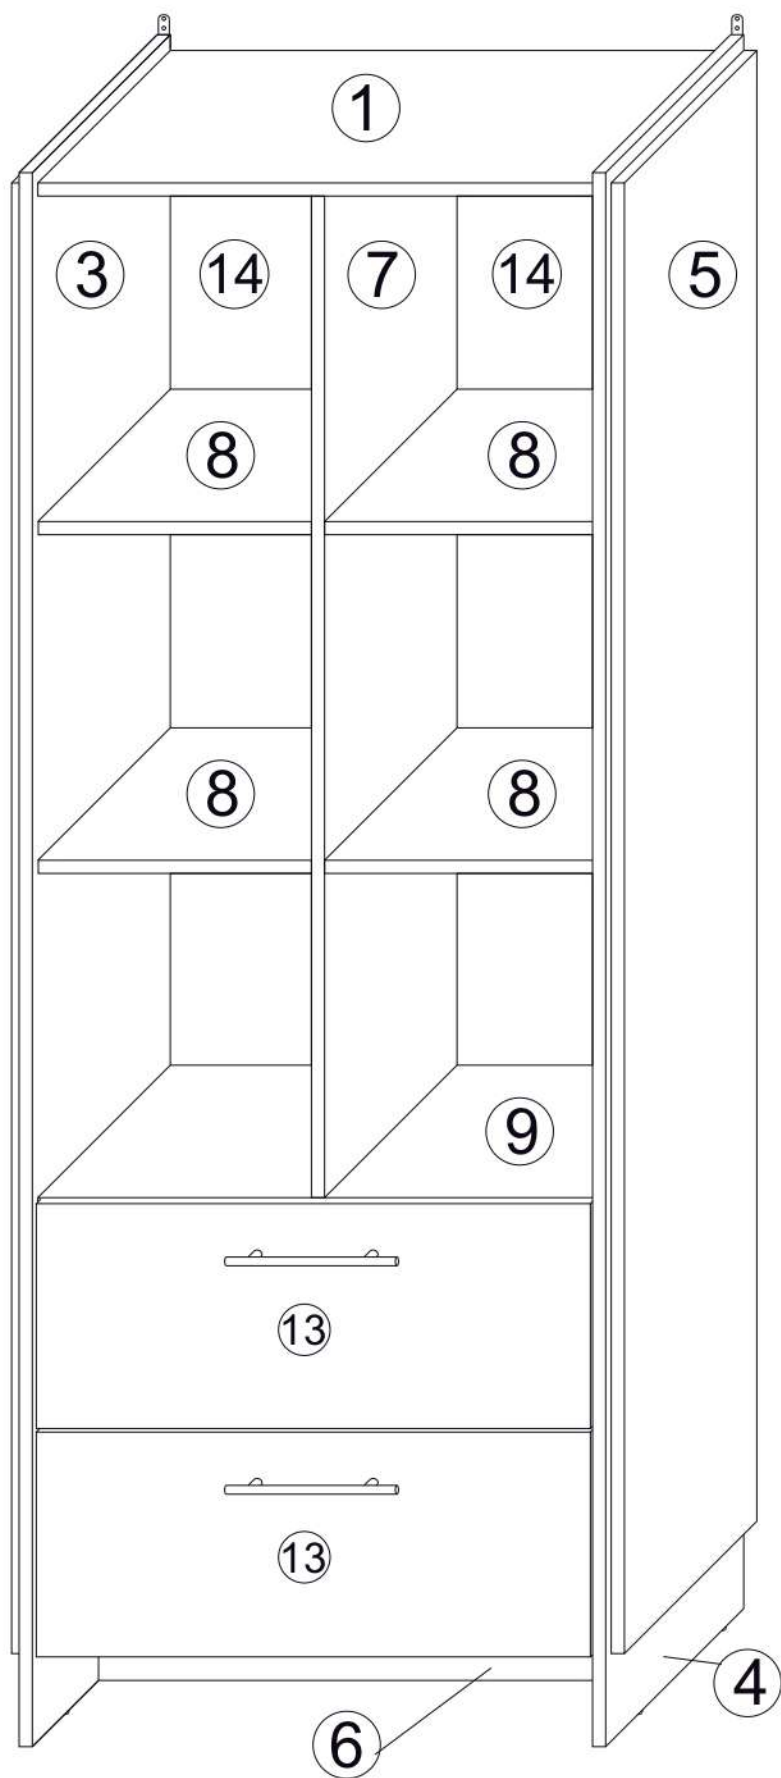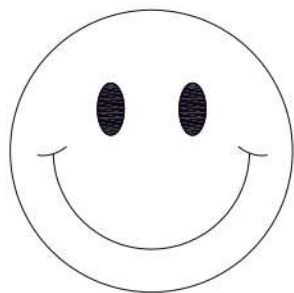

Nábytek připevňujte ke stěně vždy pomocí zárážek! Pro montáž na stěnu použijte vhodné hmoždinky na materiál, ze kterého je stěna vyrobena. Pokud si nejste jisti, kontaktujte odborníka. V konečném důsledku je za upevňovací prvky odpovědný instalační technik.

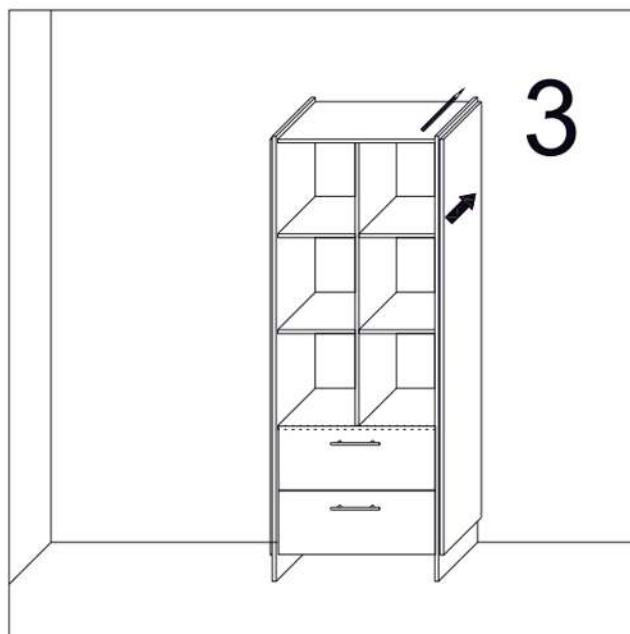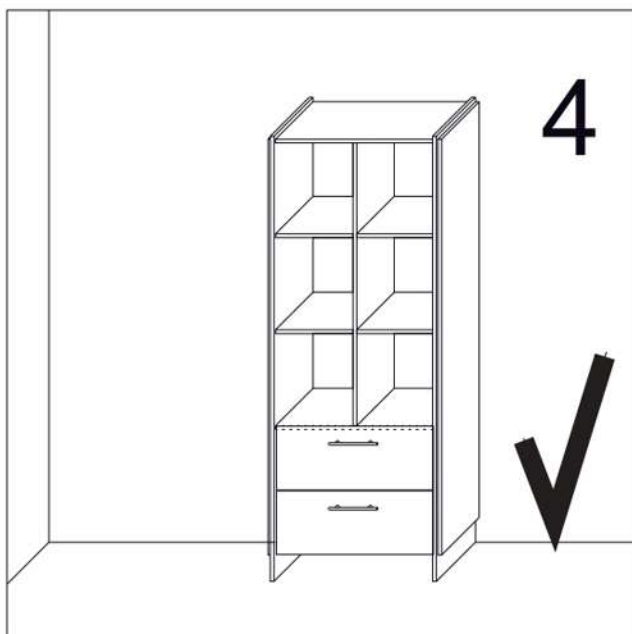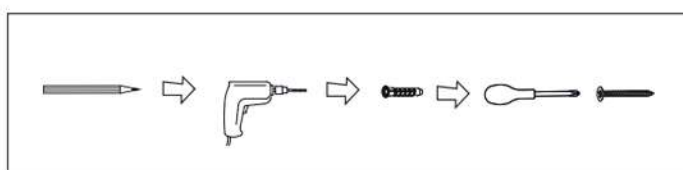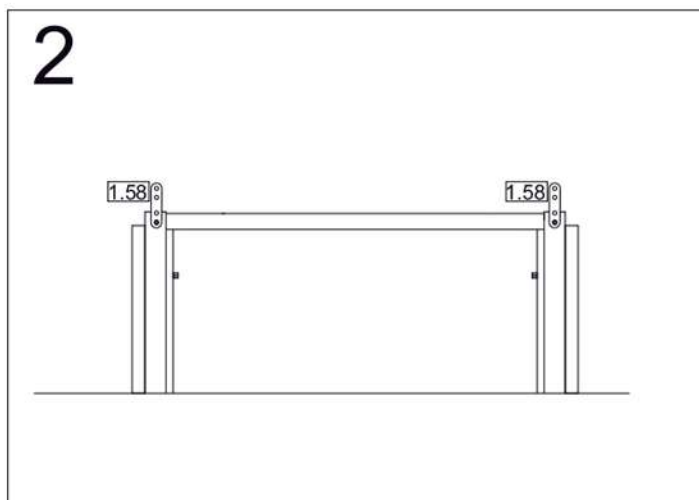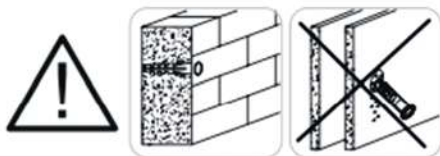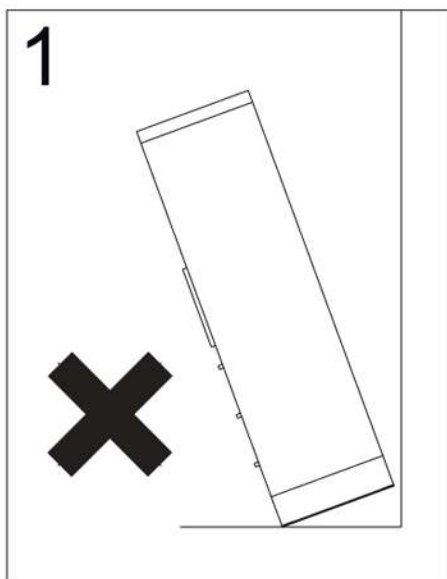

Při používání nábytku je zakázáno:

- umísťovat nábytek v blízkosti topných těles a vlhkých zdí, i v místnostech s relativní vlhkostí vyšší než 70 %
- teplota ohřevu nábytkových prvků nesmí překročit +40 °C
- při montáži a používání nábytku stůjte na vodorovných panelech a vitrinách
- k čištění nábytku používat chemické čisticí prostředky
- nevystavujte kontaktu s vodou

Varování:

- nábytek vždy připevněte ke stěně pomocí zárážek
- pro montáž na stěnu použijte hmoždinky vhodné pro materiál, ze kterého je stěna vyrobena, pokud si nejste jisti, kontaktujte odborníka. V konečném důsledku je za upevňovací prvky odpovědný instalační technik.
- je třeba dodržet maximální zatížení