

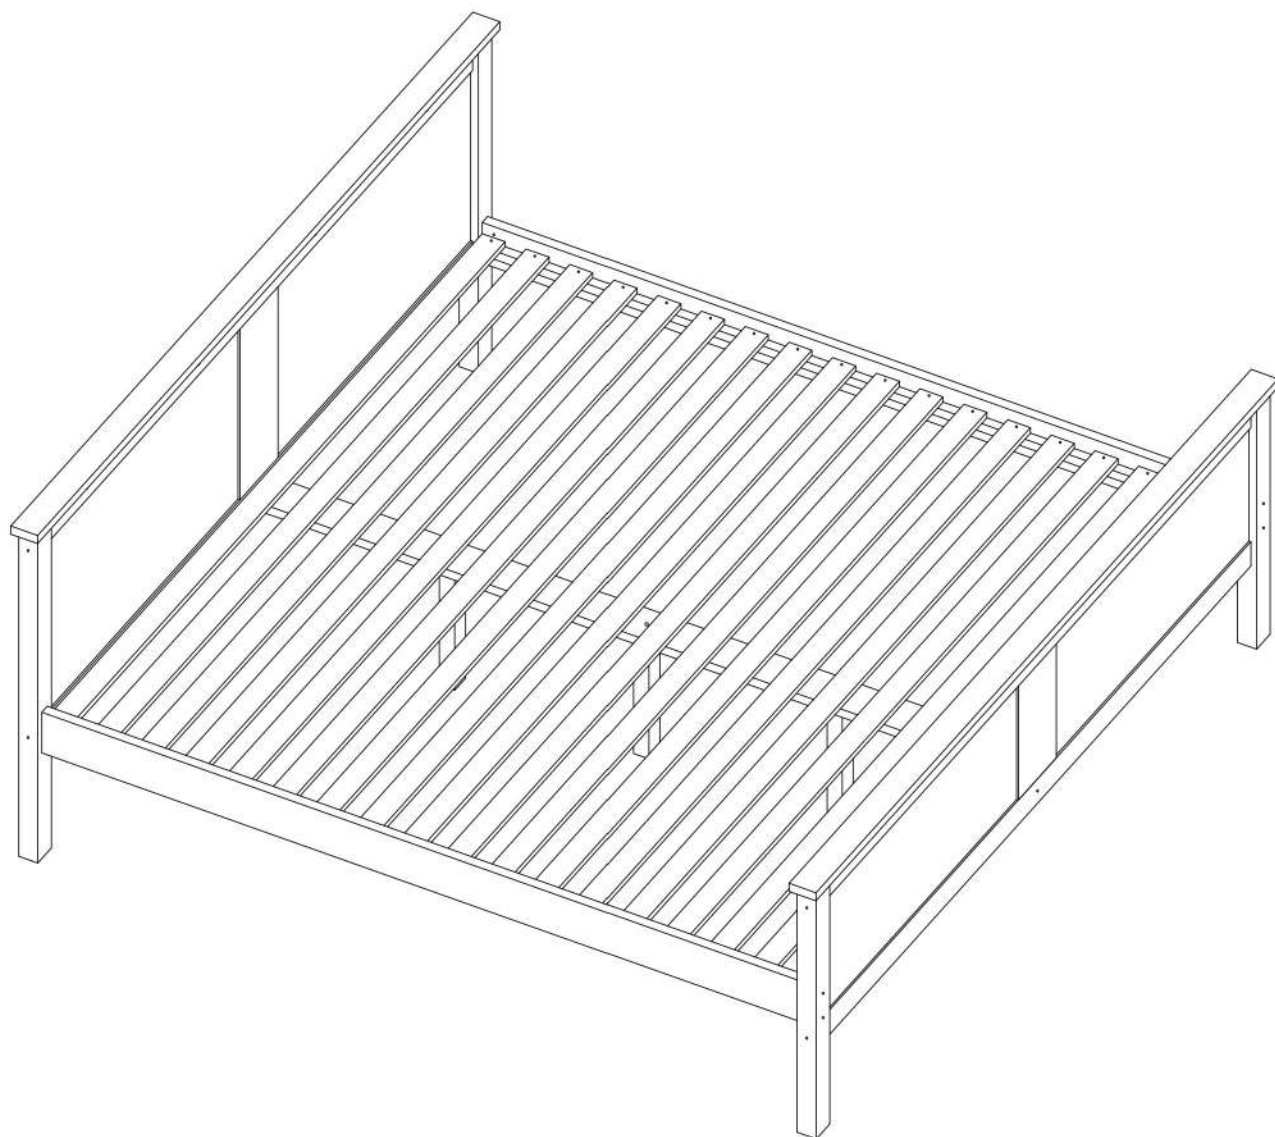
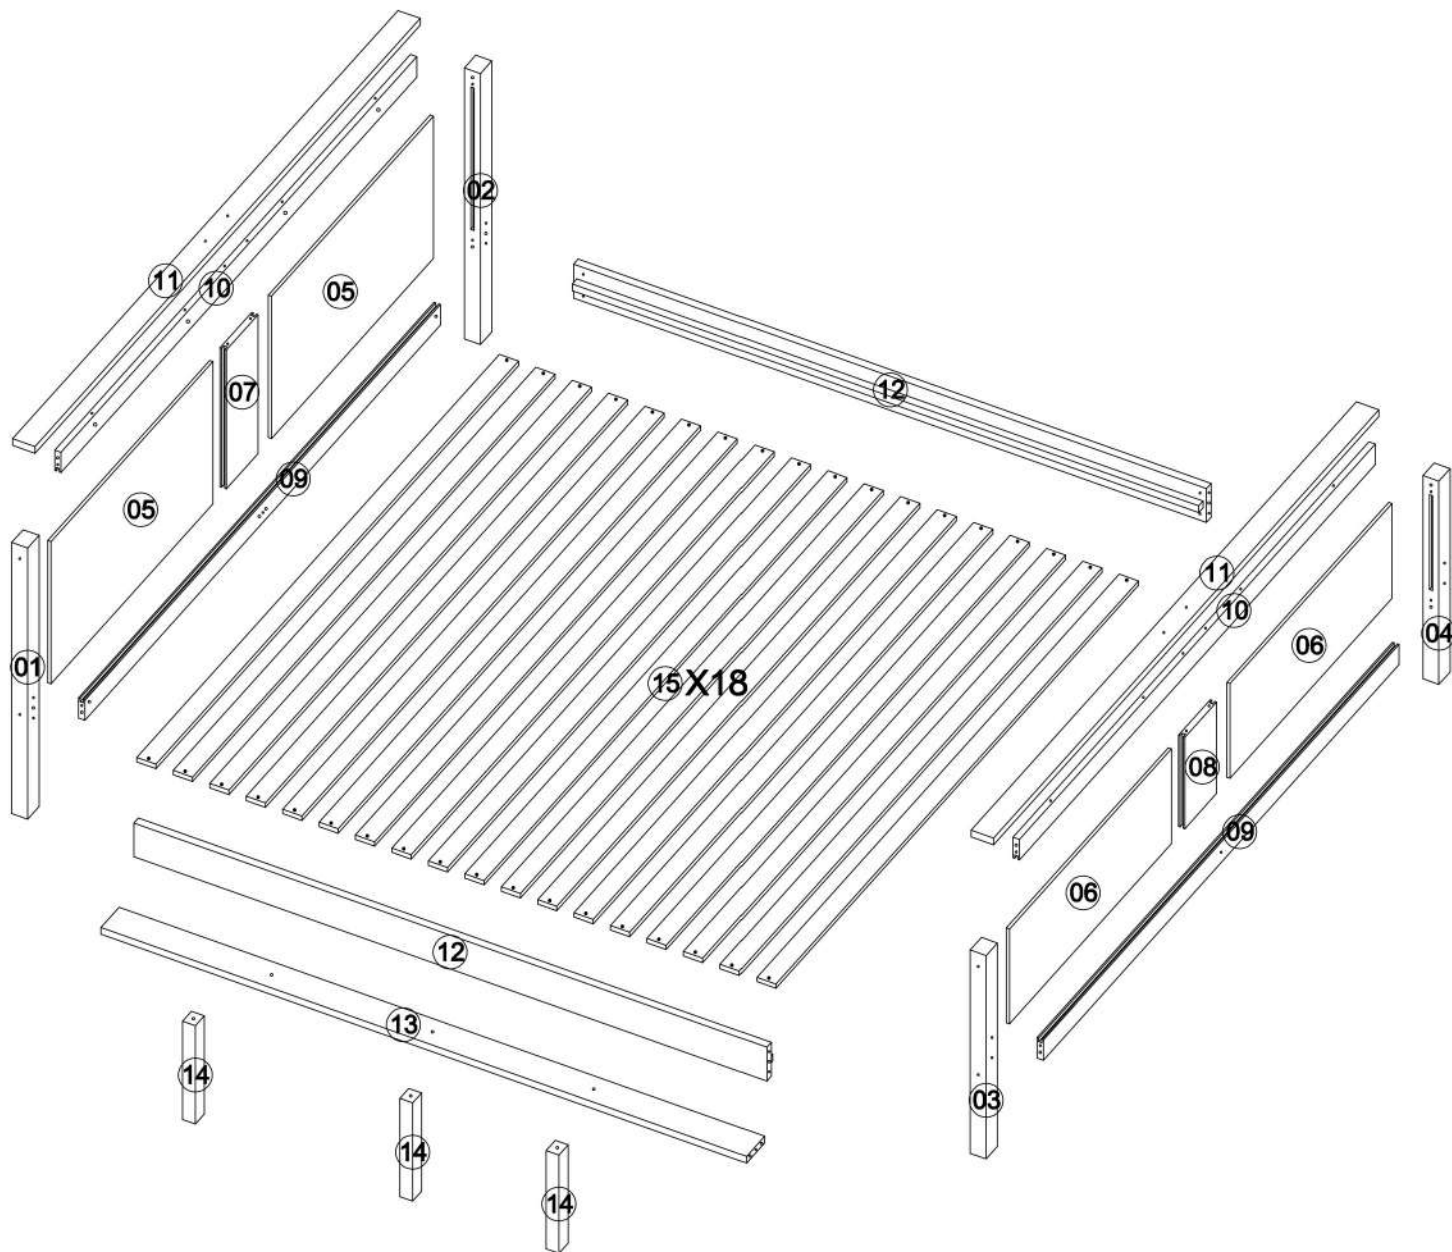



PROVO NEW 180


B1021






A	X12	B	X16	C	X12	D	X4
							
M6x80mm		Ø8x30mm		M6		M6x80mm	
E	X8	F	X8	G	X13	H	X36
		 					
				M6x70mm		Ø4x30mm	
I	X16	J	X1				
							
Φ15							

01

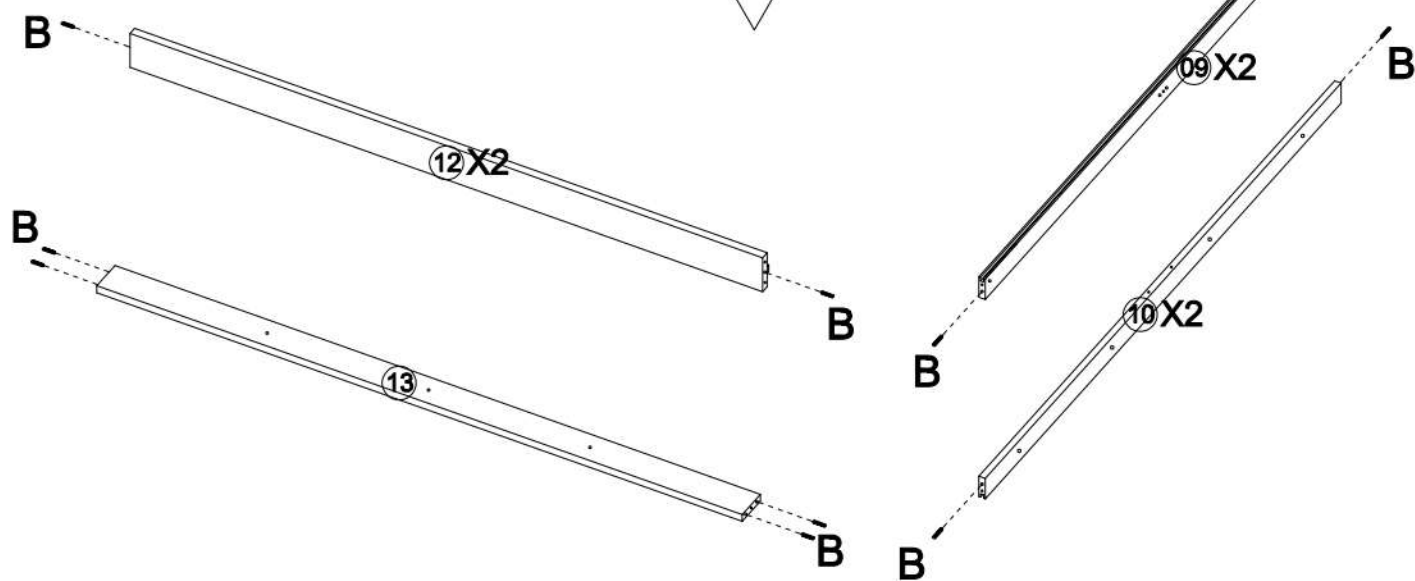

02

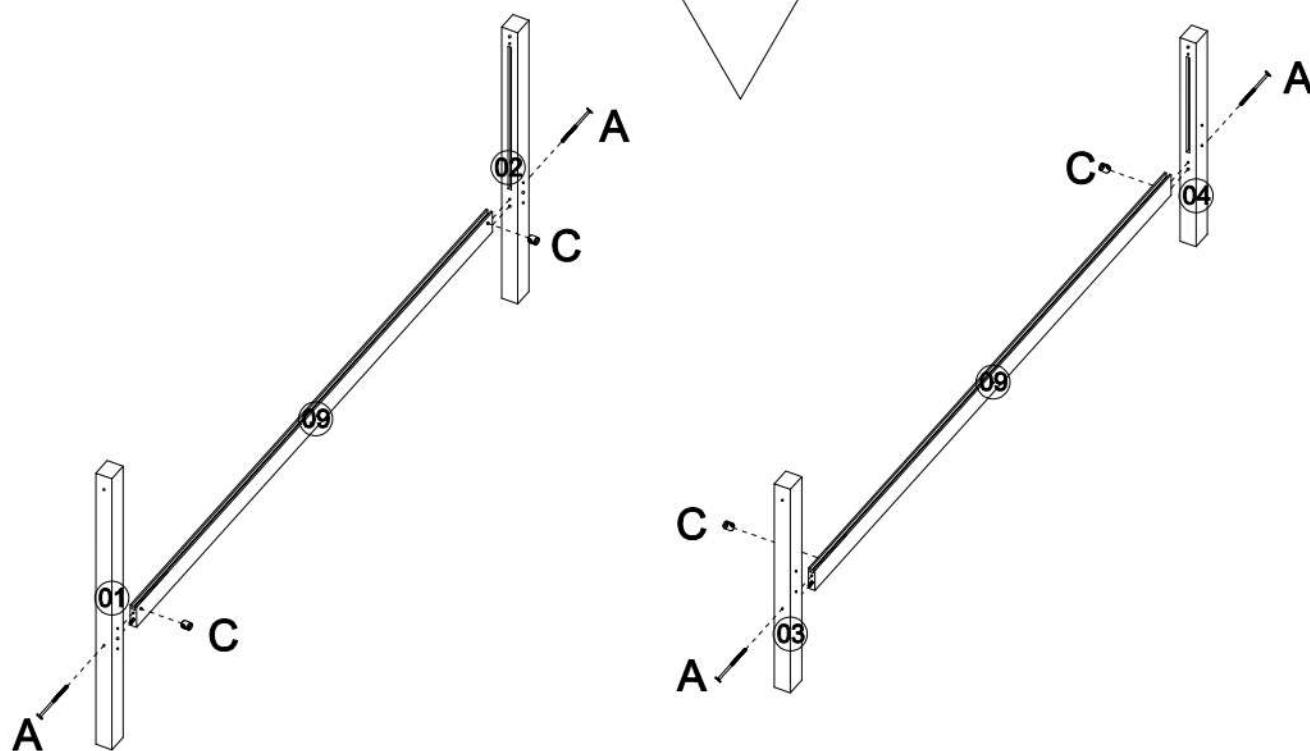

B

X16

A

X4

C

X4



Ø8x30mm





M6x80mm





M6


03

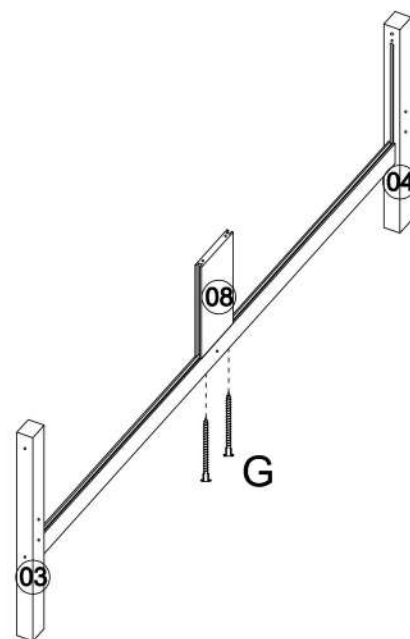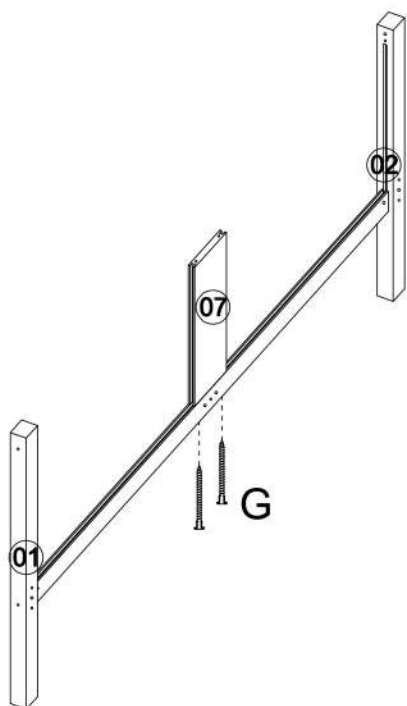

04

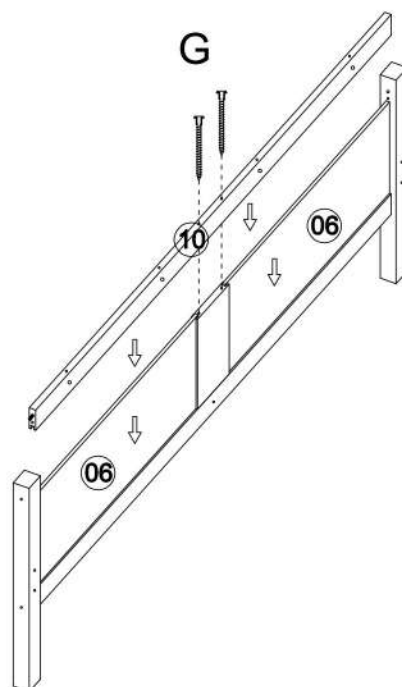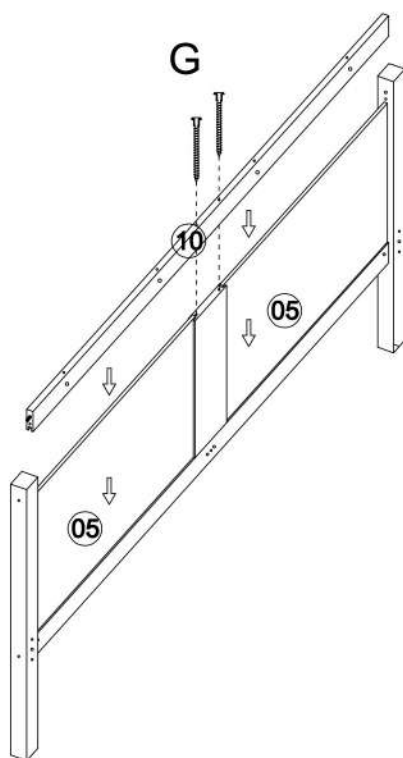


G X8




M6x70mm

05

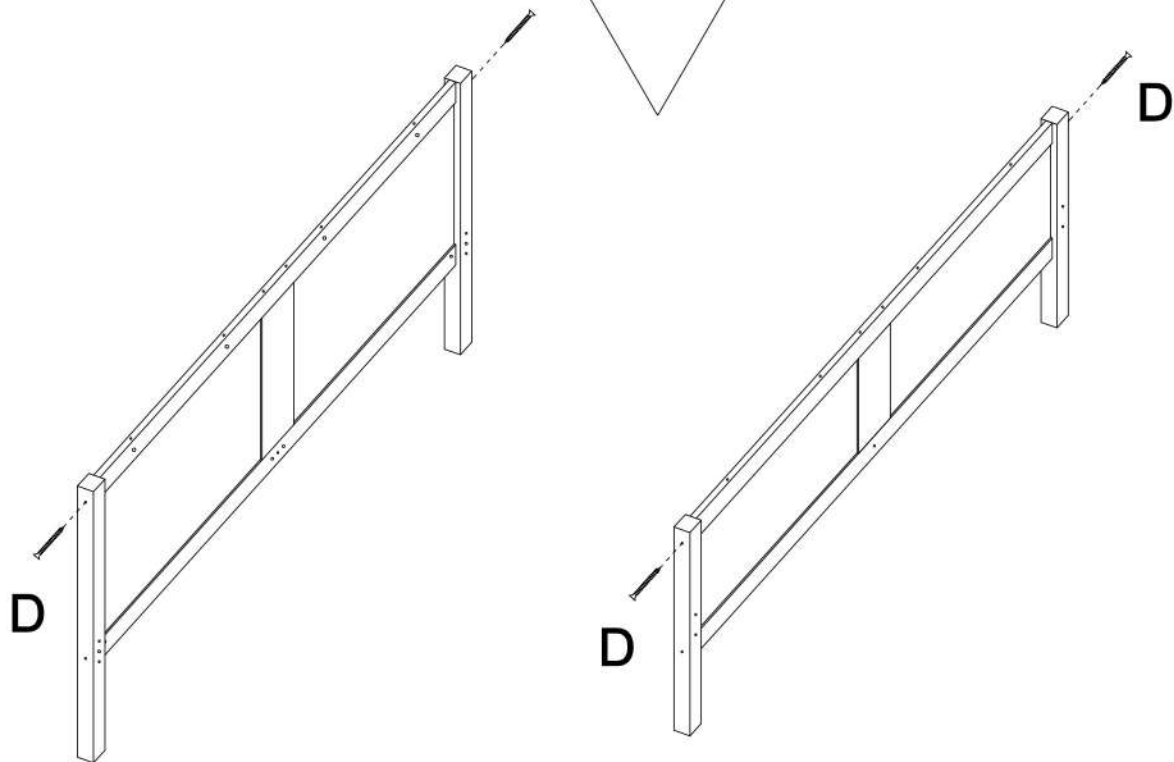

06

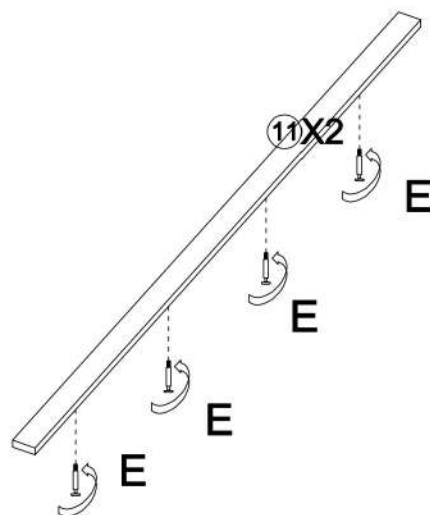


D

X4


E

X8





M6x80mm


07

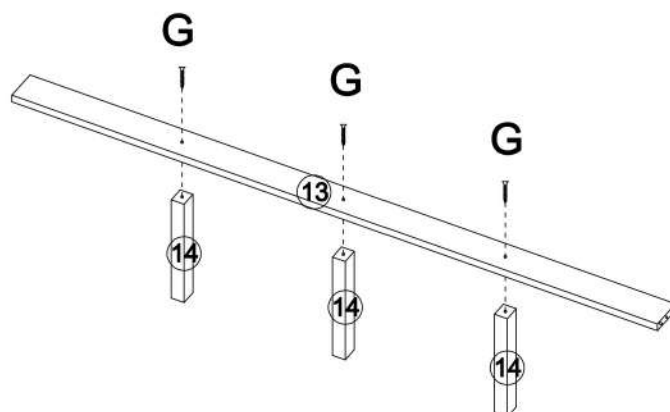


08

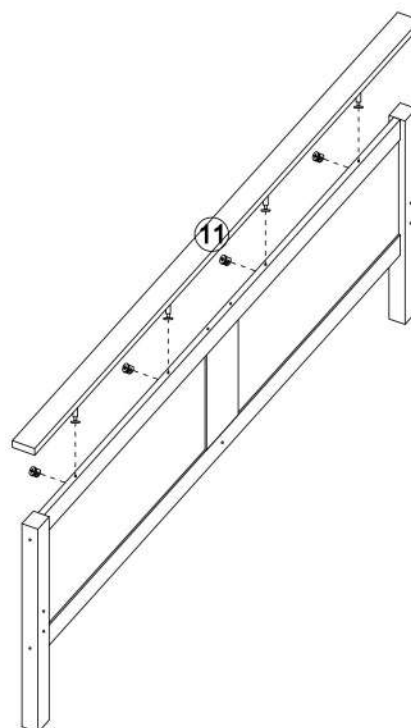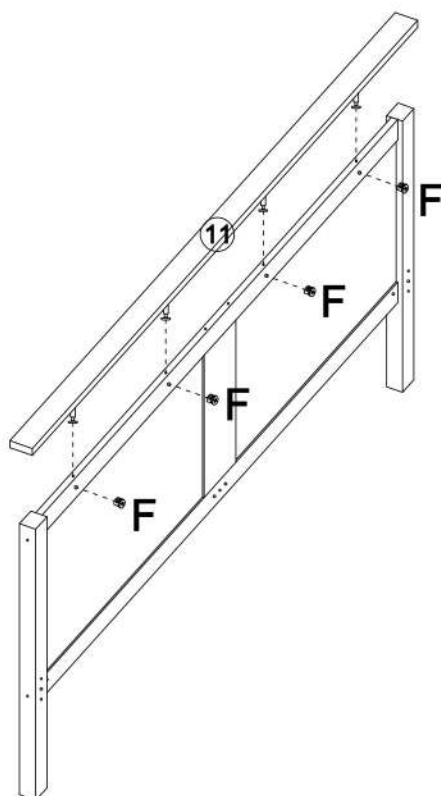

F X8 G X3



M6x70mm

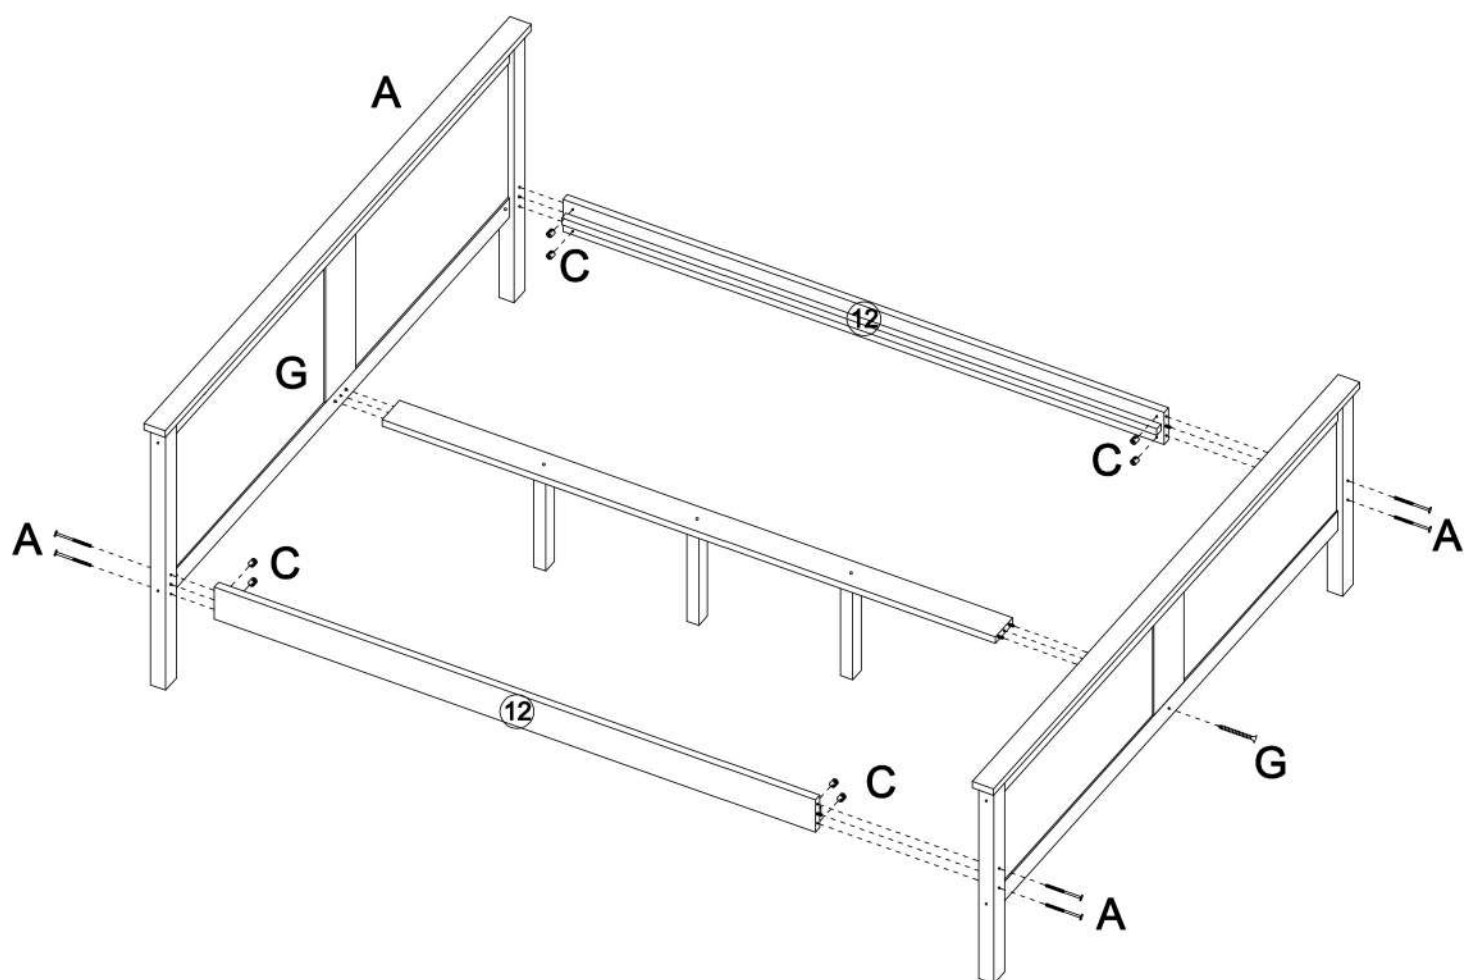

A

X8

C

X8

G


X2



M6x80mm




M6



M6x70mm

10

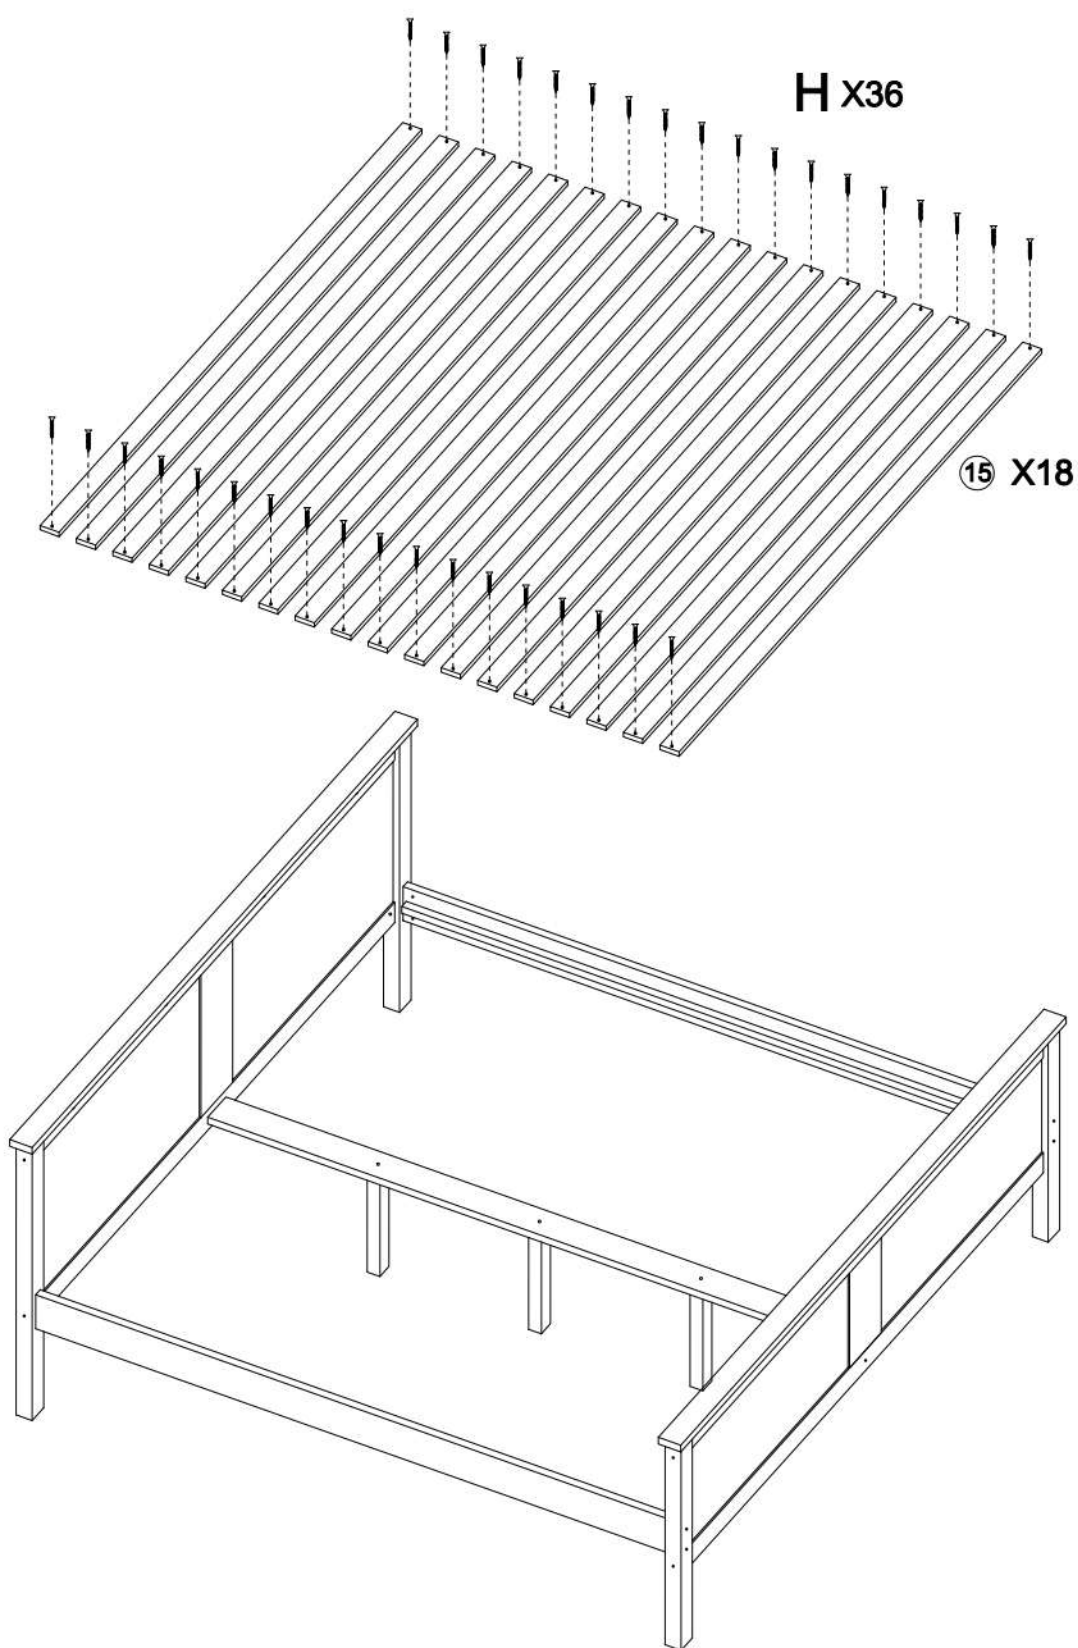


H X36



Ø4x30mm

11

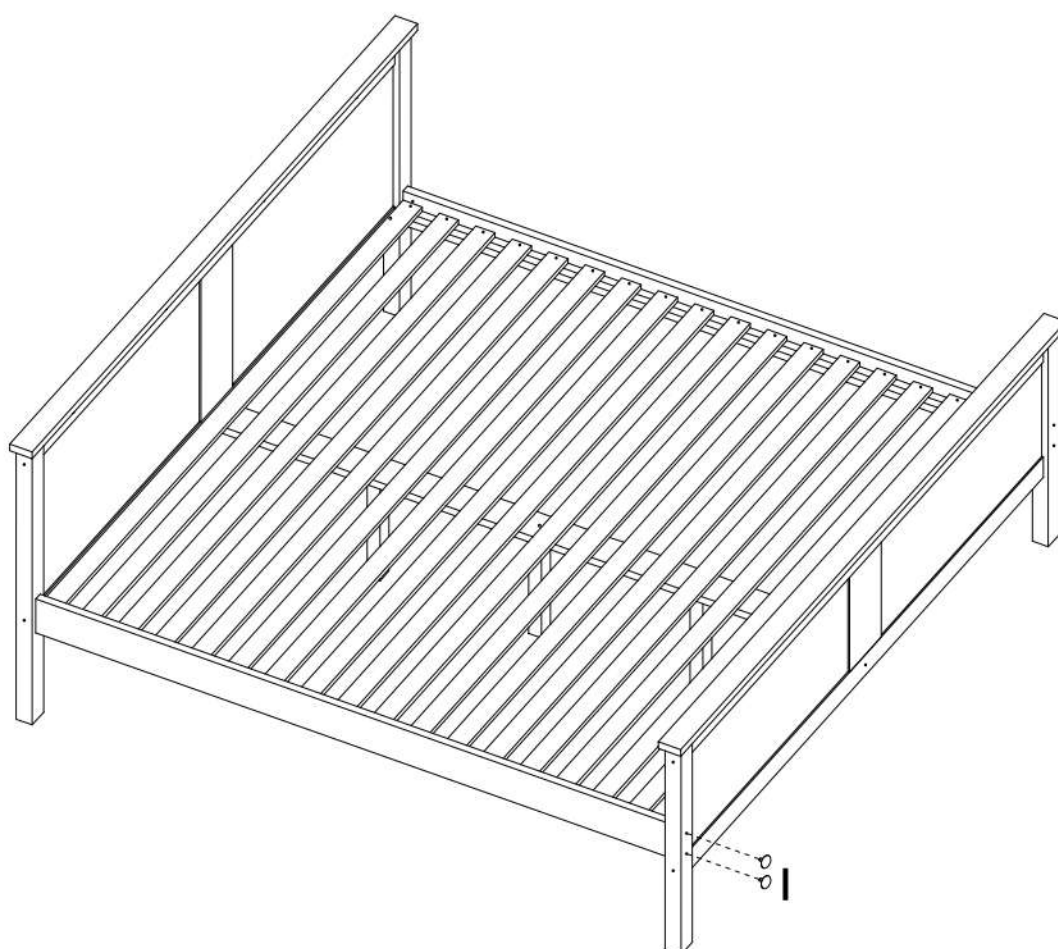

I

X16



Φ15