




SK NÁVOD NA MONTÁŽ
 CZ MONTÁŽNÍ NÁVOD
 HU SZERELÉSI UTASÍTÁS
 DE MONTAGEANLEITUNG

RO - INSTRUCTIUNI DE INSTALARE
 HR - UPUTE ZA UGRADNJU
 SI - NAVODILA ZA NAMESTITEV



NORAH




	1390	mm
	1440	
	330	

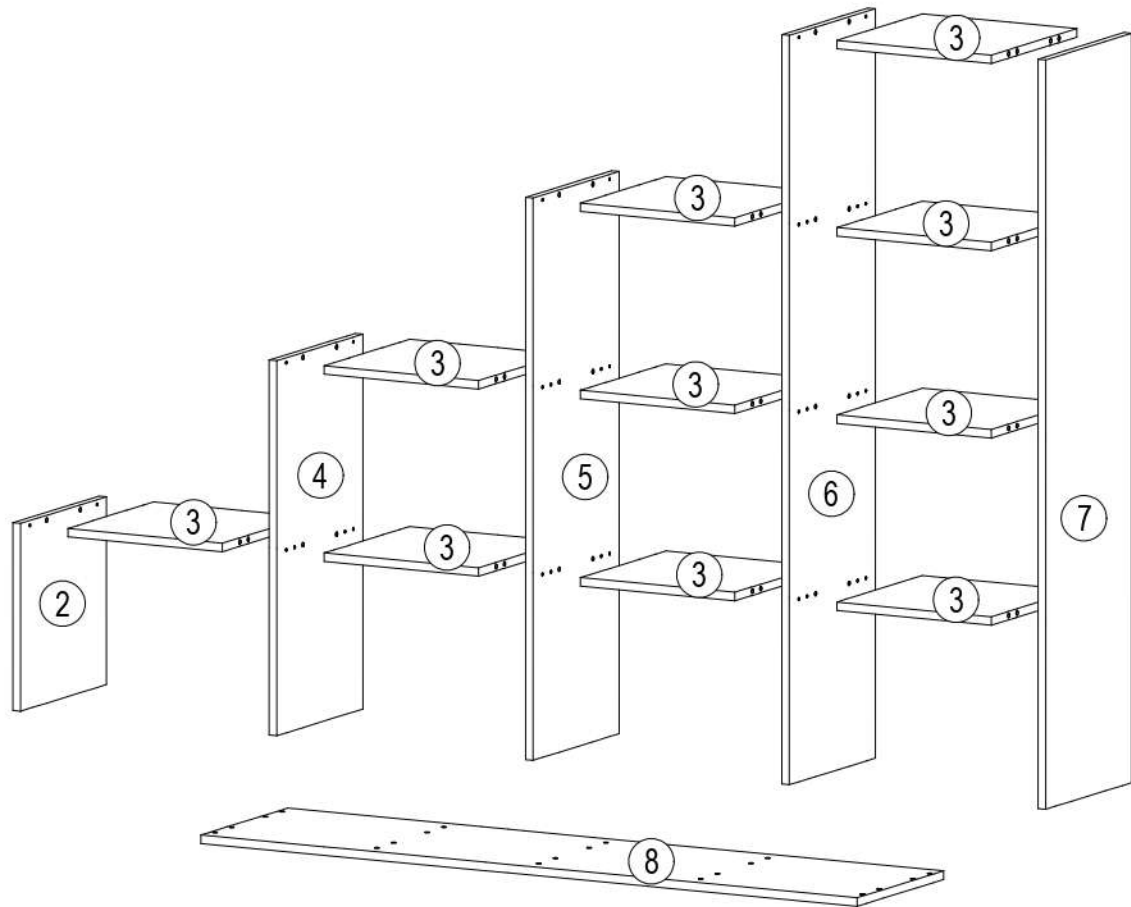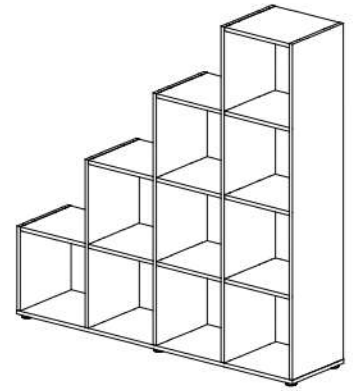09526	②	353*328*16	1x	1/1
09221	③	327*326*16	10x	1/1
09222	④	705*328*16	1x	1/1
09223	⑤	1057*328*16	1x	1/1
09224	⑥	1409*328*16	1x	1/1
09225	⑦	1409*328*16	1x	1/1
09220	⑧	1390*330*16	1x	1/1



27000,00		70013,01		70021,01		22250,00		22300,00		30080,00			
A	50x	B	40x	C	40x	D	40x	E	6x	F	10x	G	6x



		
Ø8x30		
A 50x	C 40x	D 40x

