



MONTÁŽNY NÁVOD

Model : FP - 02

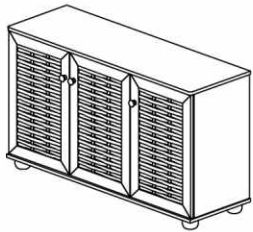


Ukážka inštalácie MINIFIX spoja

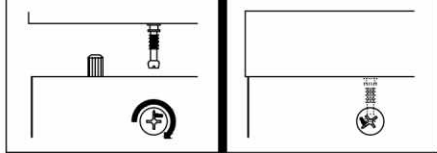


KOMPONENTY			
Č		POPIS	
1		8x25mm SPOJ. KOLÍK	14Ks
2		15MM Minifix spoj	6 Setov
3		M4x38mm SKRUTKA	8Ks
4		FH M5x38mm SKRUTKA	5Ks
5		KRYTKA SKRUTKY	1Ks
6		POLICOVÝ KOLÍK	27Ks
7		DREVENÁ NOŽIČKA	5Ks
8		Z SVORKA	6Ks
9		3.1 x 20mm SKRUTKA	6Ks
10		MAGNET S DVOMI KOLIKAMI Magnet upevnite skrutkou M6x10 mm ZB	3 Sety
11		ÚCHYTKA NA DVERE (9988)	6Ks
12		M4x25mm ÚCHYTKA	3Ks


KOMPONENTY

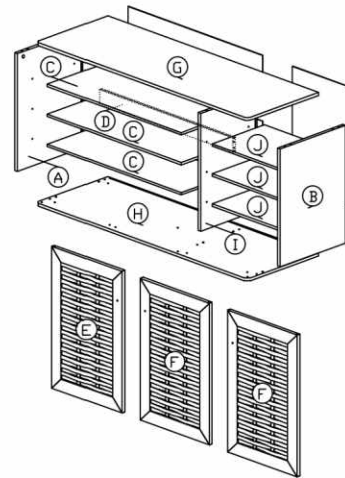


Krok 1

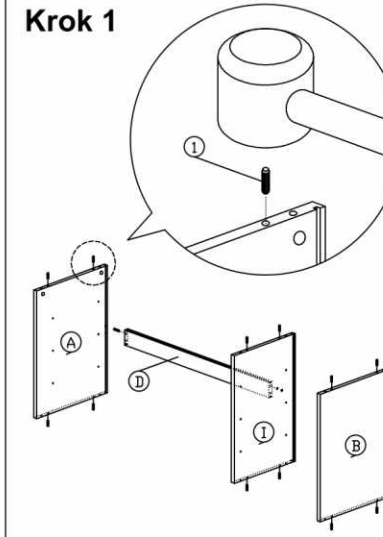


Krok 2

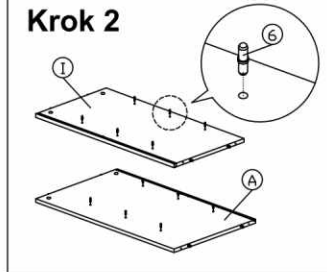


Krok 3

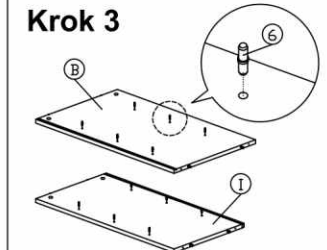


Krok 4

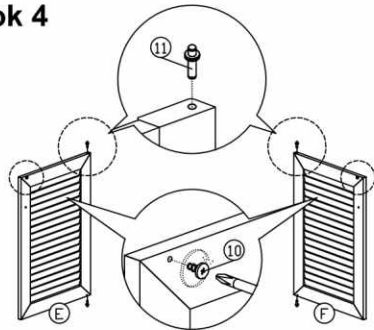


Krok 5

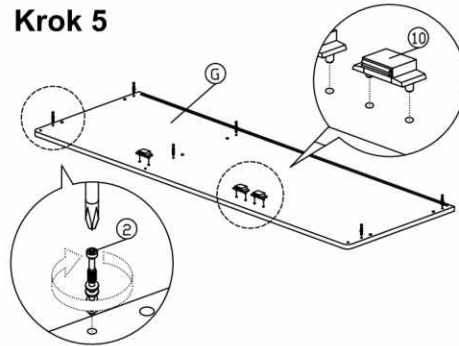


Krok 6

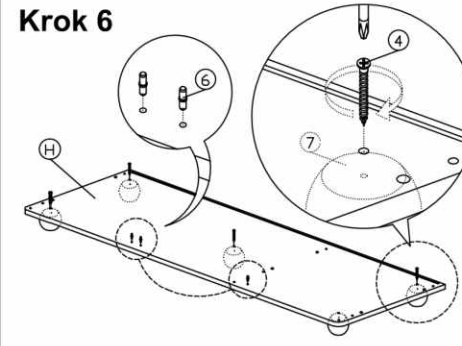


Krok 7

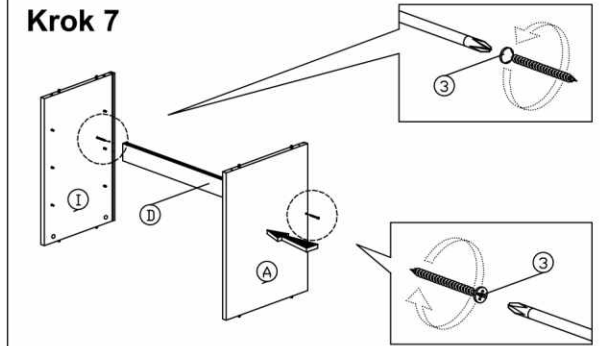


Krok 8

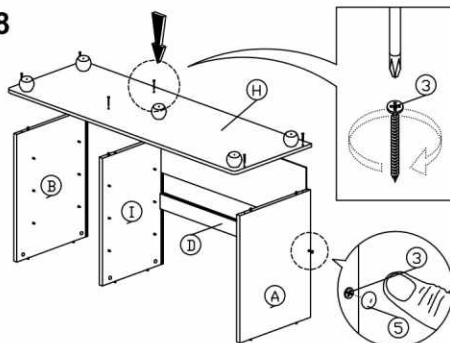

Krok 9

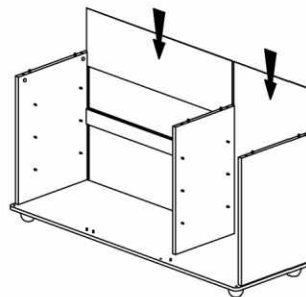


Krok 10

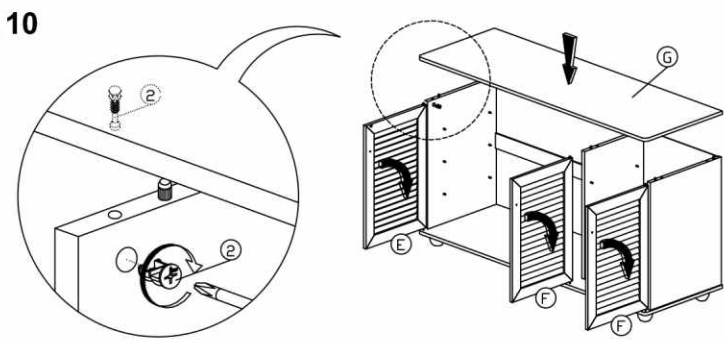


MONTÁŽNÝ NÁVOD


Krok 11

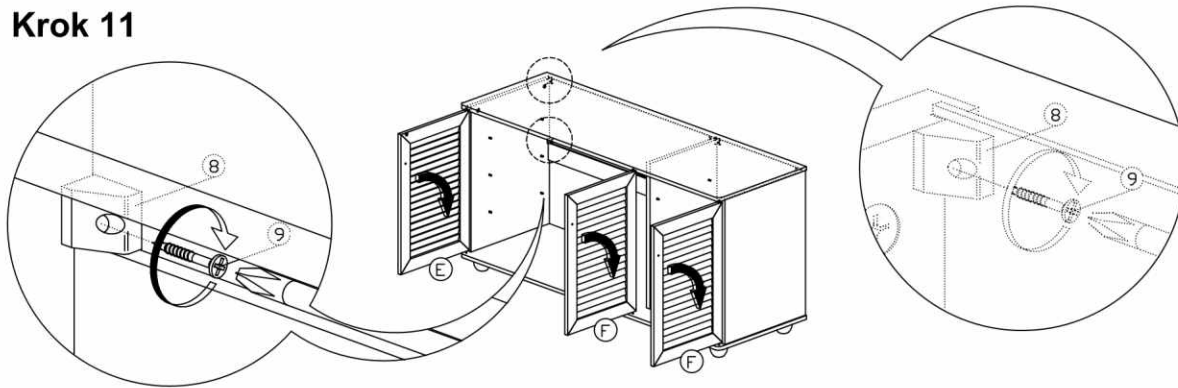


Krok 12

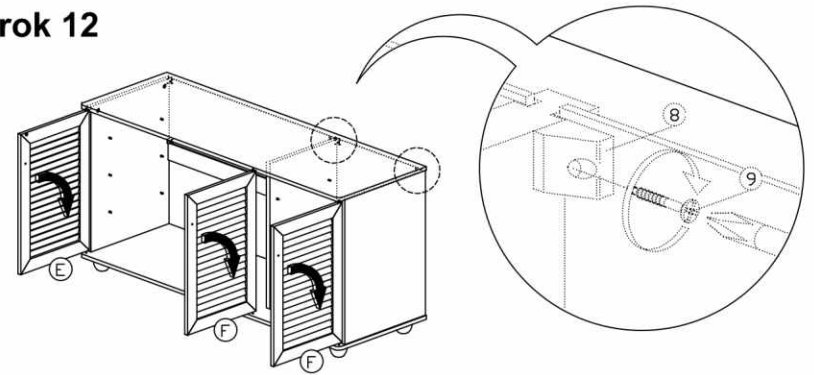

Krok 13

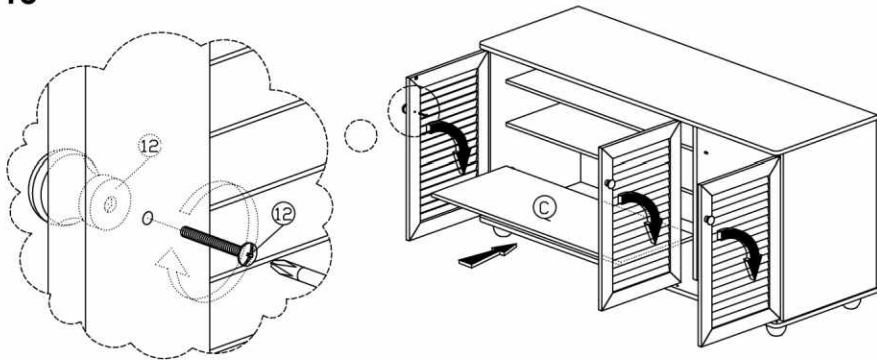

Krok 15

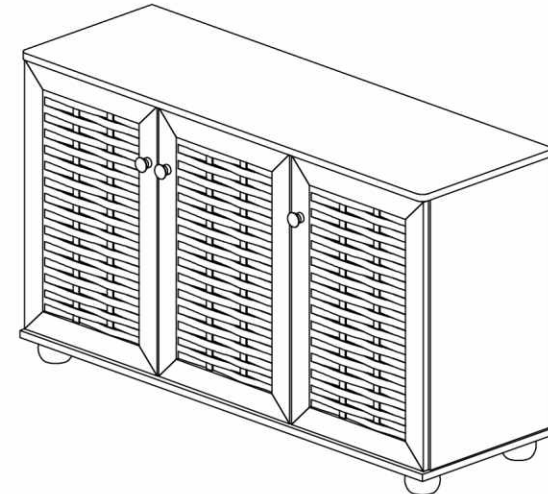

Krok 14

