


SK NÁVOD NA MONTÁŽ
 CZ MONTÁŽNÍ NÁVOD
 HU SZERELÉSI UTASÍTÁS
 DE MONTAGEANLEITUNG

NENA KOMODA 1



	610	mm
	691	
	300	



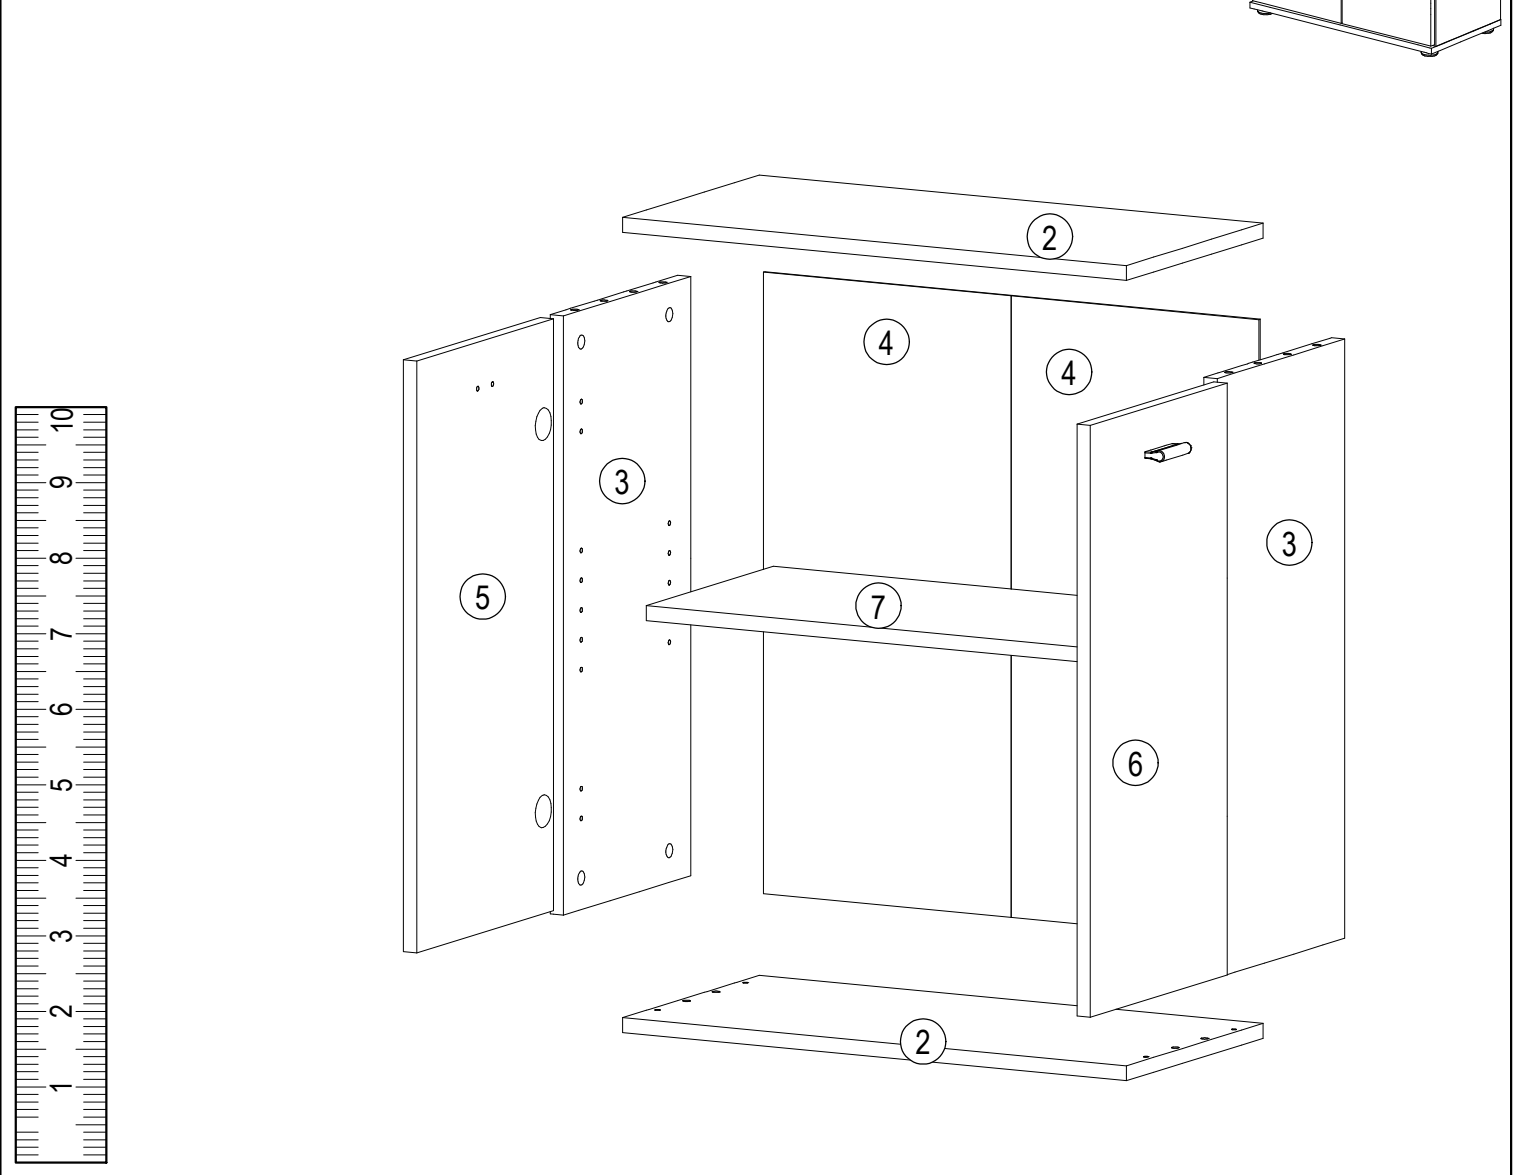






09193	②	610*298*16	2x	1/1
09194	③	644*278*16	2x	1/1
09195	④	668*300*2,5	2x	1/1
09196	⑤	636*298*16	1x	1/1
09424	⑥	636*298*16	1x	1/1
09197	⑦	576*277*16	1x	1/1


















27000,00 	32008,00 	22243,00 	22250,00 	30080,00 	21102,00 	35101,01 	36002,07 	36002,07 	34906,00
C 8x	D 2x	E 8x	F 4x	G 4x	J 25x	K 4x	L 4x	M 4x	N 8x

70013,01 	70021,01 	22400,00
O 8x	P 8x	R 4x



								
Ø8x30		Ø3,5x15						M4x30
C 8x	D 2x	E 8x	K 4x	L 4x	M 4x	O 8x	P 8x	R 4x

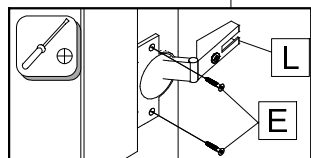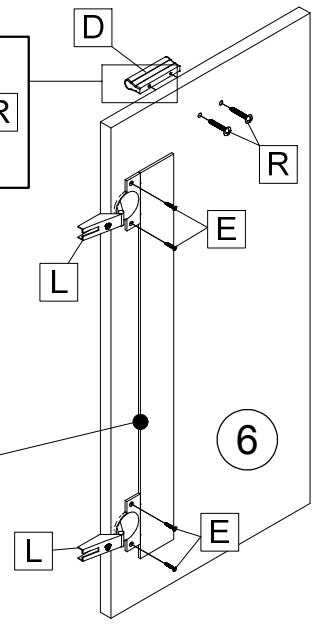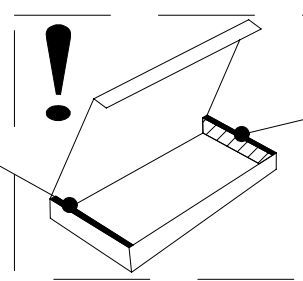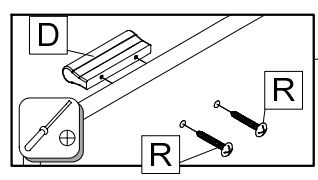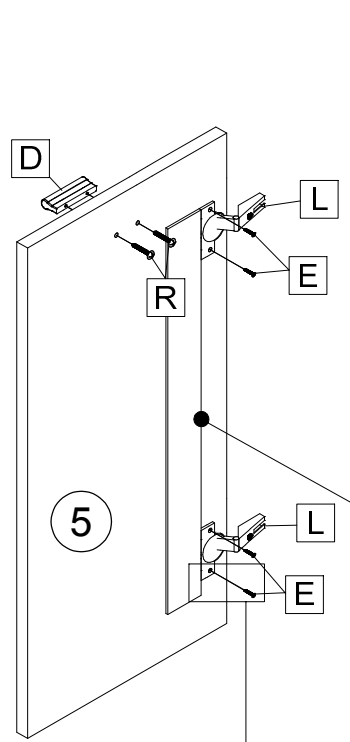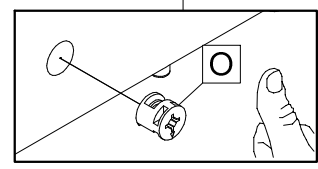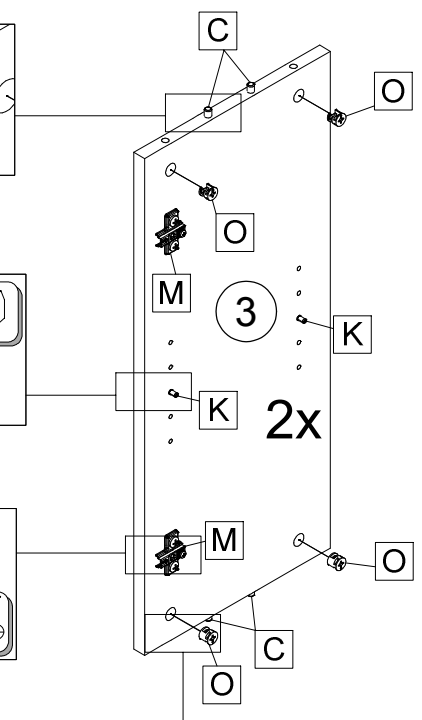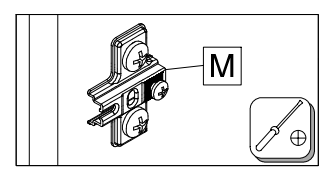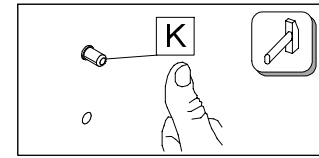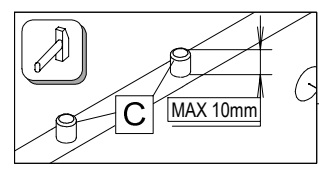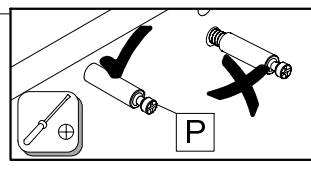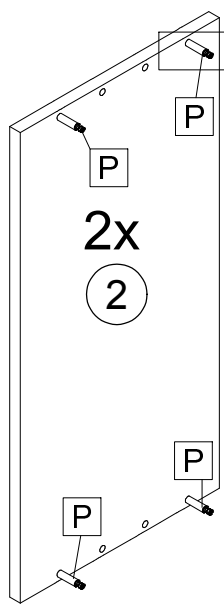

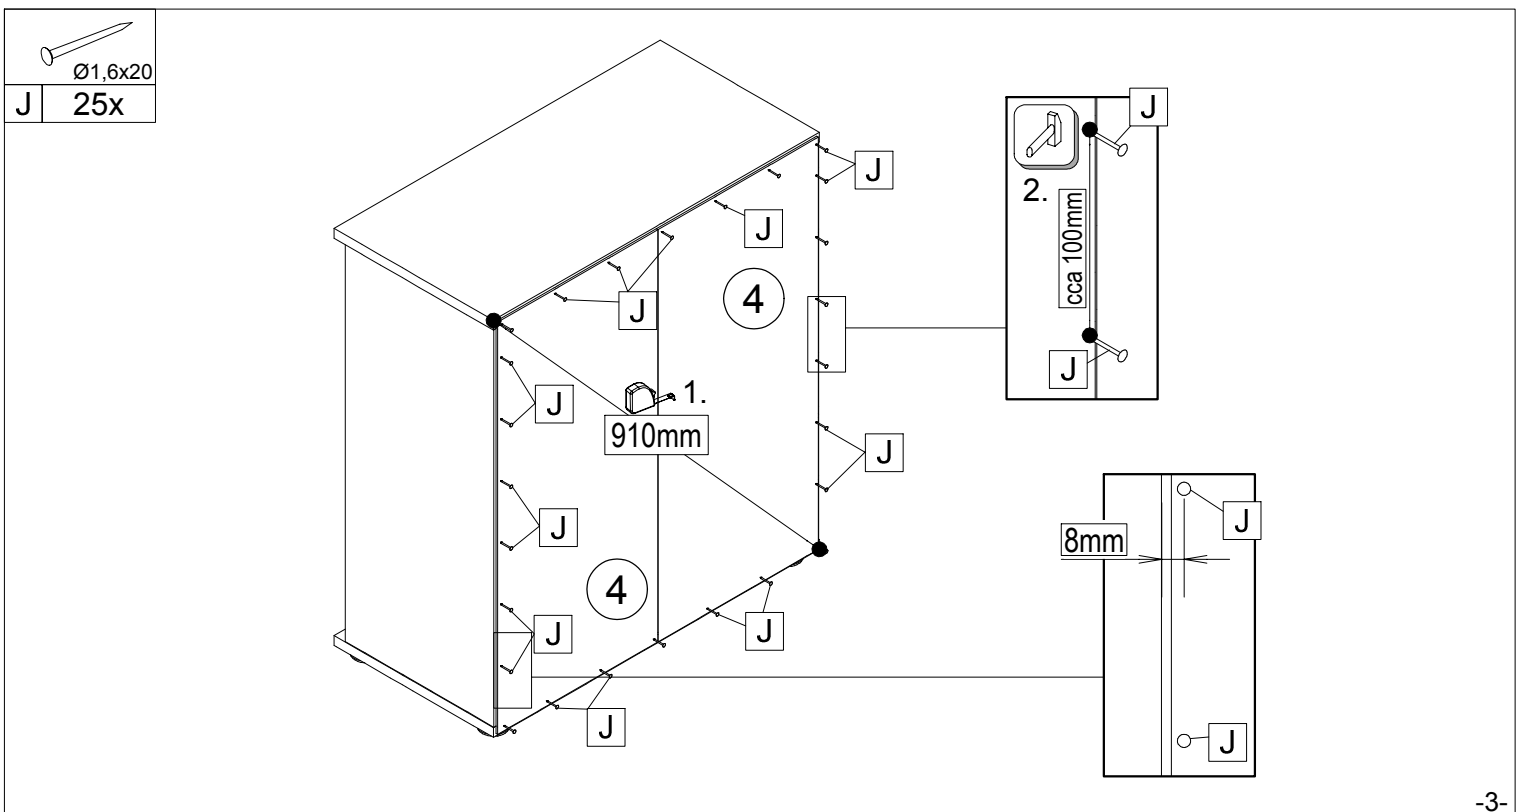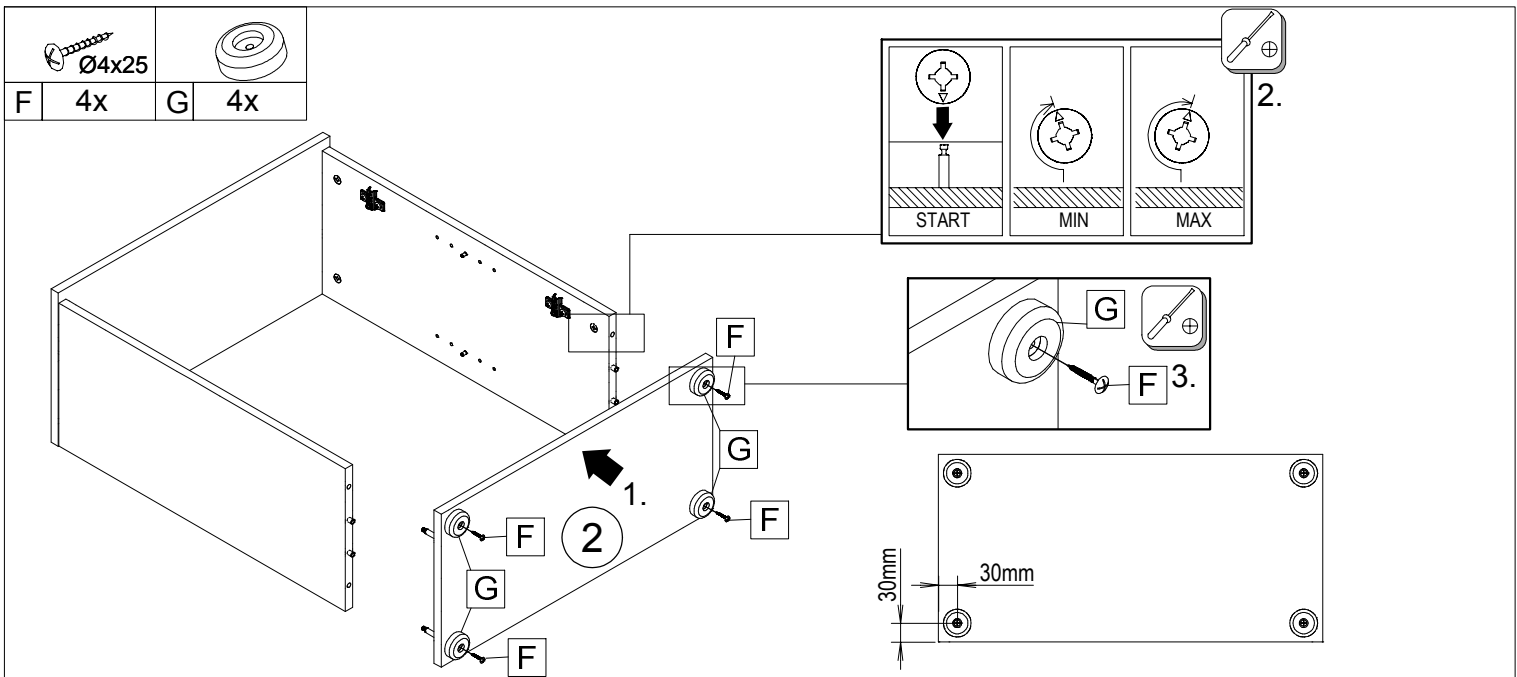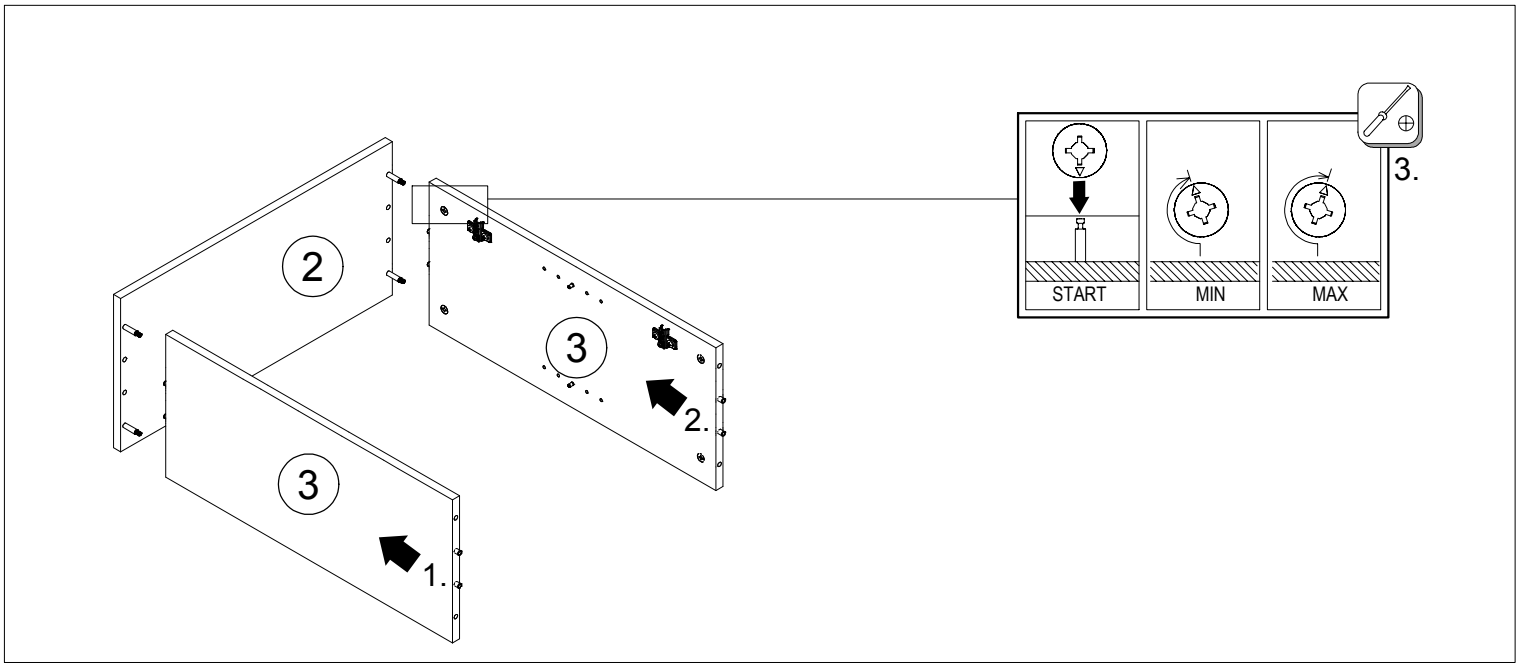



N | 8x

