


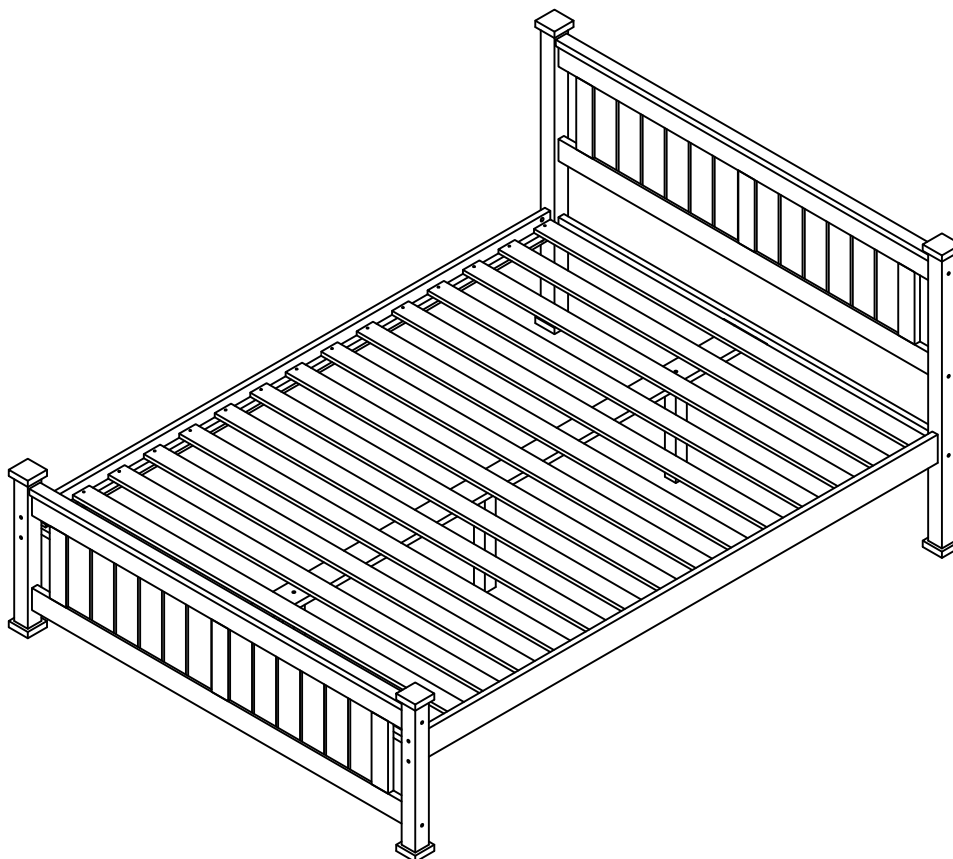









LUCAS - POSTEĽ - montážny návod B1054



160x200cm






Súčiastky


A	  M6x90mm	18	E	 	02
B	 M6	18	F	 $\Phi 4\text{mm}$	01
C	 $\text{\O}8 \times 30\text{mm}$	38	G	 $\text{\O}7 \times 60\text{mm}$	03
D	  $\text{\O}4 \times 30\text{mm}$	34			

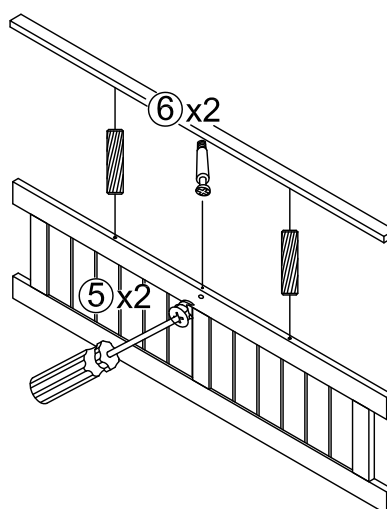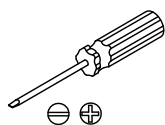


Krok 1




E	 	02
C	 $\text{\O}6 \times 30\text{mm}$	04

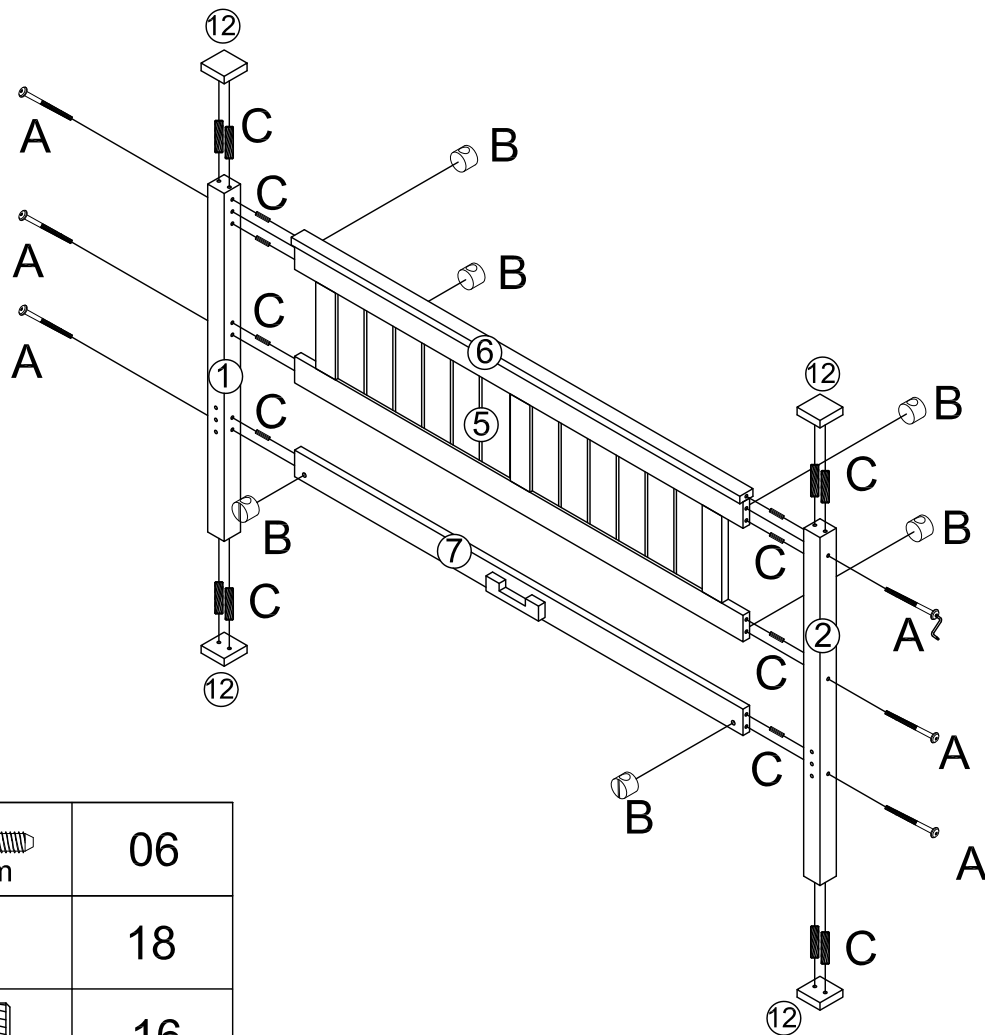


Krok 2




A	 M6x90mm	06
B	 M6	18
C	 Ø8x30mm	16

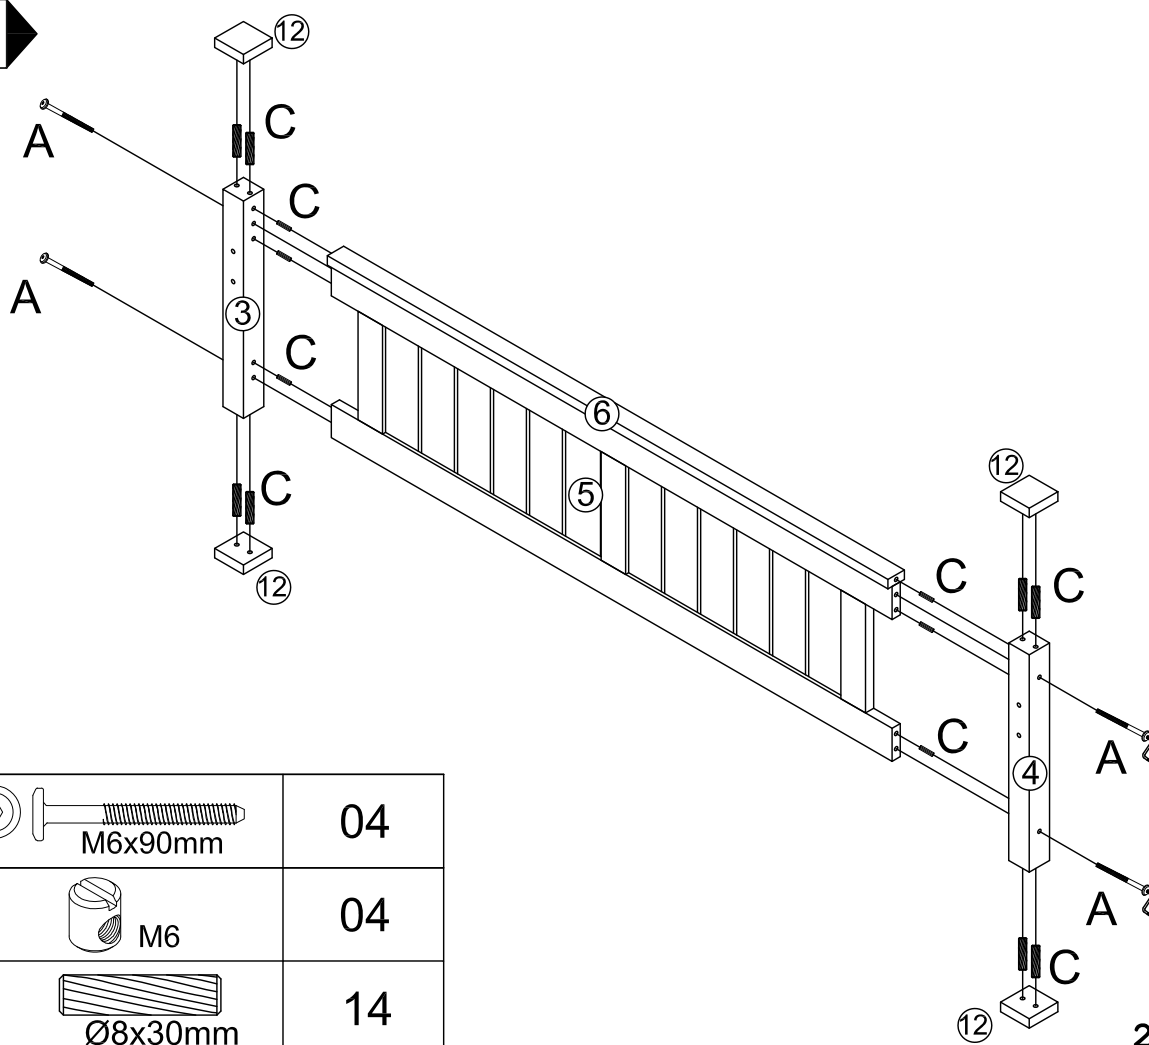Krok 3




A	 M6x90mm	04
B	 M6	04
C	 Ø8x30mm	14

Krok 4


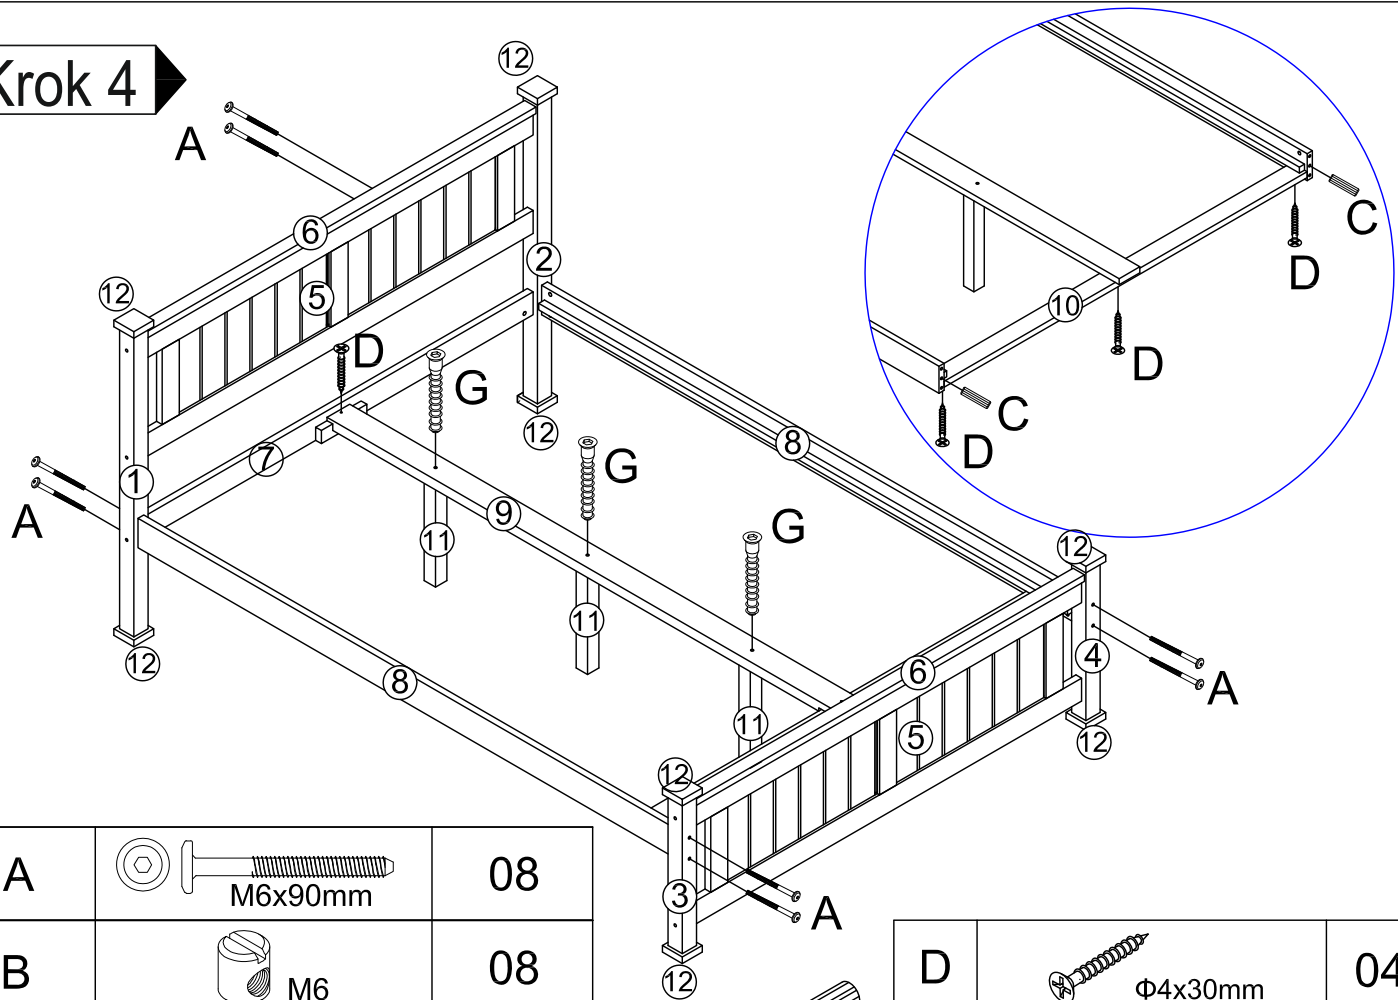


A	M6x90mm	08
B	M6	08
C	Ø8x30mm	04

D	Φ4x30mm	04
G	Φ7x60mm	03

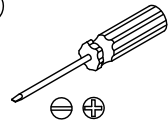

Krok 5

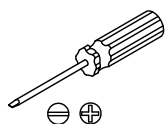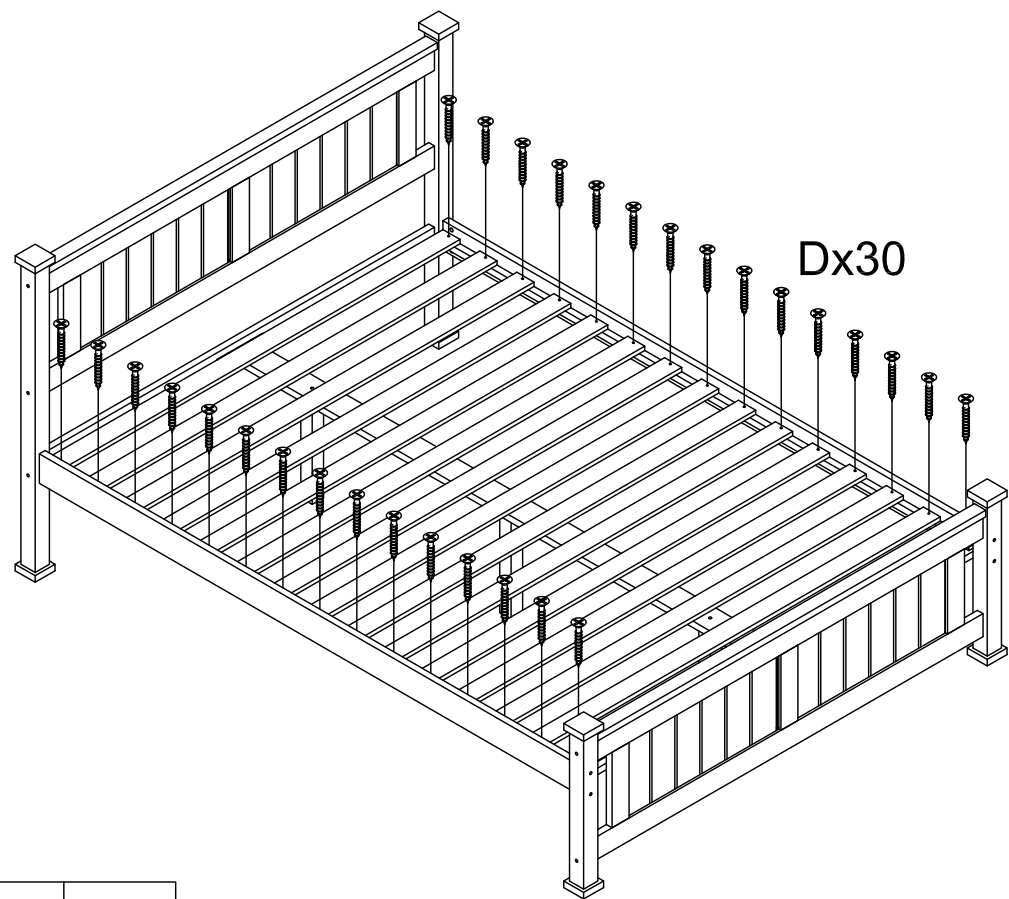

D	Φ4x30mm	30
---	---------	----