



SK NÁVOD NA MONTÁŽ
 CZ MONTÁŽNÍ NÁVOD
 HU SZERELÉSI UTASÍTÁS
 DE MONTAGEANLEITUNG

JOHAN NEW 02-JH 311


	1000	mm
	735	
	674	

	 120 min		 PZ 2	 ≤ 0,5 kg	 3m	
--	-------------	--	----------	--------------	--------	--





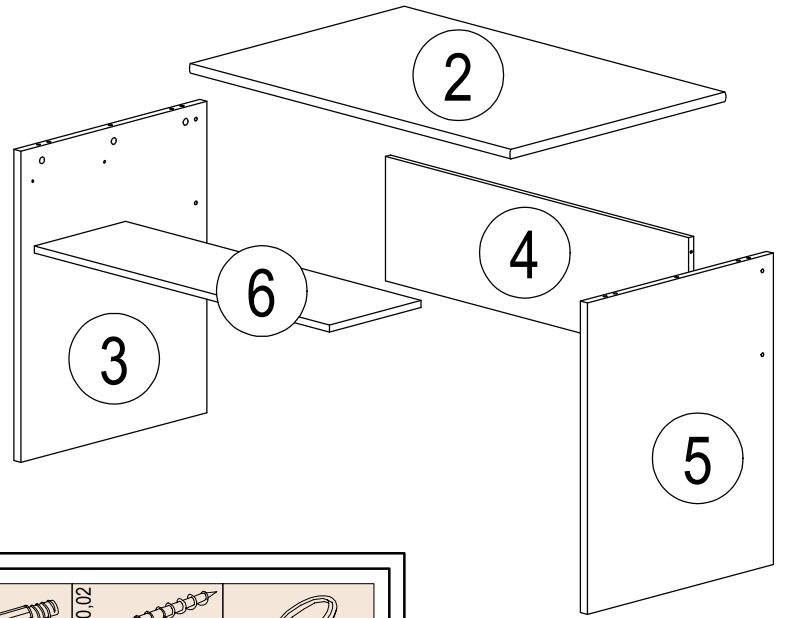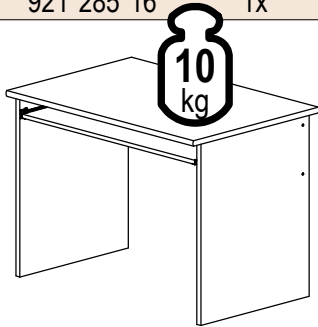ID	ID			
12821	②	1000*674*22	1x	1/1
11621	③	713*580*22	1x	1/1
08802	④	946*285*16	1x	1/1
11485	⑤	713*580*22	1x	1/1
12823	⑥	921*285*16	1x	1/1





 22300,00 Ø7x50	 27000,00 Ø8x30	 30090,00	 70013,01 Ø15x13	 70021,01	 22240,02 Ø3,5x15	
A 4x	B 4x	C 4x	D 6x	E 6x	F 6x	G 6x
	 22705,00 Ø6,3x8	 33003,04 L=300mm	 33003,04 L=300mm			
H 4x	J 4x	K 1x	L 1x			



 Ø8x30		 Ø15x13		 Ø3,5x15	 Ø6,3x8	 L=300mm
B 4x	C 4x	D 6x	E 6x	F 2x	J 4x	K 1x

			
Ø7x50	Ø3.5x15		L=300mm
A 4x	F 4x	H 4x	L 1x

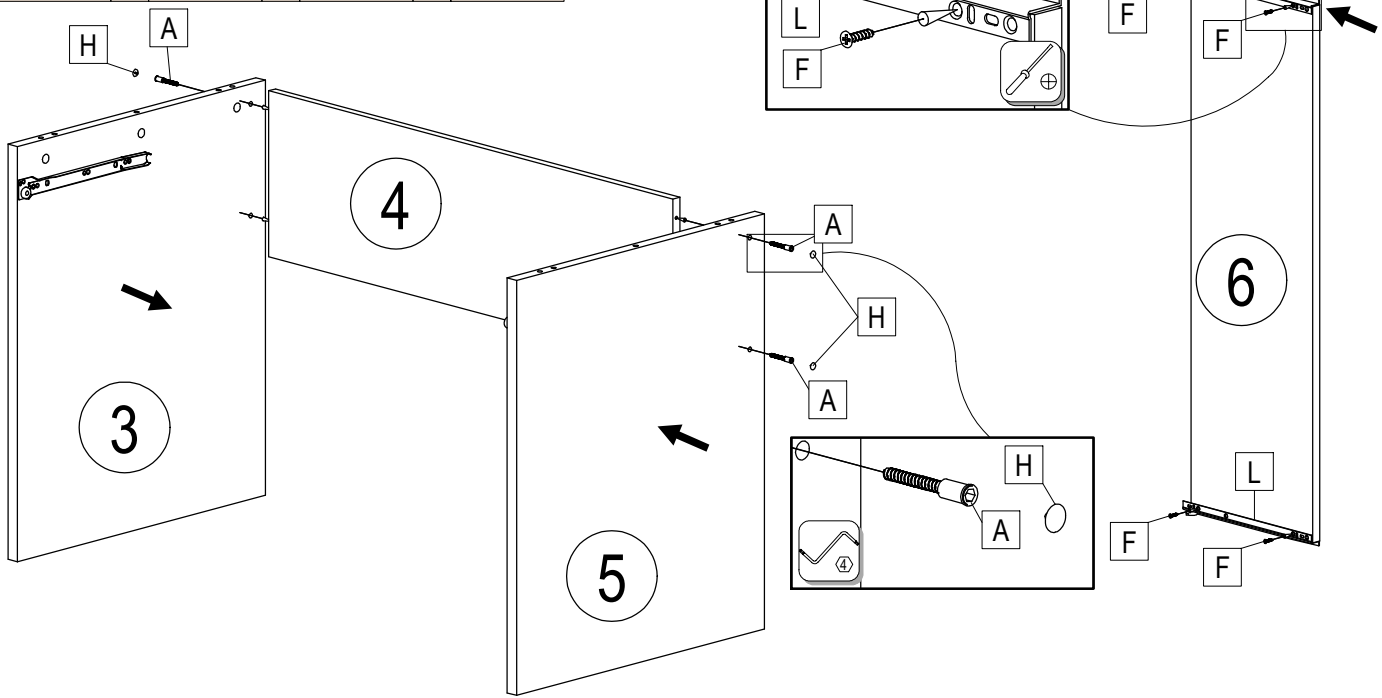


G 6x

