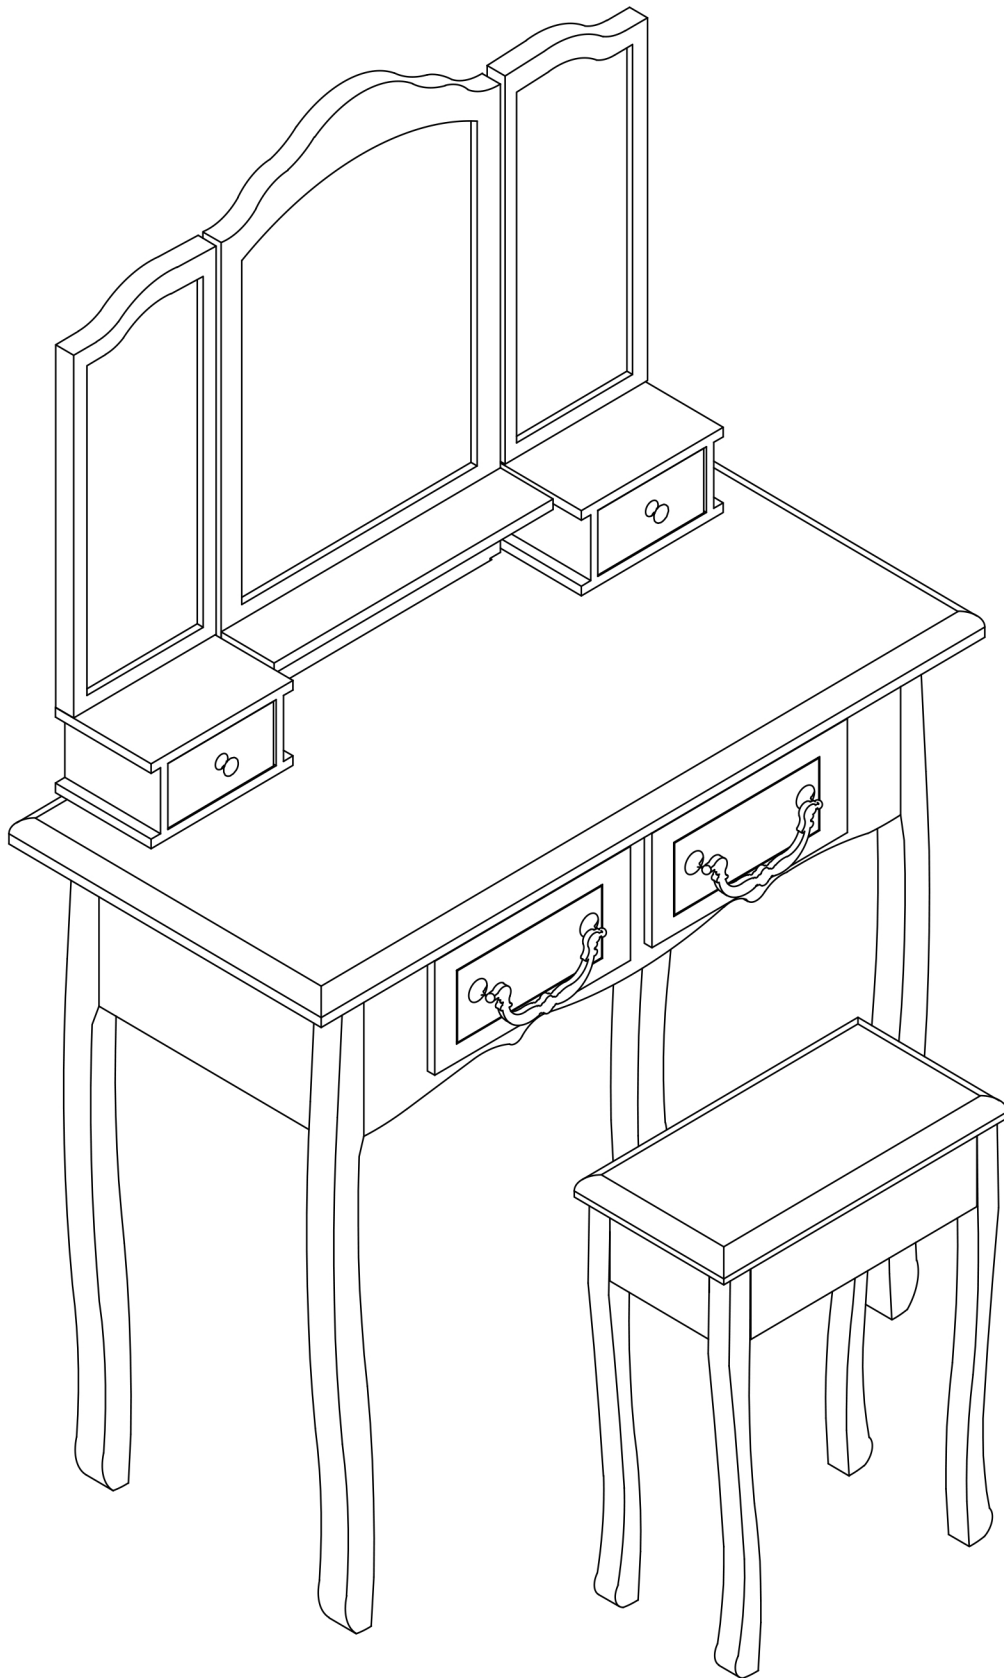




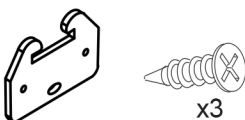









# REGINA NEW

Bw0103





















Navodila za namestitev




# Sestavni deli

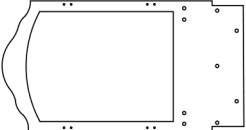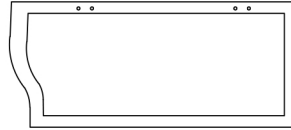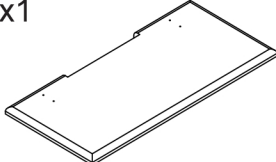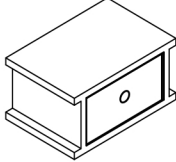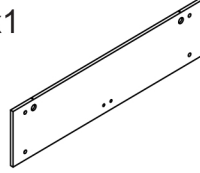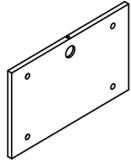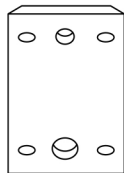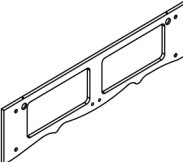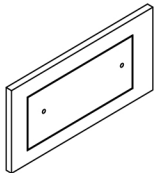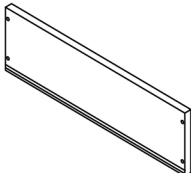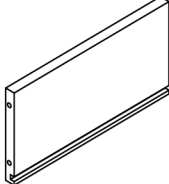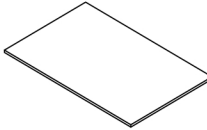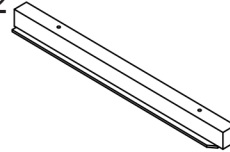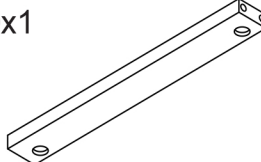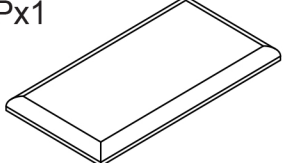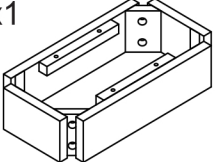1  6X50mm x16	2  4X25mm x6	3  x3 x2	4  4X18mm x16
5  x2	6  3X22mm x20	7  4X35mm x9	8  x4
9  x2	10  x2	11  6X30mm x4	


# Deli

Ax1 	Bx1 	Cx1 	Dx4 
Ex2 	Fx1 	Gx2 	Hx4 
Ix1 	Jx2 	Kx4 	Lx2 
Mx2 	Nx2 	Ox1 	Px1 
Qx1 	Rx4 	Sx1 	Tx1 


# 1

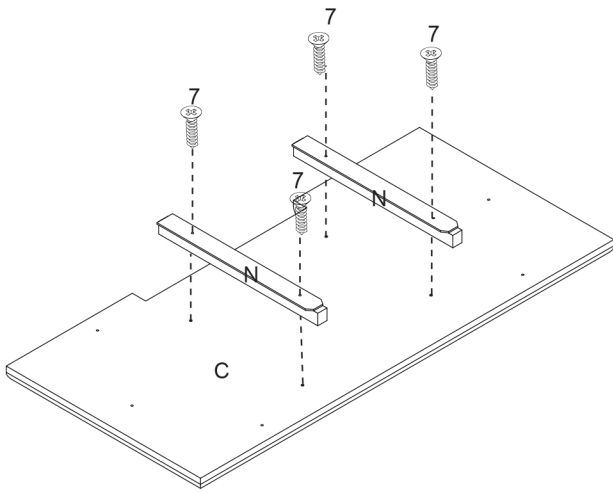


# 2

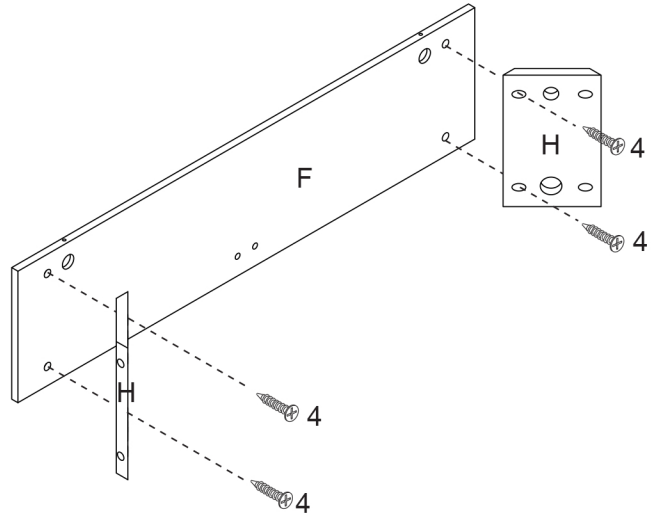


# 3

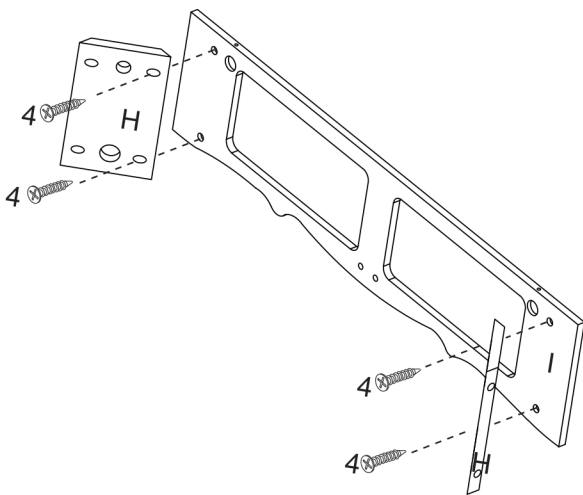


# 4

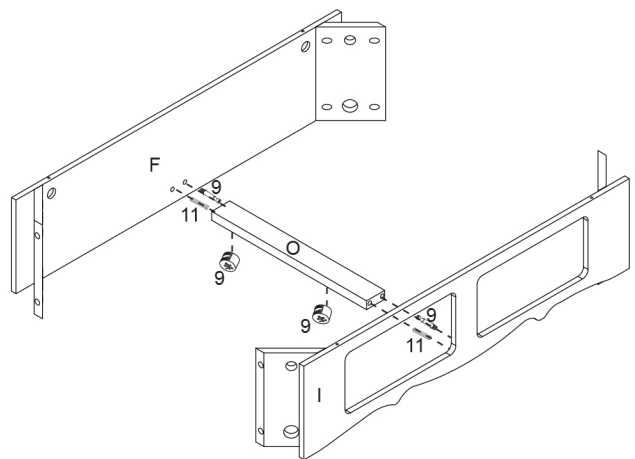


# 5

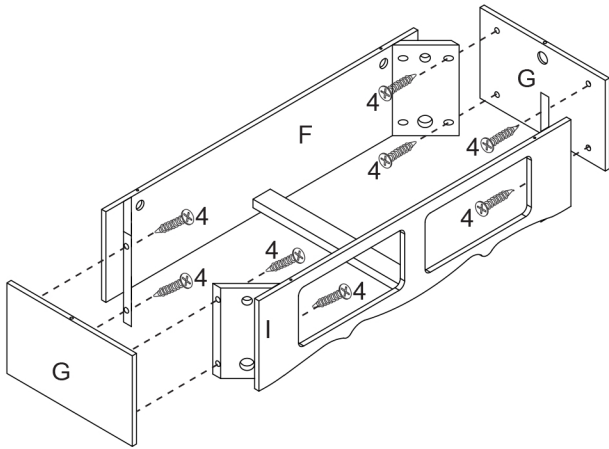


# 6

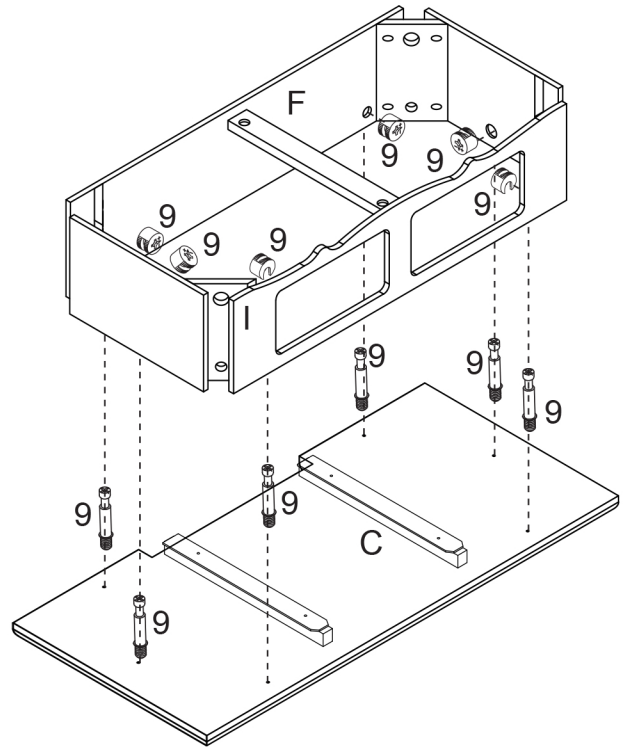

# 7

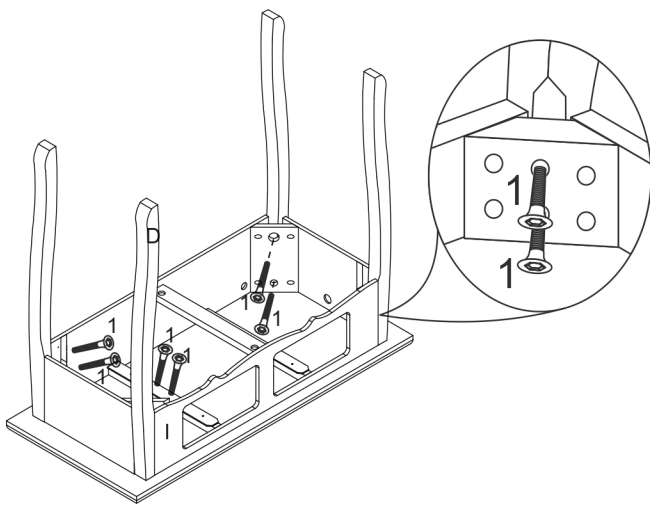


# 8

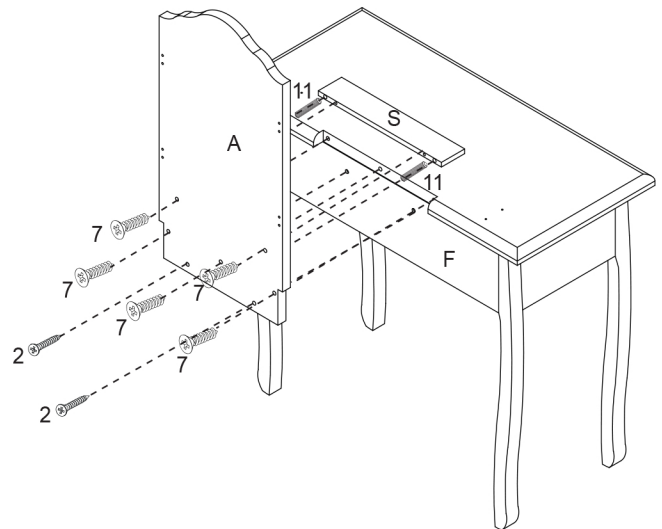






# 9

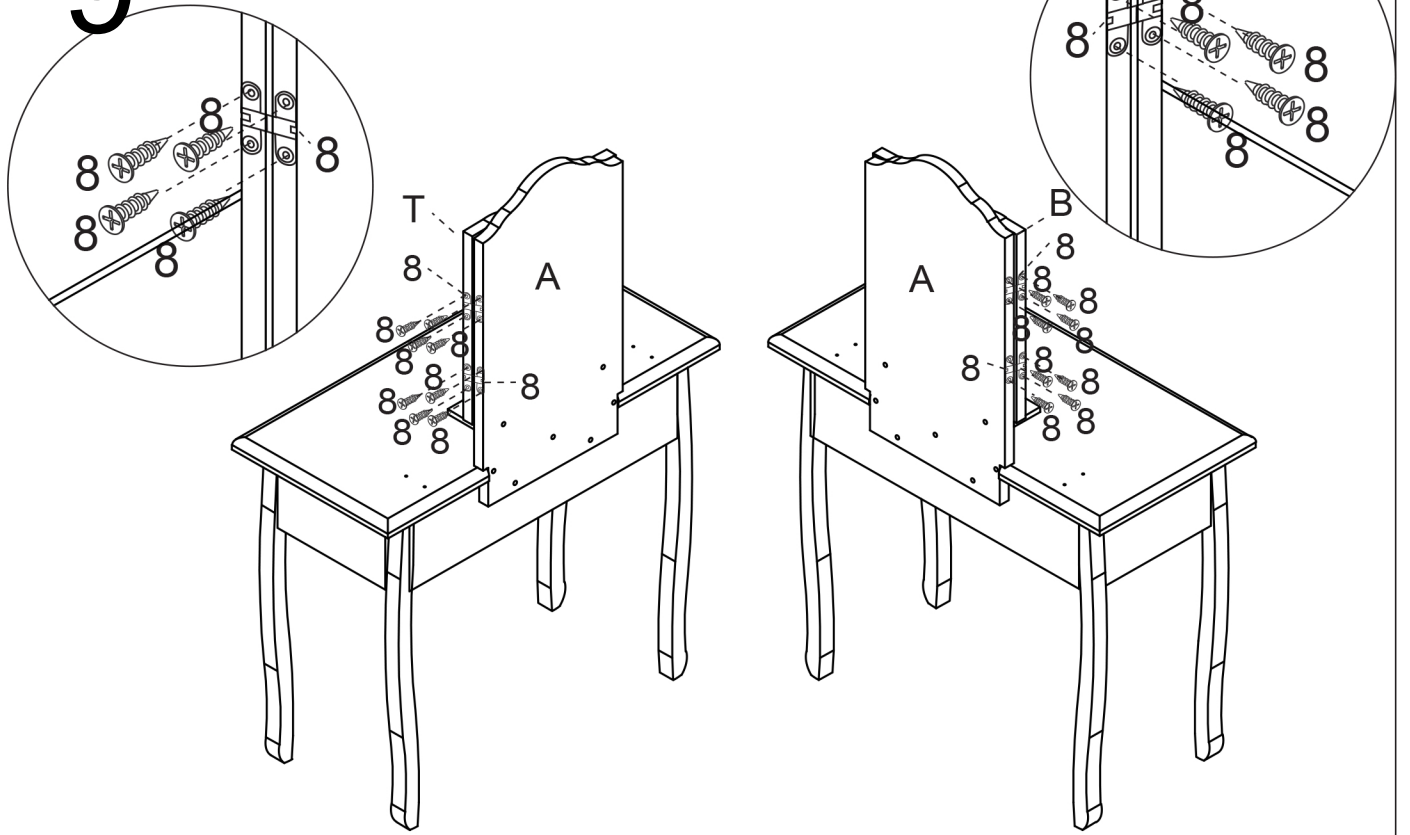



# 10

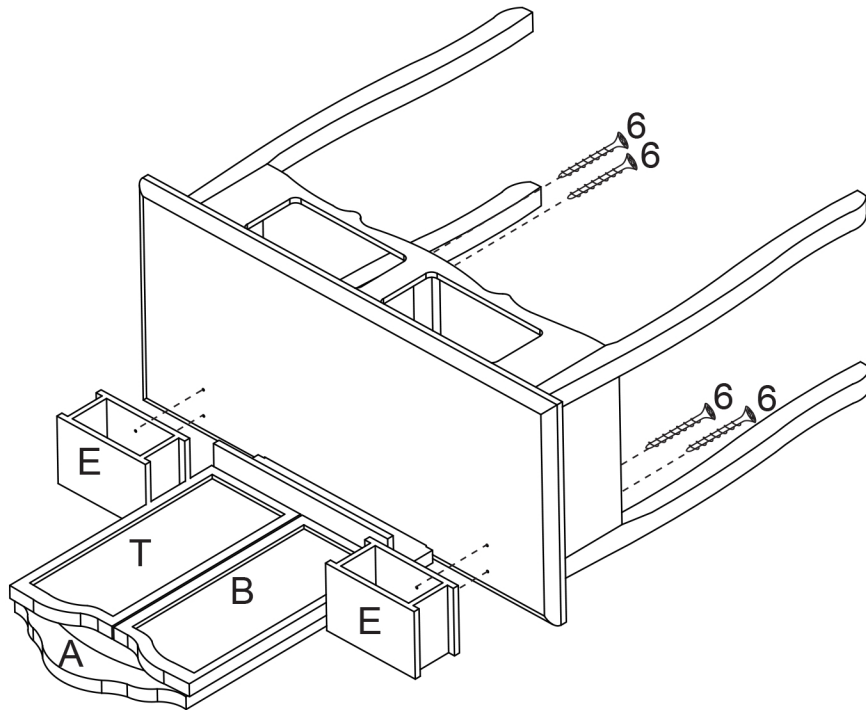


# 11

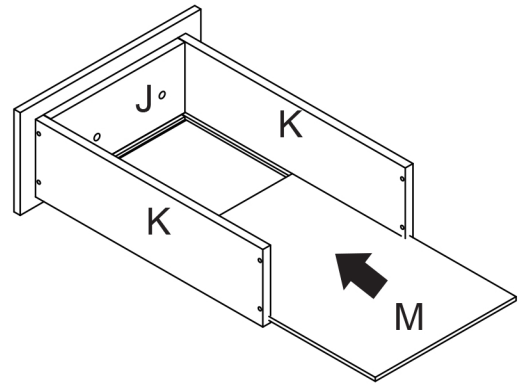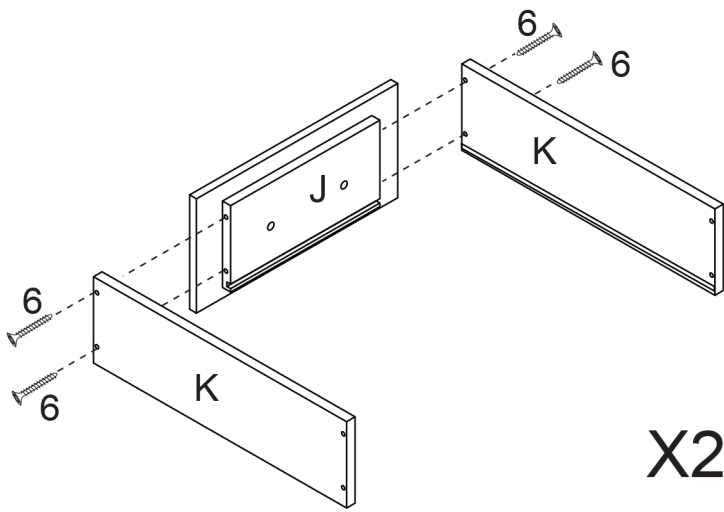


# 12

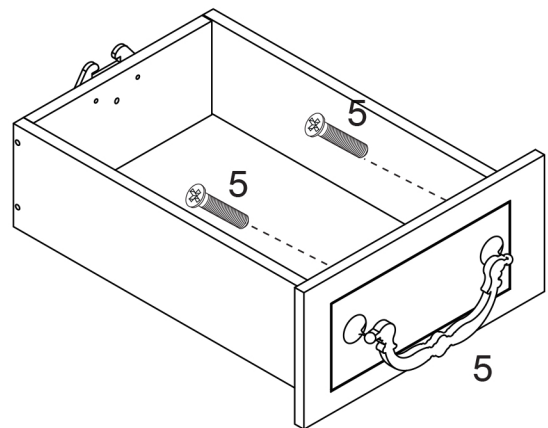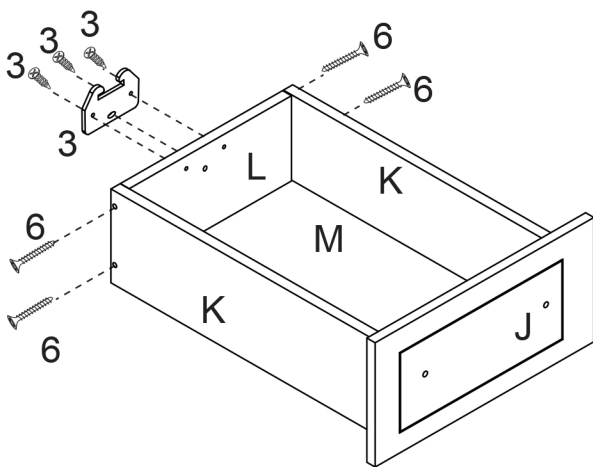



# 13

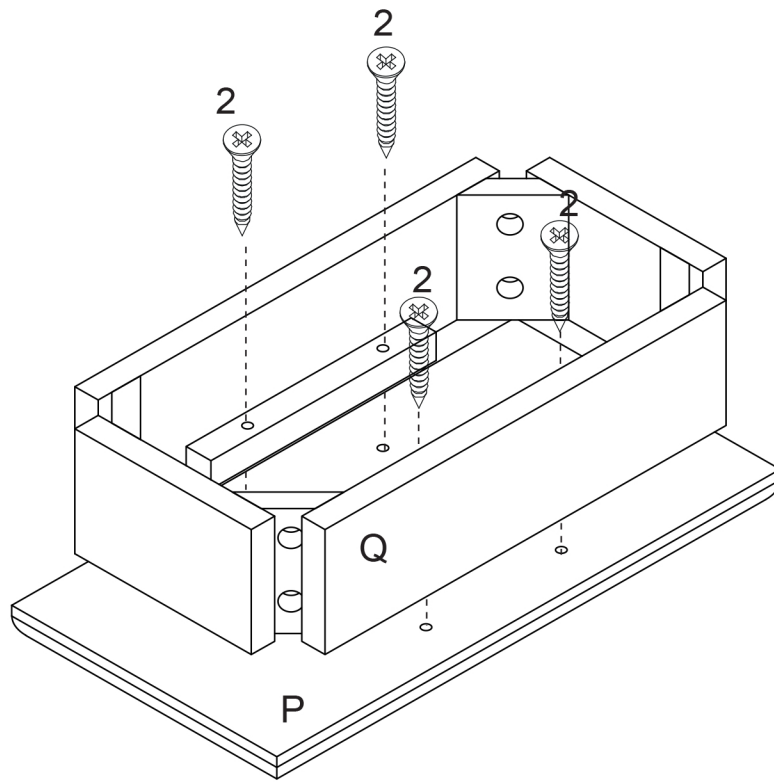

# 14

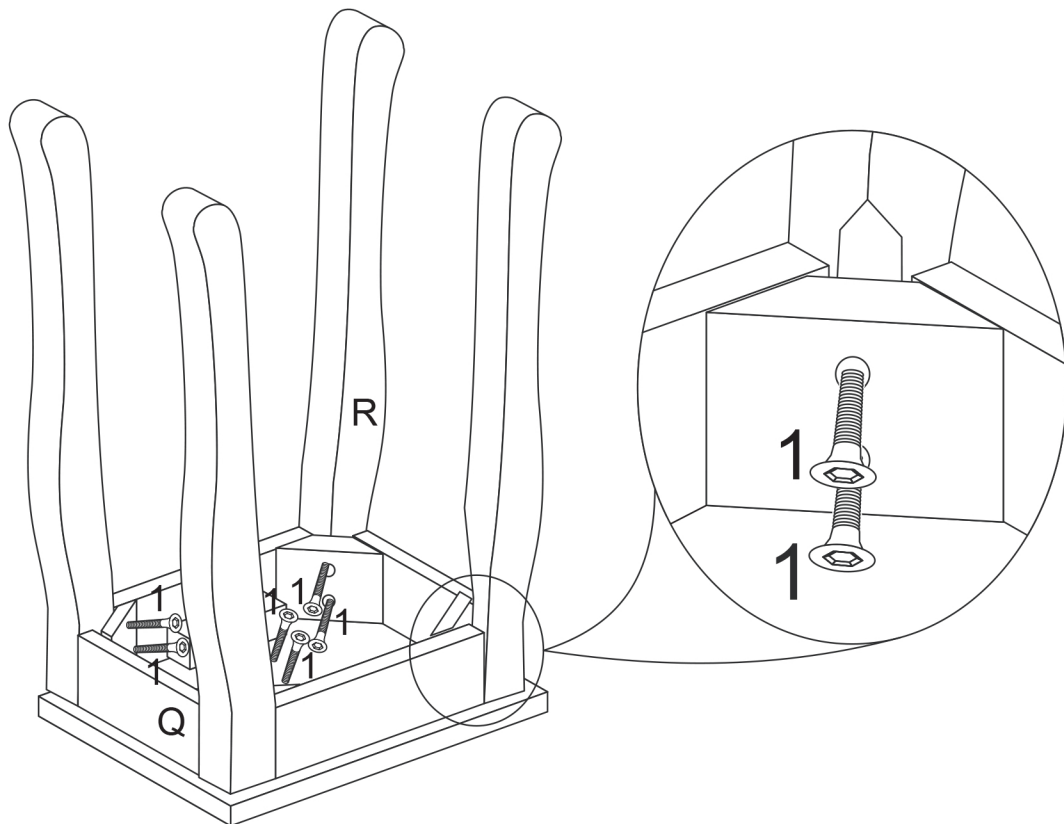

# 15

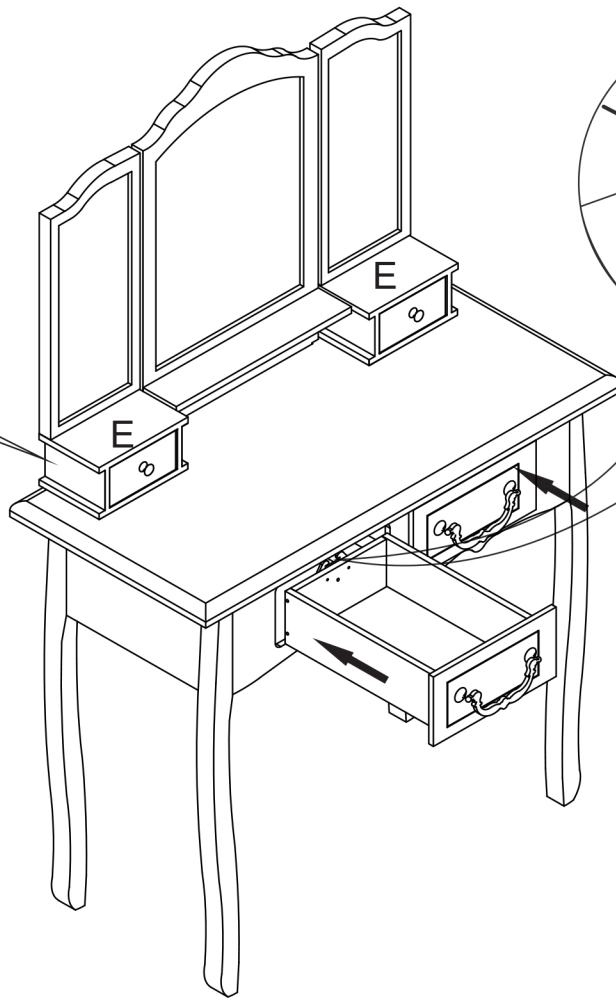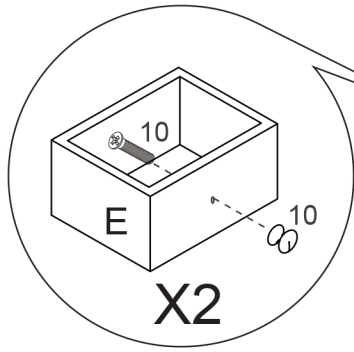

# 16

