


SAIDA



Ax1

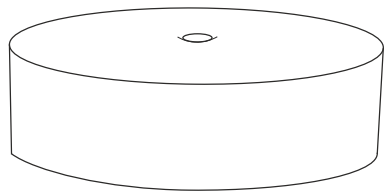

Bx4



SK: Ak je to potrebné, upravte výšku nôh pomocou tejto podložky.
HU: Ha szükséges, állítsa be a lábmagasságot ezzel az alátéttel.
RO: Dacă este necesar, reglați înălțimea picioarelor folosind acest accesoriu.

Cx4

