














REGINA NEW

Bw0103

















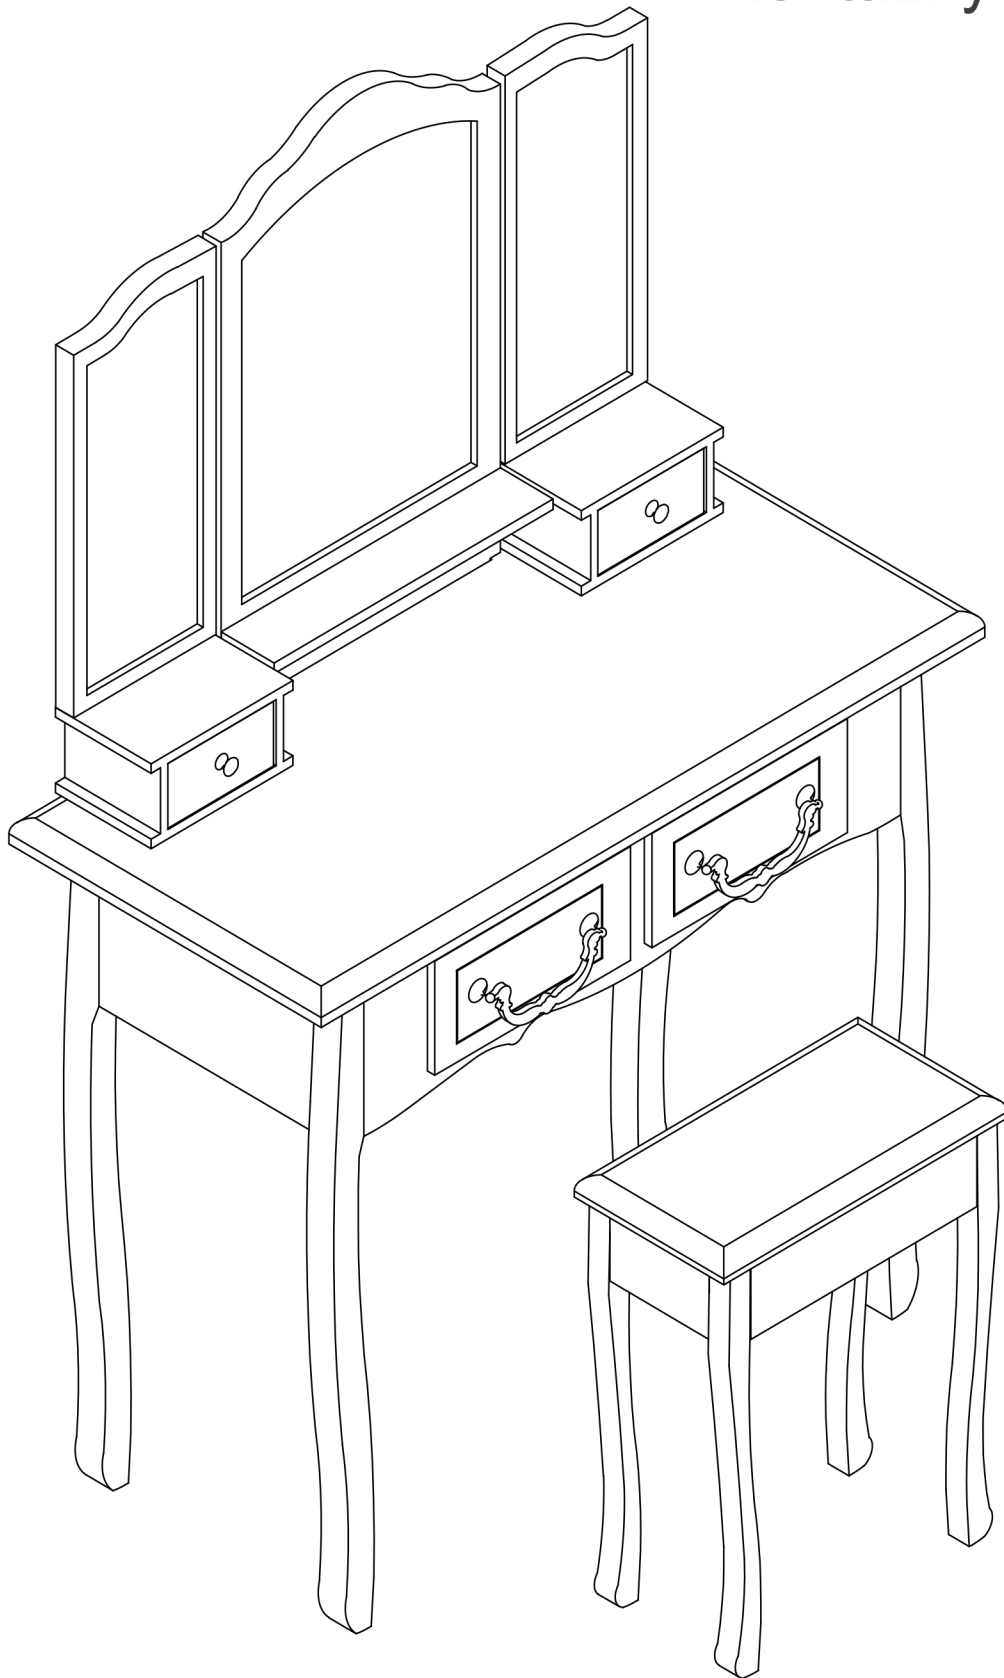



Montážny návod




Súčiastky

1  6X50mm x16	2  4X25mm x6	3  x3 x2	4  4X18mm x16
5  x2	6  3X22mm x20	7  4X35mm x9	8  x4
9  x8	10  x2	11  6X30mm x4	

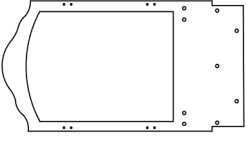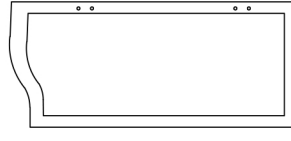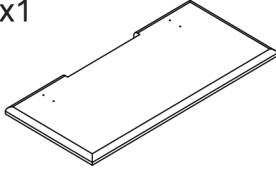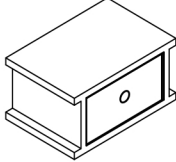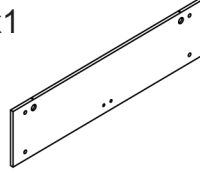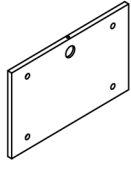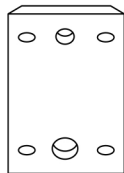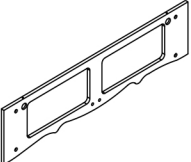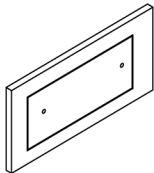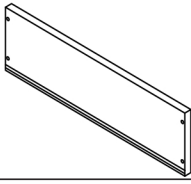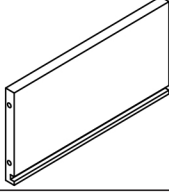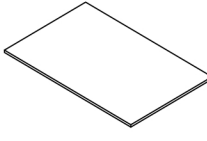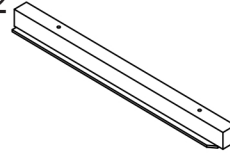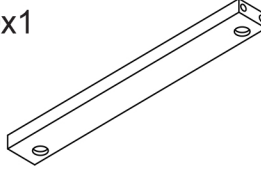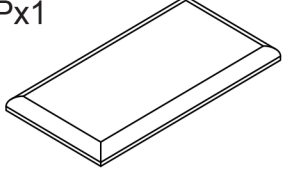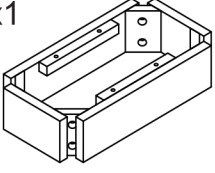
Časti

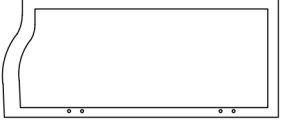Ax1 	Bx1 	Cx1 	Dx4 
Ex2 	Fx1 	Gx2 	Hx4 
Ix1 	Jx2 	Kx4 	Lx2 
Mx2 	Nx2 	Ox1 	Px1 
Qx1 	Rx4 	Sx1 	Tx1 


1

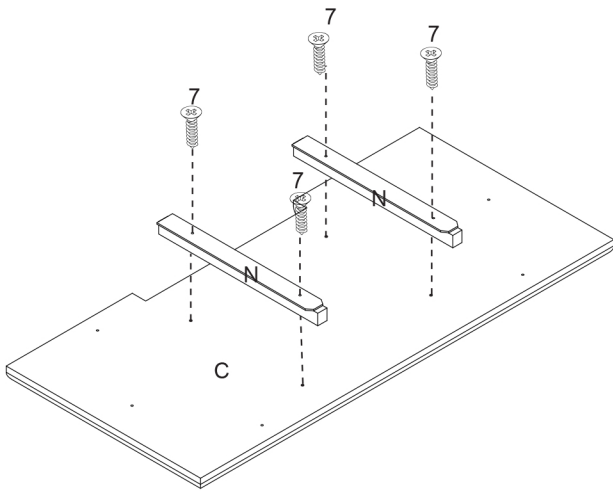


2

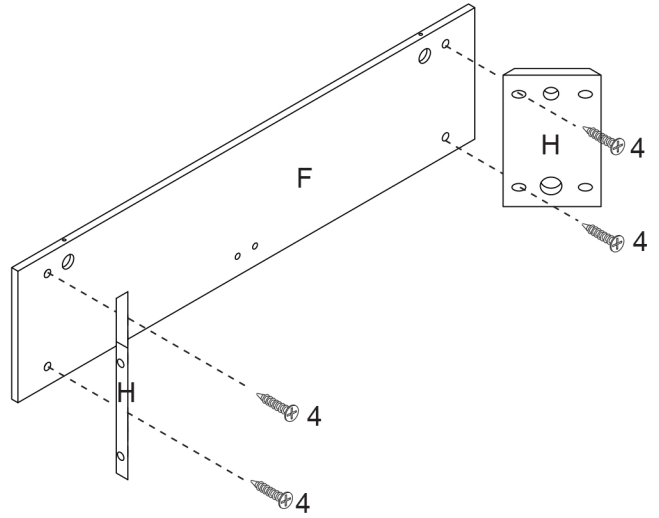


3

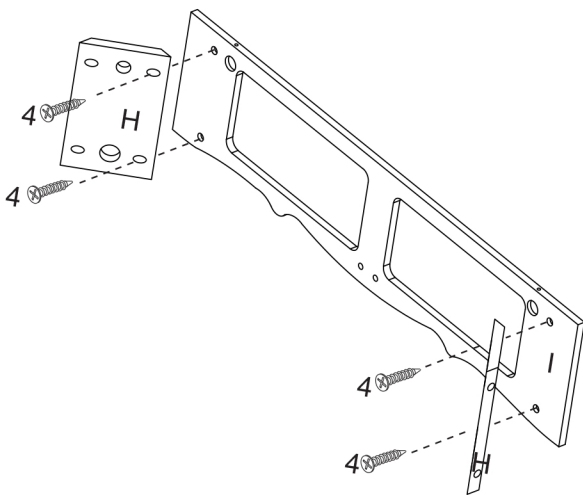


4

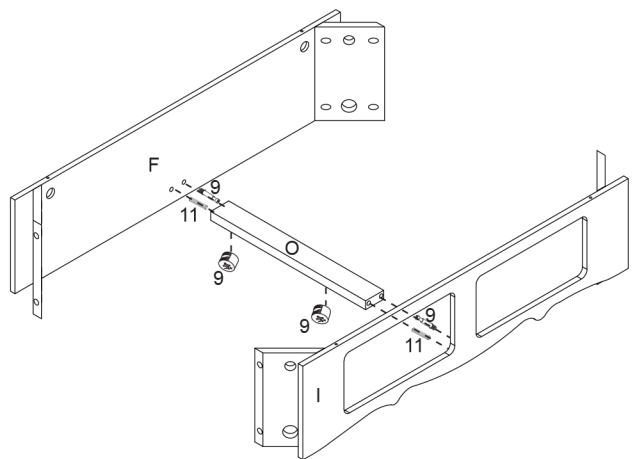


5

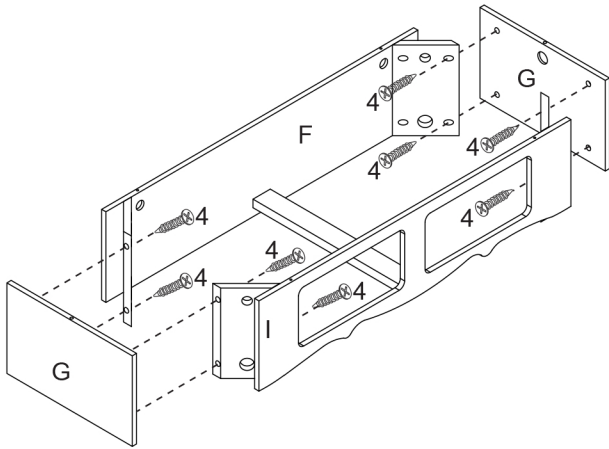


6

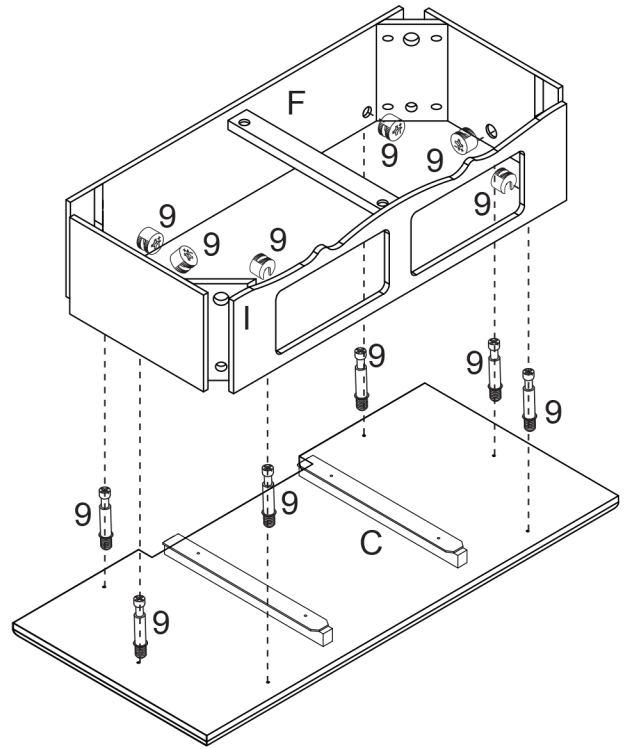


7

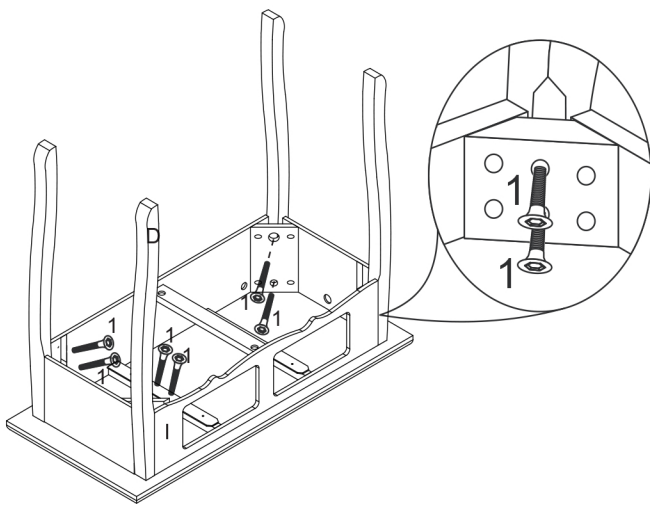


8

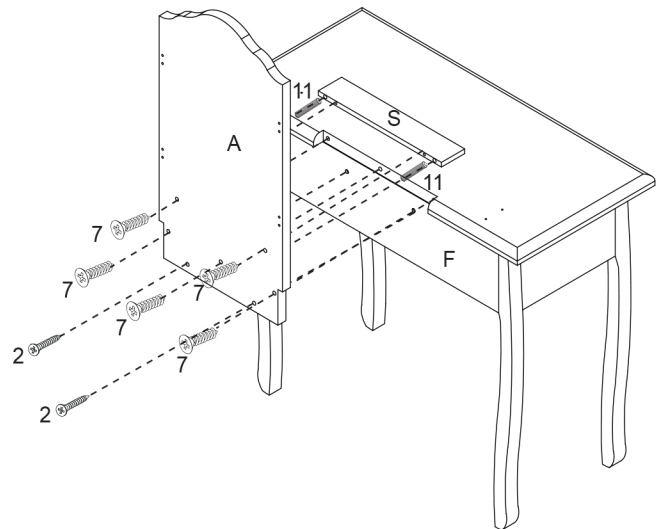



9

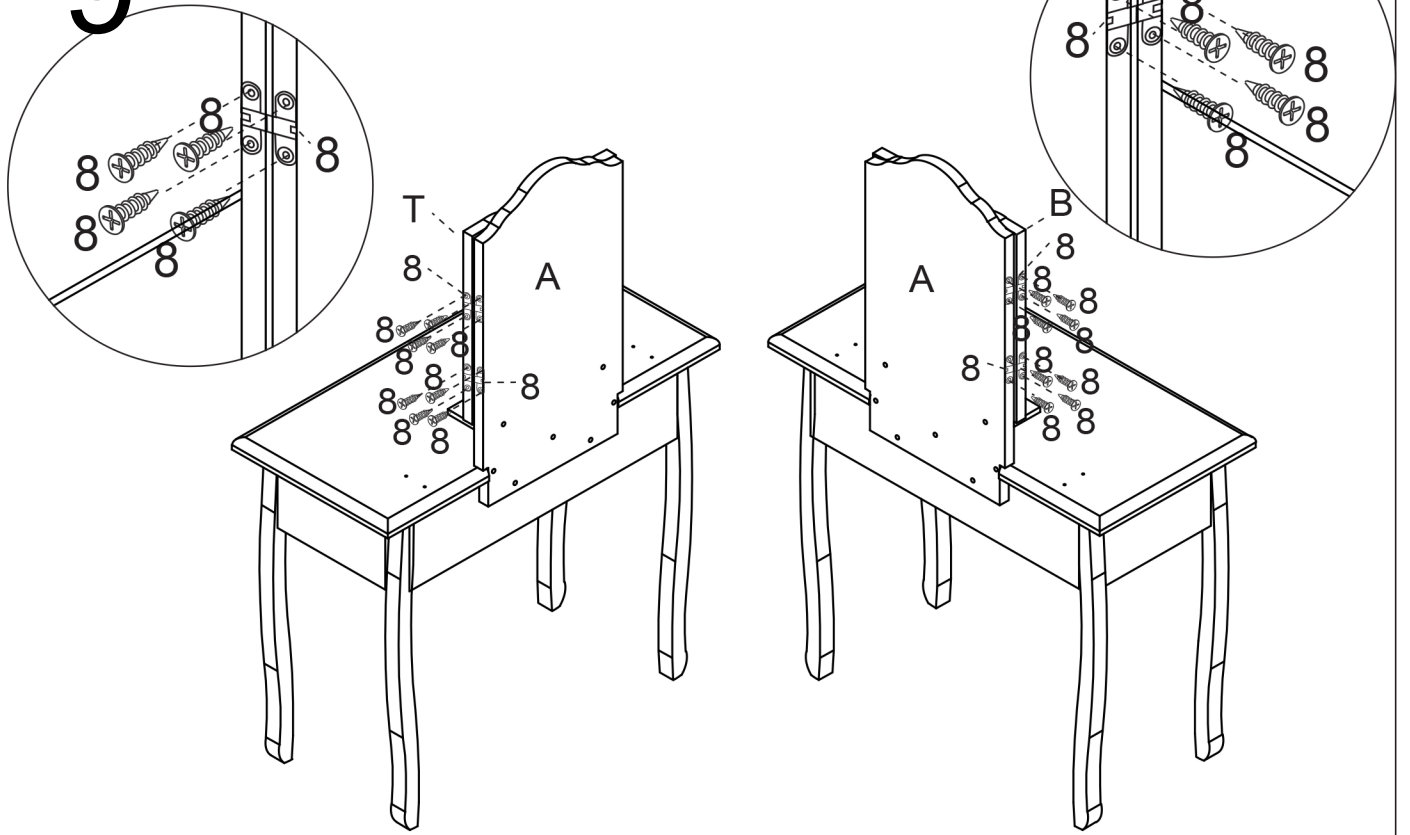



10

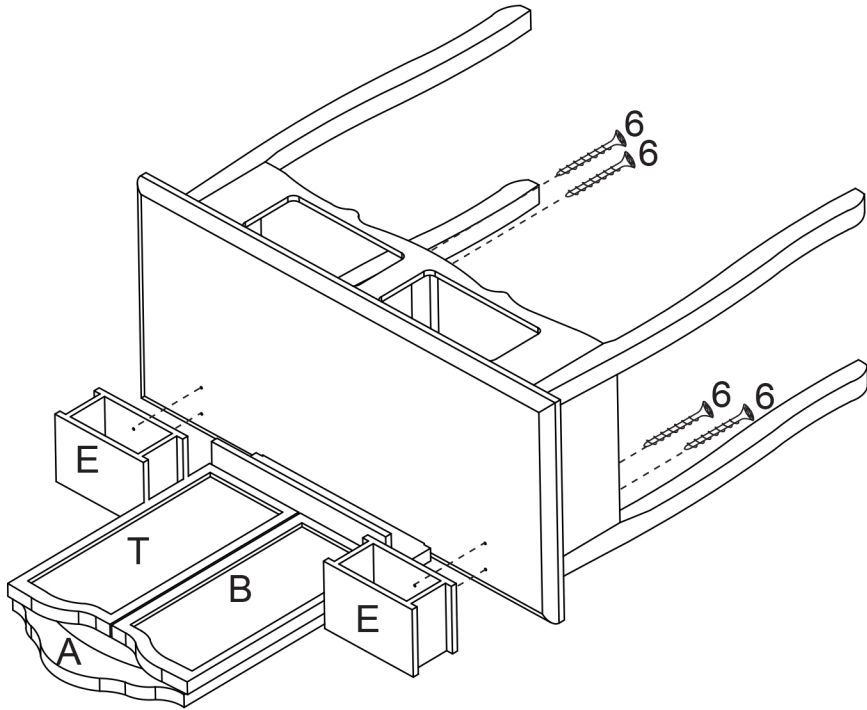


11

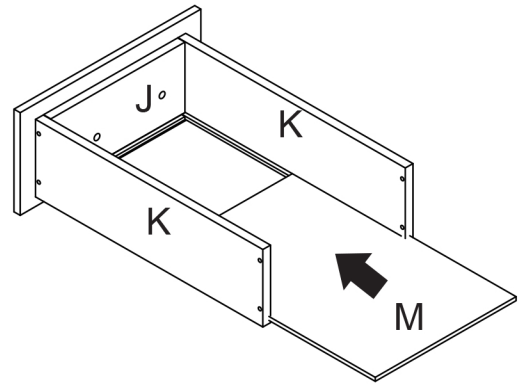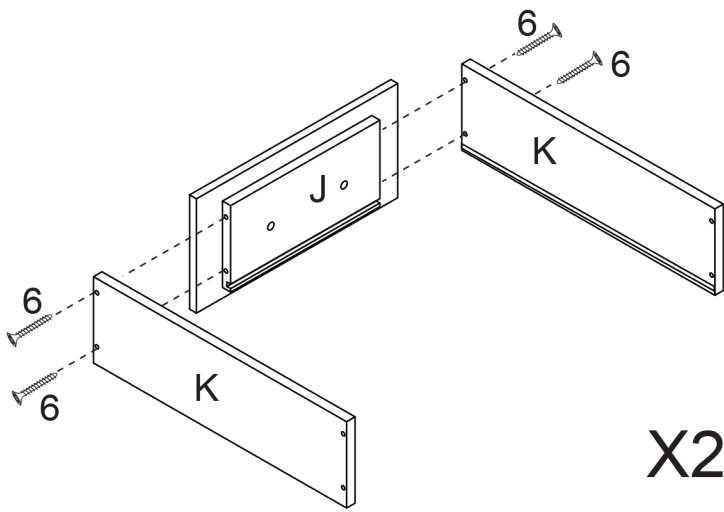


12

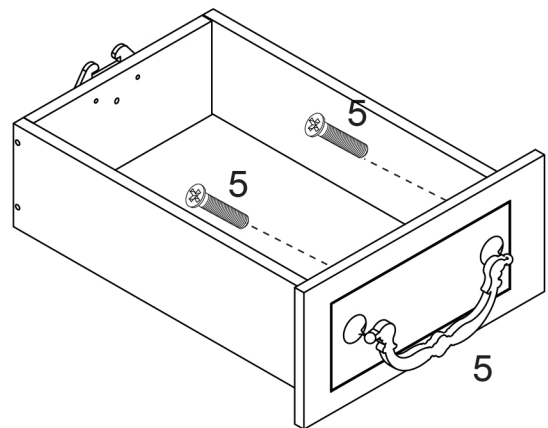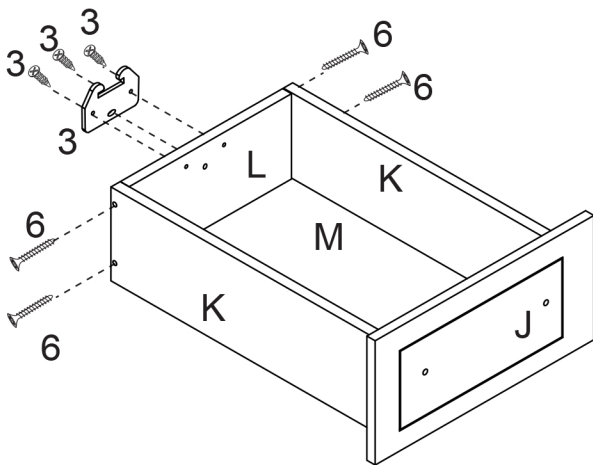


13

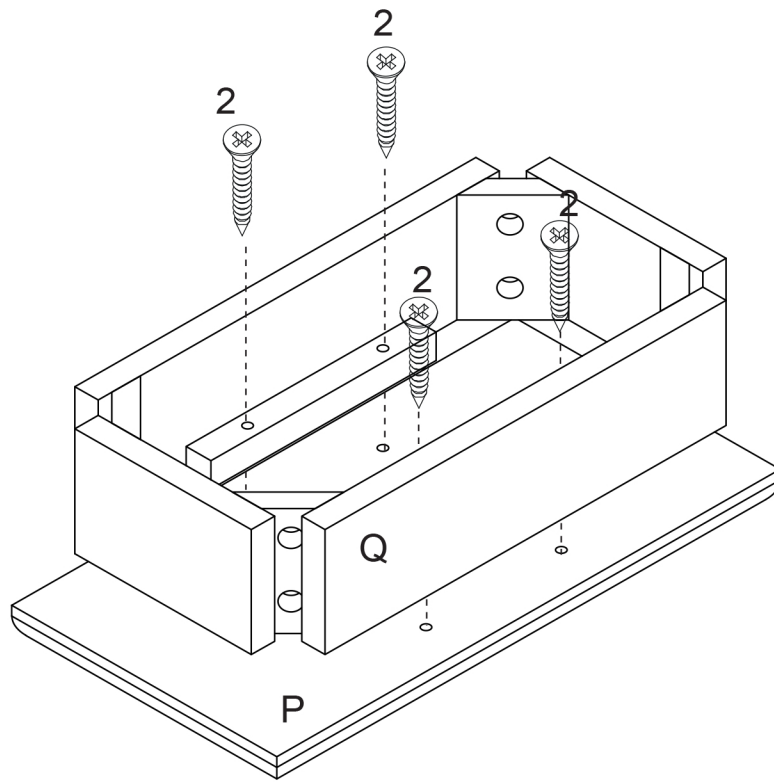

14

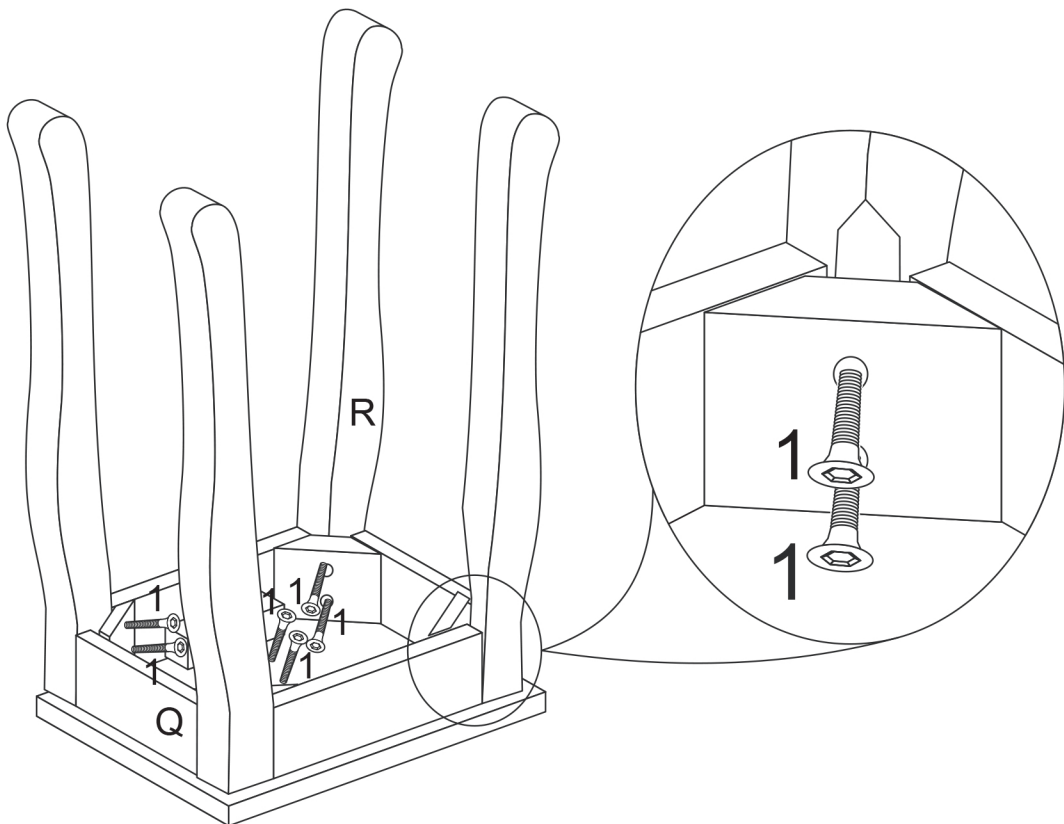

15

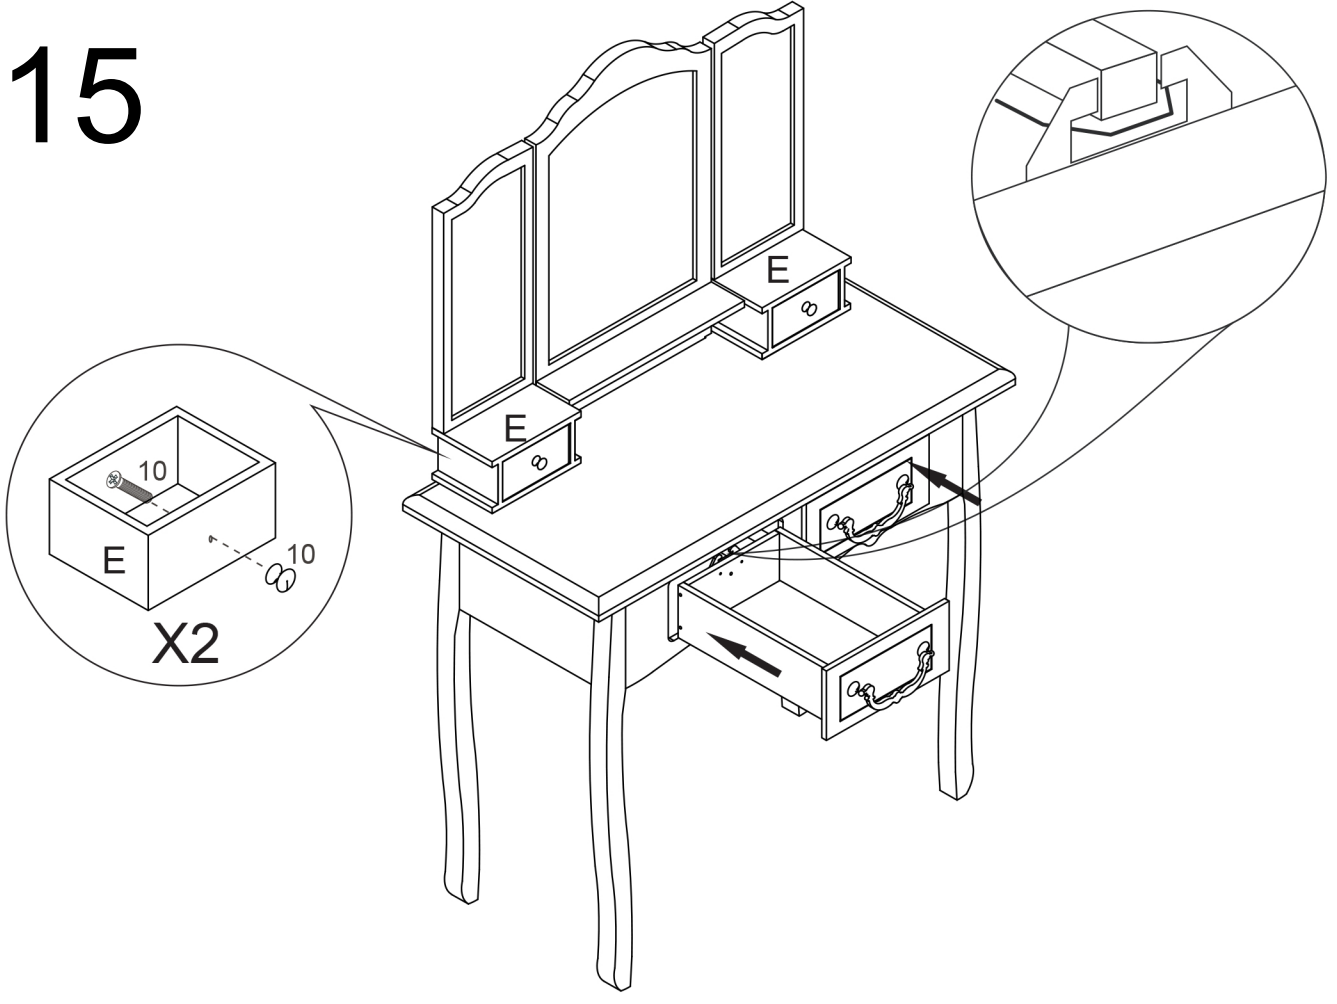

16

